


## 4-26 On the Road

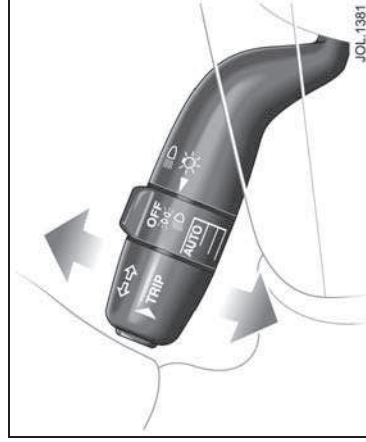

### Direction Indicators

The direction indicators, the left column stalk, operate when the ignition is in position 'II'. Move the stalk up for indicating a right turn or move it down to indicate a left turn.

Two positions are provided. The first position, partly moving the stalk up or down, causes the indicator to flash while it is held in this position. On releasing the stalk the indicators stop flashing.

The second position is a full movement of the stalk up or down, which can then be released. The indicators will remain flashing and will cancel when the turn is completed.

An audible ticking and a flashing green arrow on the instrument cluster indicates that the selected direction indicator is operating.

### Bulb failure

The direction indicators (including those on a trailer, if attached) and side repeaters are monitored for bulb failure. If a bulb fails when it is on, a message is shown in the message centre. At the same time, the corresponding side green warning light will flash at twice the normal rate. The audible ticking will sound at twice the normal rate.

### Door Guard/Puddle Lights

Door guard lights are fitted to each door to give warning of an open door to passing vehicles.

Puddle lights illuminate the 'step out' area at night.

Each light comes on automatically when the door is opened. If the door is left open the lights remain on for 5 minutes and then switch off.

### Approach Lights

Approach lights are fitted in the door mirrors to provide illumination for the floor area around the front doors.

The approach lights come on when:

- The vehicle is unlocked using a key, key transmitter or the central locking switch.
- Using the headlight convenience button on the key transmitter.
- Reverse gear is selected.

The approach lights will not illuminate if the autolamp sensor determines that the ambient light is sufficiently bright.

### Luggage Compartment Lighting

The luggage compartment will be illuminated when the lid is opened.

### Glove Compartment

The glove compartment will be illuminated when the lid is opened.