

Roof Opening Panel Glass (76.82.05)

Removal

Short wheelbase


1 . NOTE:

Make sure the roof opening glass assembly is in the closed position.

NOTE:

Left-hand shown, right-hand similar.

Detach the sight shield at the front of the roof and swing inwards towards the rear of vehicle.

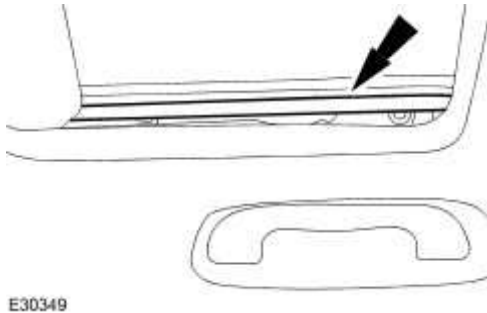

Long wheelbase

2



CAUTION: Make sure the air deflector is only detached from the roof opening panel using the 20mm (0.78 inches) area at the end of the air deflector as defined in step 1 of the illustration and text below. Failure to follow this instruction will result in damage to the component.




CAUTION: Do not pull on the air deflector rubber pleat. Failure to follow this instruction will result in damage to the component.

NOTE:

Right-hand shown, left-hand similar.

Detach the air deflector.

- 1) Detach the rear of the air deflector.
- 2) Detach the air deflector upper retainer.
- 3) Swing the front of the air deflector inwards towards the rear of the vehicle.

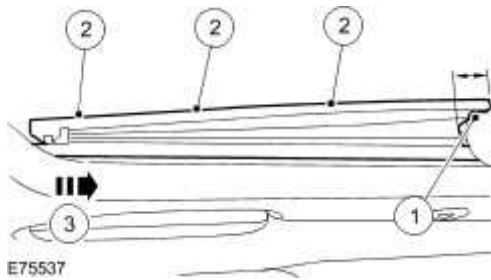


All vehicles

3 . NOTE:

Left-hand shown, right-hand similar.

Remove the roof opening panel glass retaining screws.

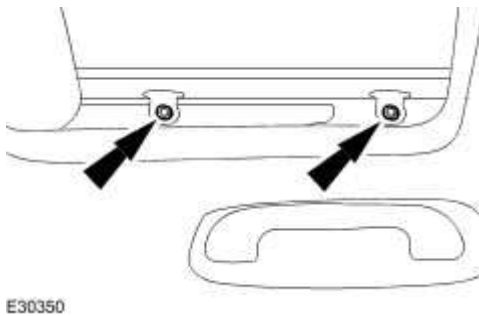


4



CAUTION: Do not operate the roof opening panel when the roof opening glass is removed.


Remove the roof opening panel glass.

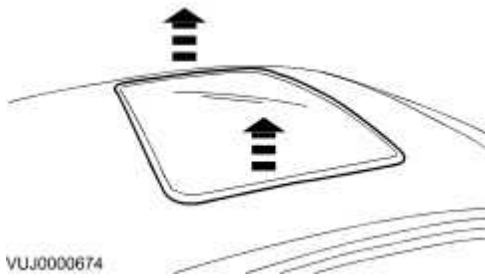


Installation

All vehicles

1. To install, reverse the removal procedure.

 Tighten to 4 Nm.

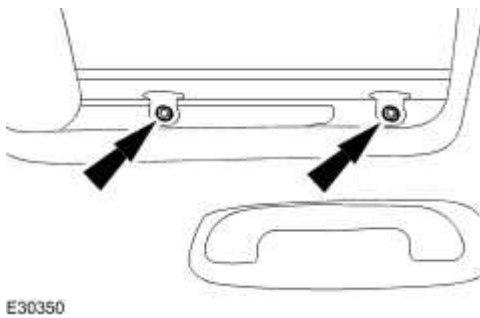


Long wheelbase

2. **NOTE:**

Right-hand shown, left-hand similar.

Reposition the air deflector to the roof opening panel runner.

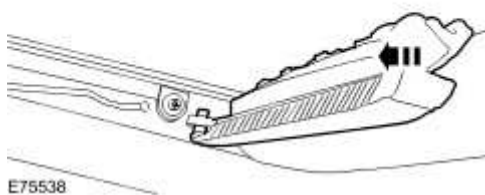


3 . NOTE:

Right-hand shown, left-hand similar.

Install the air deflector.

1) Make sure the air deflector is fully seated to the rear retaining clip.

2) Attach the air deflector upper retainer.

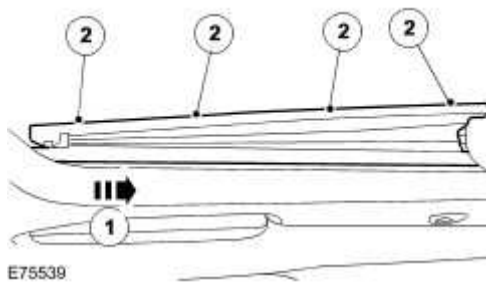


Short wheelbase

4 . NOTE:

Left-hand shown, right-hand similar.

Install the sight shields.

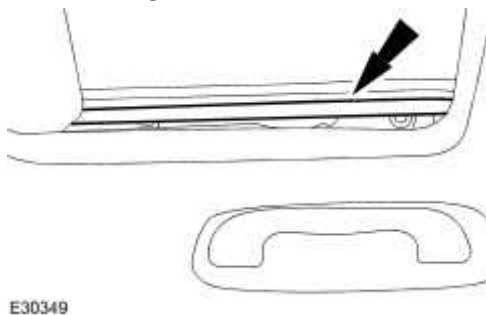

All vehicles

5 . Align the roof opening panel glass.

For additional information, refer to Roof Opening Panel Glass (76.82.05)