

Vehicle : /scan/landRO~1/

Test Path : Jaguar, Vehicle record, JAGUAR, ECM, GEM, Live Data, Front heated seats - variable temperature, All left hand drive, All data

Data list

Luggage compartment lid release switch. Inactive
Both high beam lamps driver output On
Both low beam lamps driver output On
Hood ajar switch Inactive
System battery voltage potential over voltage. No
System battery voltage potential under voltage. No
Battery voltage 14.80 V
Courtesy lamp output 0.00 %
Lighting control input 0.00 %
Control module status Operational mode
Front windshield wiper control mode Off
Front windshield wiper control mode select position and delay interval Position 1
Module reset counter 58493
Number of permanent diagnostic trouble codes 0
Passenger's approach lamp dimmer level 0.00 %
Driver's adjustable seat pedal rearward/forward position. 77
Passenger's door puddle lamp Off
General electronics control module security output Inactive
Switch system power relay driver output On
Ignition tamper sense input status Off
Interior lamp override switch status Inactive
Rear left navigation security input Active
Front left turn signal driver output. Off
Left marker lamp driver output. Off
Panic switch. Inactive
Passenger's door ajar switch Inactive
Passenger's mirror horizontal position sensor 19.22 %
Passenger's mirror vertical position sensor 30.59 %
Pedal forward motor output Inactive
Pedal position forward switch Inactive
Pedal position backward switch Inactive
Pedal backward motor output Inactive

Skriv din text

Audio unit remove switch. Inactive
Powerwash pump control relay. Off
Rear right navigation security input Active
Front right turn signal driver output. Off
Right marker lamp driver output. Off
Front navigation security input Inactive
Valet switch Off
Horn relay Off
Washer fluid low switch OK
Washer pump relay Off
Washer pump switch status Inactive
Flick wipe switch input status Disabled
Windshield wiper is in the park position Yes
Left seat heater output Inactive
Right seat heater output Inactive
Left seat heater thermal sensor 41 °F
Right seat heater thermal sensor 39 °F

=====

Vehicle : /scan/landRO~1/

Test Path : Jaguar, Vehicle record, JAGUAR, ECM, GEM, Live Data, Front heated seats - variable temperature, All left hand drive, All data, DDM, Live Data, Driver's memory seat movement, All data

Data list

System battery voltage potential over voltage. No
System battery voltage potential under voltage. No
Battery voltage 9.25 V
Control module status Operational mode
Last received transmitter identity code value. 0
Module reset counter 1789
Number of permanent diagnostic trouble codes 1
Passenger's approach lamp dimmer level 0.00 %
Driver's door puddle lamp Off
Driver's door module security output Inactive
Driver's door ajar switch No
Driver's door lock status No
Driver's door unlock status. No
Driver's door double lock activated Disabled
Driver's door lock activated Disabled
Driver's mirror horizontal position sensor 13.33 %
Driver's mirror vertical position sensor 29.41 %

Driver's door unlock activated Enabled
Driver's mirror horizontal position sensor Yes
Driver's mirror vertical position sensor Yes
Driver's door window glass inhibit switch Inactive
Memory set LED output driver's door module Disabled
Mirror down switch Inactive
Mirror fold-back switch input Inactive
Mirror left switch Inactive
Mirror right switch Inactive
Mirror up switch Inactive
Mirror left selector switch No
Mirror right selector switch No
Memory set switch input. Inactive
Memory set/recall switch 2 Inactive

=====

Vehicle : /scan/landRO~1/

Test Path : Jaguar, Vehicle record, JAGUAR, ECM, GEM, Live Data, Front heated seats - variable temperature, All left hand drive, All data, DDM, Live Data, Driver's memory seat movement, All data, DSM, Live Data, All data

Data list

System battery voltage potential over voltage. No
System battery voltage potential under voltage. No
Driver's seat cushion extend position 10.98 %
Driver's seat front vertical position. 45.49 %
Driver's seat horizontal position. 25.10 %
Driver's seat head restraint position 10.98 %
Driver's seat recline position. 50.59 %
Driver's seat vertical position 71.37 %
Battery voltage 14.70 V
Control module status Operational mode
Number of permanent diagnostic trouble codes 0
Module reset counter 2570
Seat cushion extend switch Inactive
Seat cushion retract switch Inactive
Seat front height down switch input Inactive
Seat front height up switch input Inactive
Seat forward switch Inactive
Seat incline switch Inactive
Seat recline switch Inactive
Seat backward switch Inactive

Seat height down switch input Inactive
Seat height up switch input Inactive
Head restraint down switch Inactive
Head restraint up switch Inactive

=====

Vehicle : /scan/landRO~1/

Test Path : Jaguar, Vehicle record, JAGUAR, ECM, GEM, Live Data, Front heated seats - variable temperature, All left hand drive, All data, DDM, Live Data, Driver's memory seat movement, All data, DSM, Live Data, All data, REM, Live Data, Interior scanning alarm, Inclination sensor not fitted, Rear heated seats - variable temperature, All data

Data list

Driver's door module security input Active
Luggage compartment lid locking status Active
Luggage compartment lid lock No
Luggage compartment lid lock status Active
Luggage compartment lid unlock No
Luggage compartment lid unlock Inactive
Diagonal door double lock output. Disabled
Diagonal door lock output. Disabled
Diagonal door unlock output. Disabled
Exterior luggage compartment release Inactive
Fuel filler door release No
Fuel level 1 34.90 %
Fuel level 2 40.78 %
Left and high mounted stoplamps output Off
License plate lamp De-energise
Rear left puddle lamp Off
Passive sounder output Off
Passenger's rear door lock drive output No
Passenger's rear door unlock drive output No
Passenger's rear door double lock output No
Reverse lamps De-energise
System battery voltage potential over voltage. No
System battery voltage potential under voltage. No
Battery voltage 14.80 V
Brake pedal switch Inactive
Courtesy lamp output 0.00 %
Luggage compartment lid ajar No
Fuel pump duty cycle 2 to the rear electronics control module 0.00 %
Fuel pump duty cycle to the rear electronic module 0.00 %

Control module status Operational mode
Inertia switch Active
Left marker lamp driver output status. Off
Rear left turn signal driver output status. Off
Left tail lamp driver output status. Off
Left tail lamp driver output short to battery No
Module reset counter 11
Mute status Active
Number of permanent diagnostic trouble codes 6
Passenger's door lock latch status Active
Passenger's door unlock latch status Inactive
Rear fog lamps. De-energise
Right marker lamp driver output status Off
Rear right turn signal driver output status. Off
Right tail lamp driver output status. Off
Right tail lamp driver output short to battery No
Switch system power relay driver output On
Trailer attached No
Right stoplamp output Off
Rear right puddle lamp Off
General electronics control module security input Active
Driver's rear door ajar switch No
Passenger's rear door ajar switch No
Intrusion sensor power output Off
Intrusion sensors Inactive
Left seat heater output Inactive
Right seat heater output Inactive
Left seat heater thermal sensor 39 °F
Left seat heater temperature switch input -40 °F
Right seat heater thermal sensor 39 °F
Right seat heater temperature switch input -40 °F

=====

Vehicle : /scan/landRO~1/

Test Path : Jaguar, Vehicle record, JAGUAR, ECM, GEM, Live Data, Front heated seats - variable temperature, All left hand drive, All data, DDM, Live Data, Driver's memory seat movement, All data, DSM, Live Data, All data, REM, Live Data, Interior scanning alarm, Inclination sensor not fitted, Rear heated seats - variable temperature, All data, RSM , Seat control program - rear, Live Data, All data

Data list

Rear left memory set/recall switch 1. Inactive

Rear left memory set/recall switch 2. Inactive
Rear left memory set/recall switch 3. Inactive
Rear left memory set switch input. Inactive
Rear left memory set LED output. Disabled
Rear left head restraint position. 27.45 %
Rear left seat incline switch. Inactive
Rear left seat recline position. 2.75 %
Rear left seat recline switch. Inactive
Rear left head restraint down switch. Inactive
Rear left head restraint up switch. Inactive
Rear right memory set/recall switch 1. Inactive
Rear right memory set/recall switch 2. Inactive
Rear right memory set/recall switch 3. Inactive
Rear right memory set switch input. Inactive
Rear right memory set LED output. Disabled
Rear right head restraint position. 10.20 %
Rear right seat incline switch. Inactive
Rear right seat recline position. 5.10 %
Rear right seat recline switch. Inactive
Rear right head restraint down switch. Inactive
Rear right head restraint up switch. Inactive
System battery voltage potential over voltage. No
System battery voltage potential under voltage. No
Battery voltage 14.70 V
Control module status Operational mode
Module reset counter 4507
Number of permanent diagnostic trouble codes 0