



The head lamp and the tail lamp assemblies are fitted to the body apertures using nuts, screws and washers, whereas all remaining exterior lights are clipped in to their respective positions. Before removing the headlamp assemblies, remove the radiator grill followed by the headlamp rim finisher. All the vehicles exterior lamp bulbs are listed in Section 15.9.2.

Note: Each newly positioned head lamp unit, is to be realigned.

Key to Fig. 1, Exterior Lighting, page 36.

SRO	Exterior Lighting	Number
86.40.53	Rear side marker lamp (Where fitted)	1
86.40.64	Side repeater lamp	2
86.40.53	Front side marker lamp assembly (Where fitted)	3
86.40.74	Tail lamp assembly	
86.40.67	Bulb holder incorporates: Rear indicators Reverse lights Brake/side lights Rear side lights Rear fog lamp	4 & 8 5 & 7 9 & 14 10 & 13 11 & 12
86.40.86	Number plate lamp assembly	6
86.40.19	Headlamp assemblies	
86.40.01	Headlamp rim finisher	
86.40.14	Outboard headlamp unit	15 & 22
86.40.13	Inboard headlamp unit	18 & 19
86.40.39	Front indicator assembly, Right-hand	17
86.40.42	Front indicator assembly, Left-hand	20
86.40.96	Front fog lamps	16 & 21
86.41.01	High level stop lamp assembly	23

15.9.2 Exterior Lighting Bulbs

SRO	Bulbs
86.40.27	Front side lamp bulb
86.40.41	Front indicator bulb
86.40.52	Front indicator repeater bulb
86.40.73	Tail lamp bulbs
86.40.85	Number plate bulbs
86.40.94	Front fog lamp bulb
86.41.02	High level stop lamp bulb
86.40.14	Outboard headlamp unit bulb
86.40.13	Inboard headlamp unit bulb
86.40.62	Rear indicator repeater lamp bulb

Note: For bulb specification see Appendix A1