



A5.9.1 Central locking switch

1. Check continuity from 22-way multi-plug pin 19 to ground, open circuit should be recorded.
2. Operate switch and check that short circuit to ground is now present.
3. Check wiring continuity from 22-way multi-plug pin 19 to switch connector pin 3.
4. Check wiring continuity from switch connector pin 1 to ground.

Note: If switch is faulty the whole clock module must be renewed; refer to sub-section 15.9.10.

A5

