
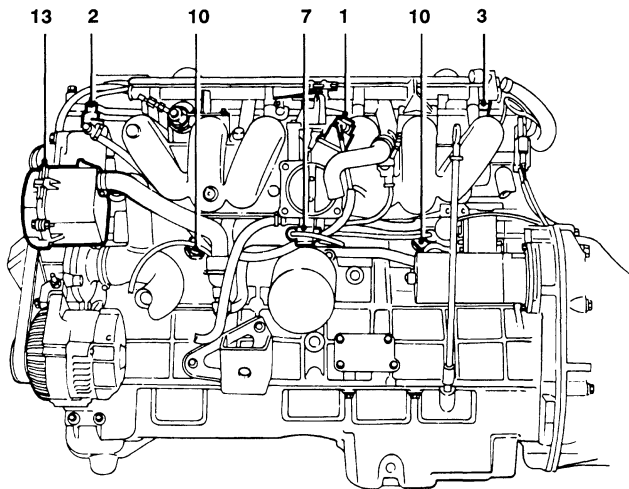
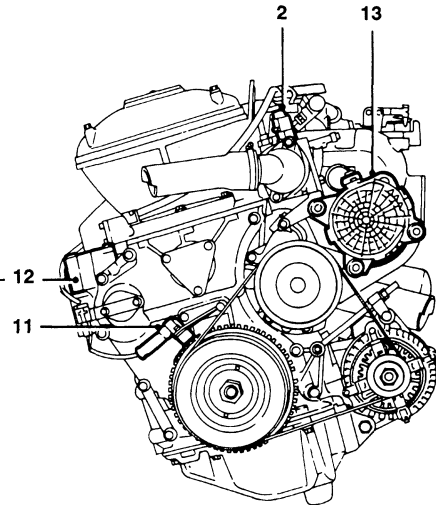
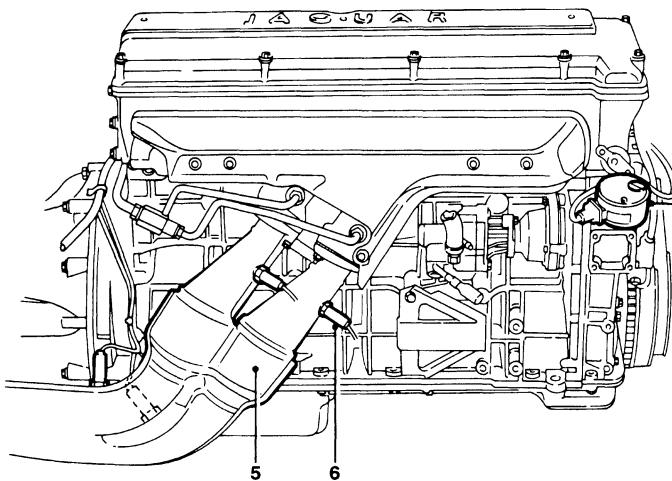


**EMS COMPONENT LOCATION**

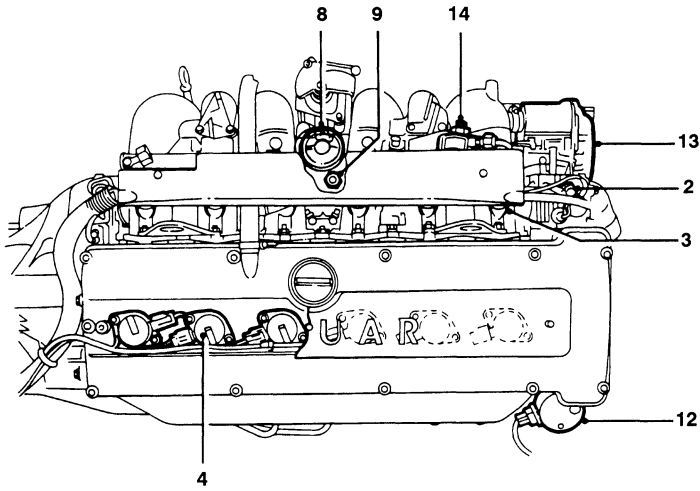

- 1 Idle Speed Control Valve (ISC)
- 2 Coolant Temperature Sensor (ECT)
- 3 Injector (FI)
- 4 Spark Plugs and Ignition Coils
- 5 Catalyst
- 6 Heated Oxygen Sensors (HO2S)
- 7 Throttle Potentiometer (TP)
- 8 Exhaust Gas Recirculation Valve (EGR)
- 9 EGR Function Sensor
- 10 Knock Sensor (KS)
- 11 Crankshaft Position Sensor (CKP)
- 12 Engine Position Sensor (CMP)
- 13 Secondary Air Injection System (AIR)
- 14 Fuel Pressure Regulator

J18-235