



	Connector	O2 sensor
Heater - Neg.	Blue/Pink	White
Sensor signal	Blue (A Bank) Red (B Bank)	Black
Sensor - Neg	Blue/Purple	Yellow
Heater - 12v Ign	White/Green	Red

P127, P1105-8 5V Supply from ECU (Passes through resistor)
 2, P1105-12 Red - Feedback (0-1/4-7v) ←
 3, P1104-4 Earth Heaters }
 4, Ign 12v. }