

# Catalytic Converter Gasket LH Vehicles Without: Supercharger 17.50.06 Removal

- 1. Open the engine compartment and fit paintwork protection sheets.
- 2. Remove the front muffler; refer to Operation <<30.10.18>> in this section.

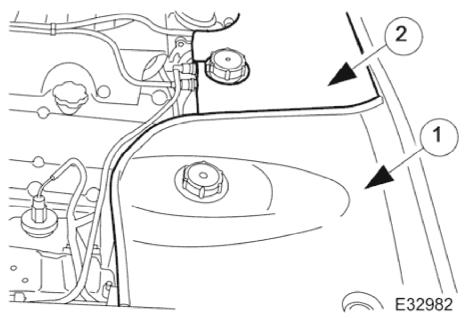


- 3. Remove the centre trim panel from the engine compartment.
  - 1. Remove the left hand side enclosure panel.
  - 2. Remove the centre trim panel.

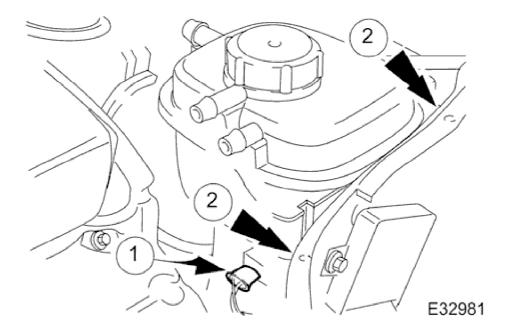

2011-05-20

- 4. Reposition the expansion tank from the mounting.
  - 1. Disconnect the coolant level sensor connector.
  - 2. Remove the nuts which secures the tank.

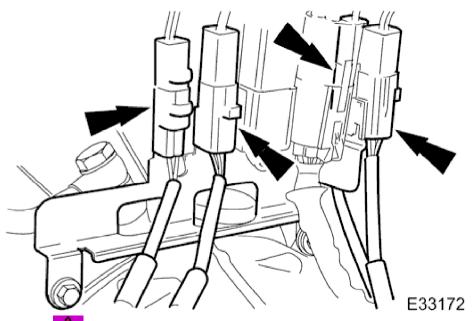


5. CAUTION:

Note the position of the upstream and downstream (where fitted) oxygen sensor multiplugs for reassembly.


Disconnect the oxygen sensor multiplugs.

- Release the multiplugs from the engine mounting bracket.
- Disconnect the plug(s) from the oxygen sensor(s)

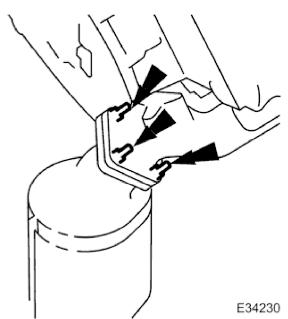

6. Remove the four nuts which secure the downpipe catalytic converter to the exhaust manifold.

7. Raise the vehicle on a ramp.

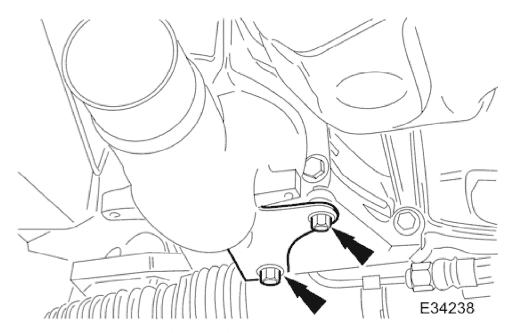


- 8. Remove the downpipe catalytic converter.
  - Remove the bolts which secure the downpipe lower mounting bracket.
  - Remove the downpipe assembly.
- 9. Remove gasket from the manifold flange.
  - Clean and inspect the manifold joint faces.
  - Clean and inspect the threads on the downpipe studs.

#### Installation


1. Fit a new gasket to the manifold mating flange on the downpipe.

3


2011-05-20

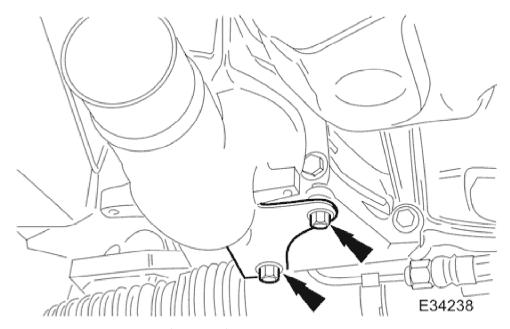


- 2. Fit the downpipe catalytic converter.
  - Fit the downpipe assembly to the manifold
  - Fit, but do not fully tighten, the mounting bracket securing bolts. (Leave loose until the nuts securing the downpipe to the exhaust manifold are fitted.)
- 3. Lower the ramp.

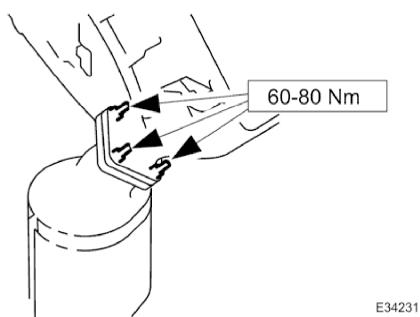


4. Tighten the nuts securing the downpipe flange to the manifold flange.

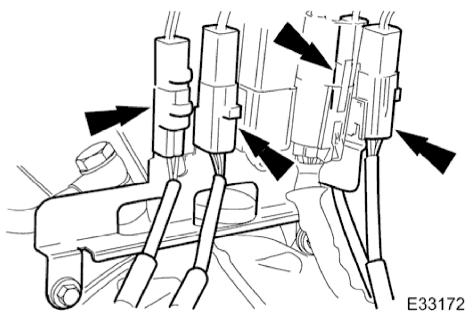


- 5. Connect the oxygen sensor multiplugs.
  - Connect the plug(s) to the respective (previously noted) sensor(s).
  - Correctly position the multiplugs on the mounting bracket.

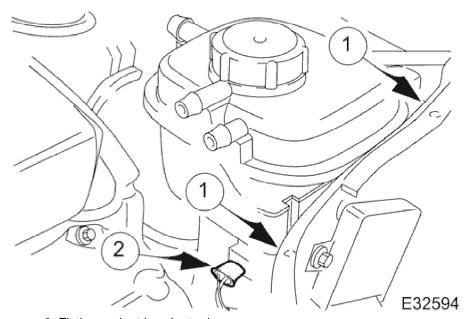

- 6. Fit the coolant header tank.
  - 1. Reposition the tank and fit the securing nuts.
  - 2. Connect the harness connector

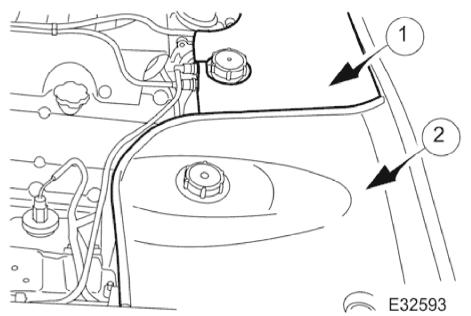

- 7. Refit the centre trim panel and the left hand enclosure panel to the engine compartment.
  - 1. Refit the centre trim panel.
  - 2. Refit the left hand enclosure panel.
- 8. Raise the ramp.

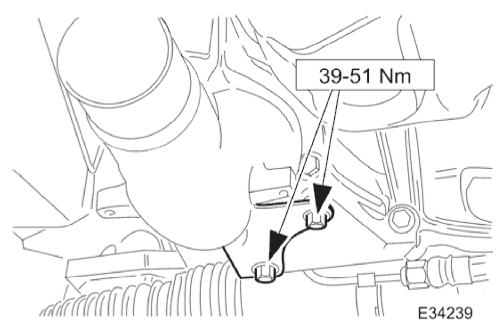

- 9. Tighten the mounting bracket securing bolts.
- 10. Fit the front muffler; refer to Operation <<**30.10.18>>**.
- 11. Lower the ramp.

12. Remove the paintwork protection sheets and close the engine cover.