


Headliner 76.64.01


Removal

- 1. Remove the sun visors. For additional information, refer to <<Sun Visor>>.

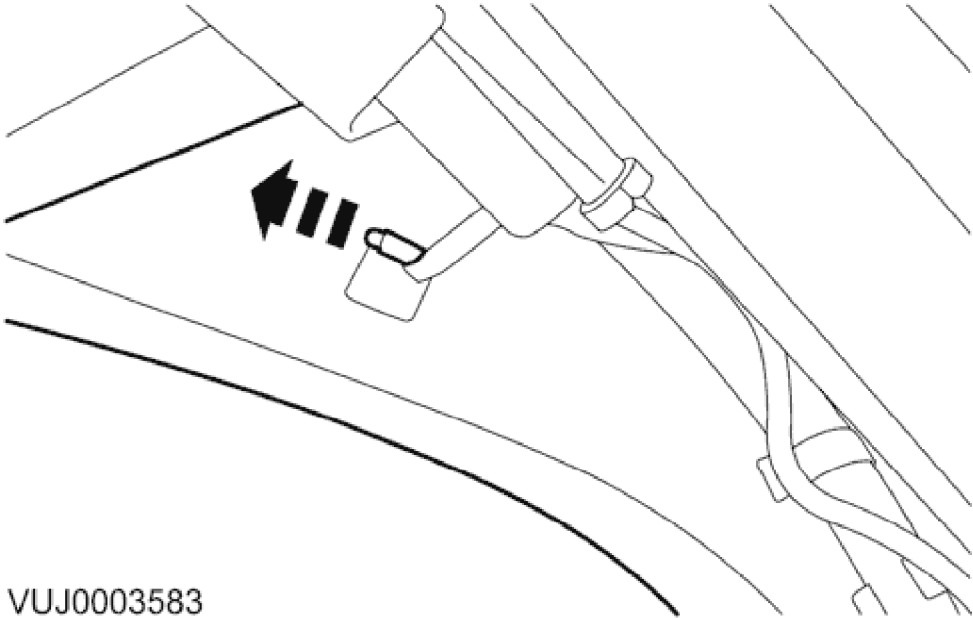

VUJ0003583


- 2. Remove the C-pillar trim panels.

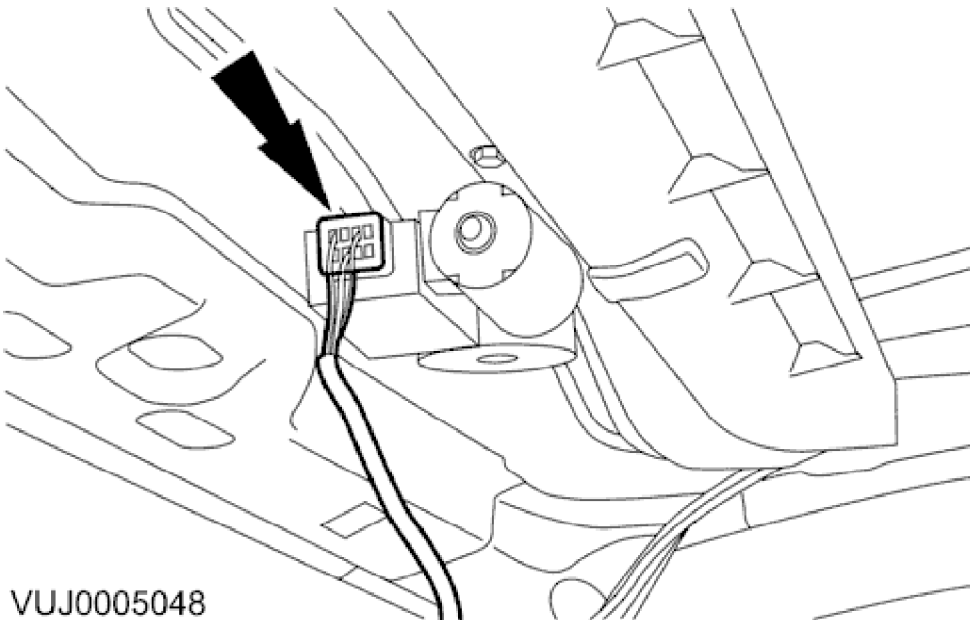

VUJ0005048


- 3. Disconnect the sunroof motor electrical connector.

2004.25 X-TYPE - Interior Trim and Ornamentation - 501-05

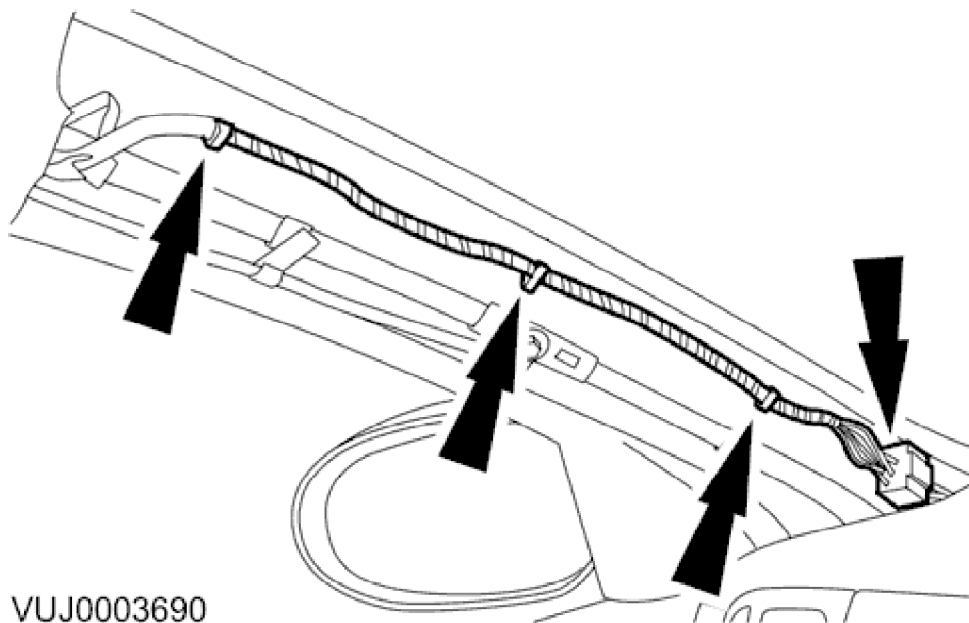

VUJ0003690

4. Disconnect the left-hand electrical connector and detach the wiring harness.

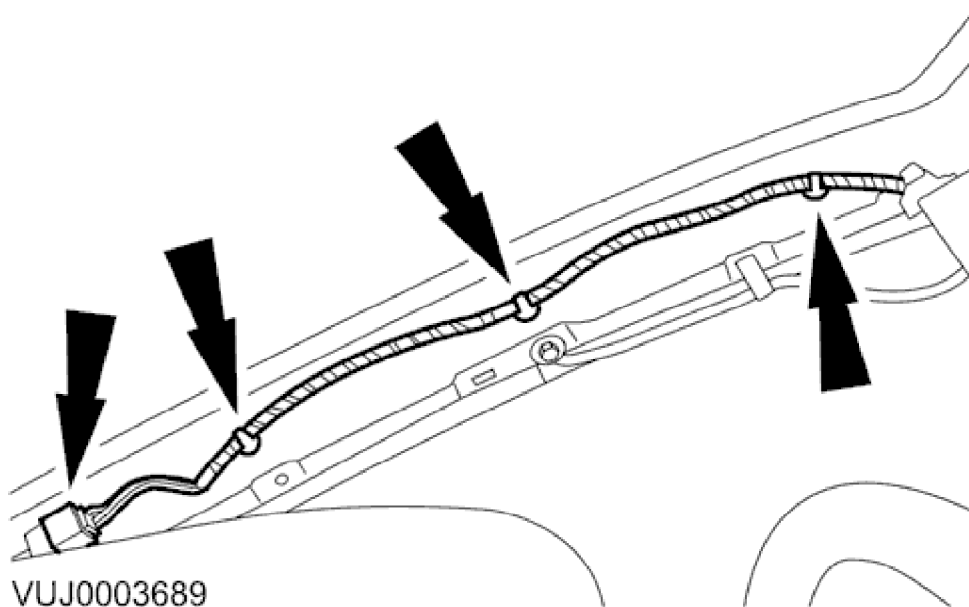


VUJ0003689

5. Disconnect the right-hand electrical connector and detach the wiring harness.

6. Remove the RH lower B-pillar trim panel. For additional information, refer to <<**B-Pillar Trim Panel—Lower**>>.

7. Remove the rear seat cushion. For additional information, refer to <<**501-10**>>.

8. Recline both the front seat backrests to allow removal of the headliner through the rear door opening.

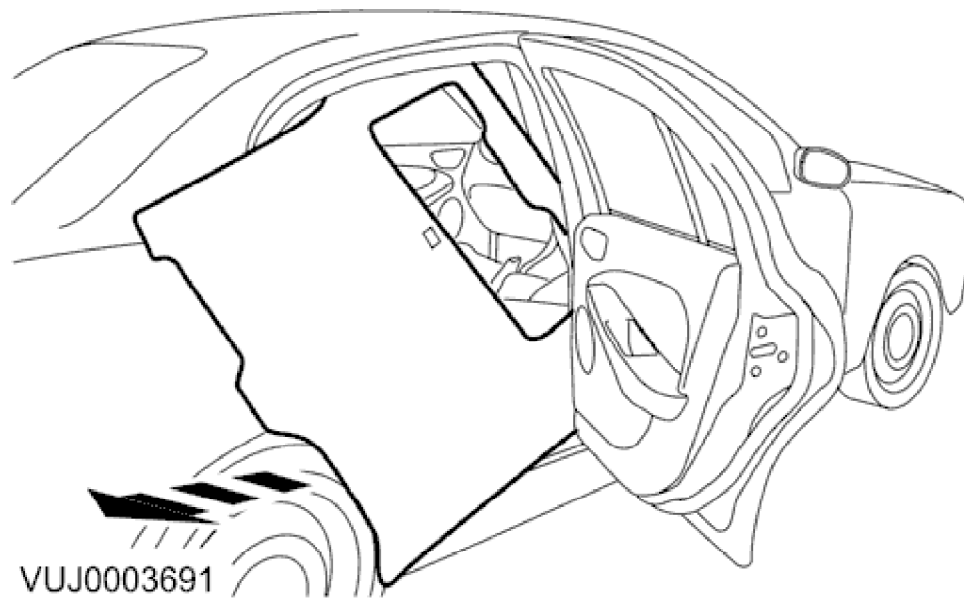

9. Remove the headliner.

Installation

1. To install, reverse the removal procedure.