


Rear Seat Cushion 76.70.37

Removal

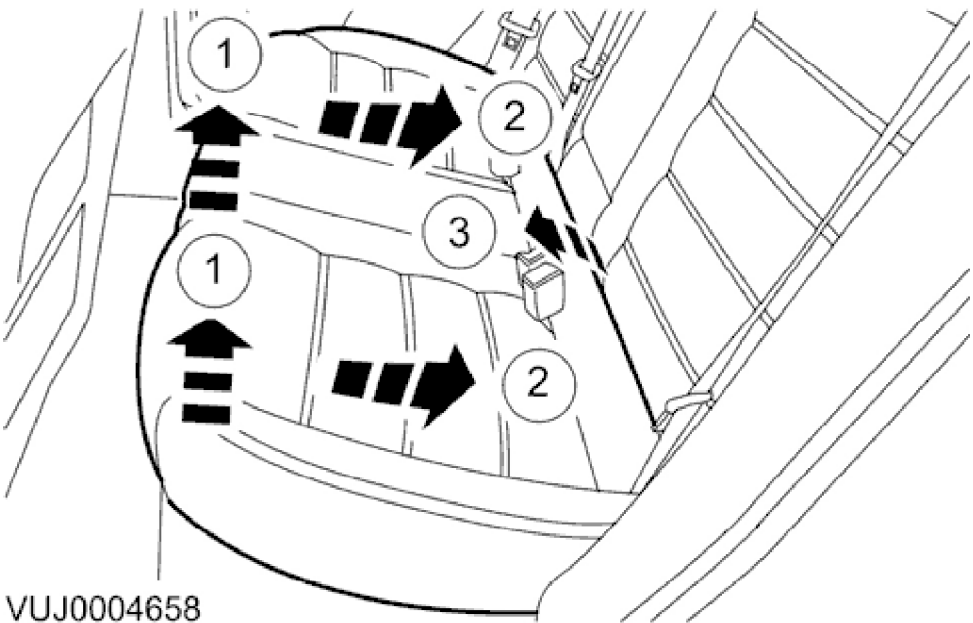

1. **NOTE:**
Remove and discard old retaining clips.

Remove the rear seat cushion.
1. Detach the rear seat cushion front retaining clips.
2. Slide the rear seat cushion out of the retaining hooks.
3. Remove the rear seat cushion.

Installation

1. **NOTE:**
Make sure the safety belt buckles are located through the cushion.


NOTE:
Install new seat cushion front retaining clips

To install, reverse the removal procedure.


Rear Seat Backrest 76.70.38

Removal

1. Remove the rear seat cushion. For additional information, refer to <<Rear Seat Cushion>>.

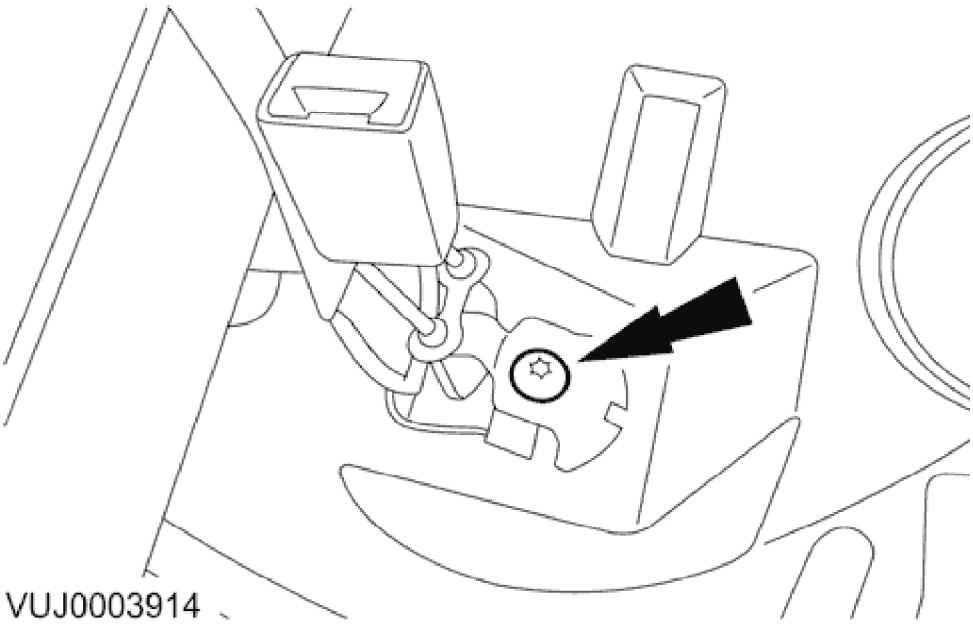


2. Remove the rear center safety belt and buckle.
• Remove the retaining bolt.

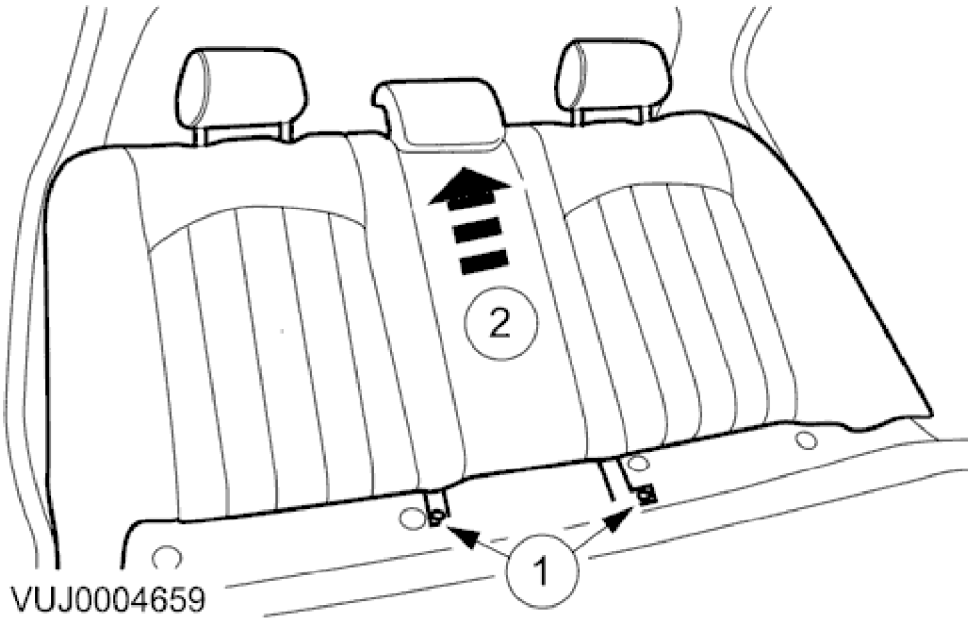


3. Remove the rear seat backrest.
1. Remove the retaining bolts.
2. Remove the rear seat backrest.

Installation

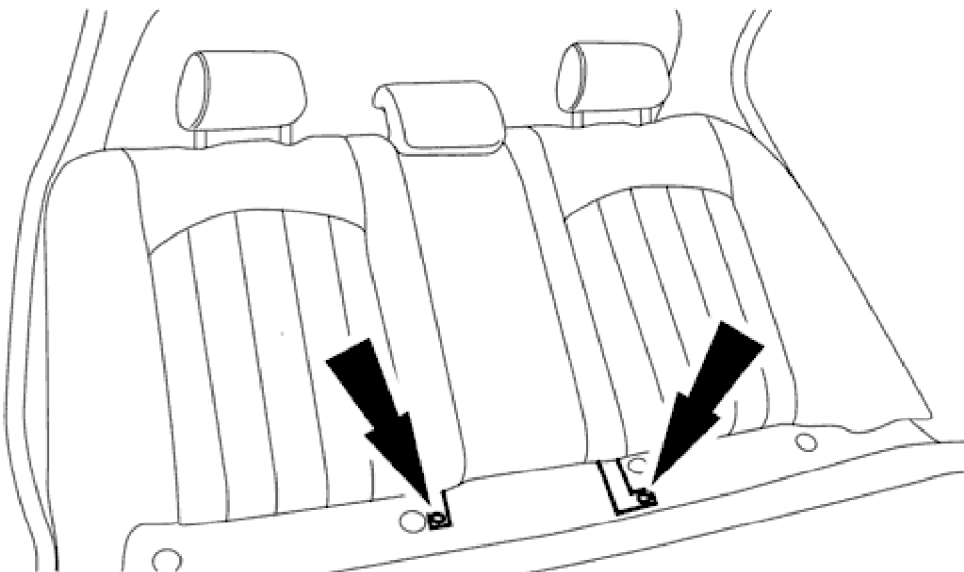

VUJ0004767

- 1. To install, reverse the removal procedure.
- Tighten to 55 Nm.

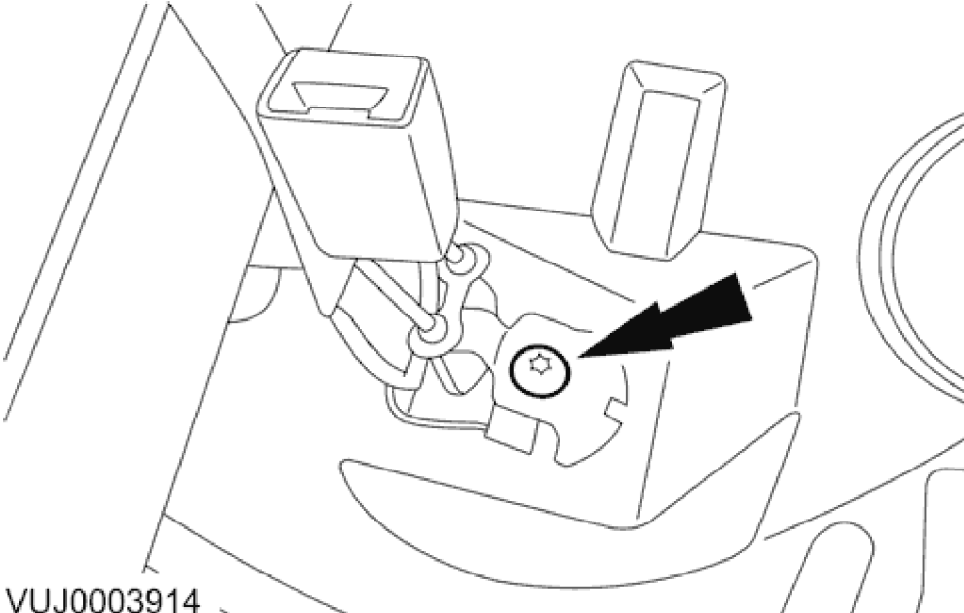

VUJ0003914

- 2. Tighten to 55 Nm.