Parking Brake Shoes 70.40.05

Removal

WARNING:


BRAKE DUST, IF INHALED CAN DAMAGE YOUR HEALTH. ALWAYS REMOVE BRAKE DUST USING A VACUUM BRUSH. DO NOT USE A COMPRESSED-AIR LINE TO DISPERSE BRAKE DUST INTO THE ATMOSPHERE.



CAUTION:

Replacement of nuts and bolts: Various thread-locking devices are used on nuts and bolts throughout the vehicle. These devices restrict the number of times a nut or bolt can be used. See section <<100-00>> for information.


- 1. Raise rear of vehicle and support on stands. Refer to section <<100-02>>.
- 2. Remove both rear wheels.
- 3. Remove both rear brake discs. Refer to operation 70.10.13.

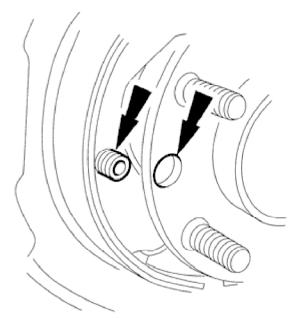

E35192


1

- 4. Remove front shoe retaining pin.
 - Align hub access hole with retaining pin.
 - Turn pin until it releases from backing plate.

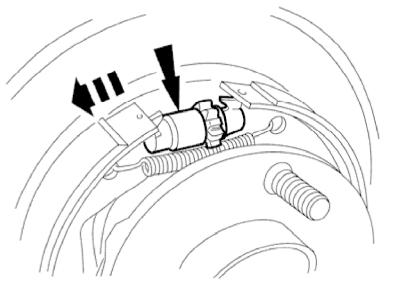


E35193

- 5. Remove adjuster assembly.
 - Move front shoe forwards.
 - Remove adjuster assembly.

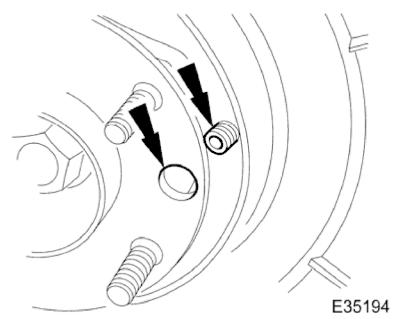


- 6. Remove rear shoe retaining pin.
 - Align hub access hole with retaining pin.
 - Turn pin until it releases from backing plate.
- 7. Remove brake shoes from parking brake lever-mechanism and remove shoes from vehicle.

2

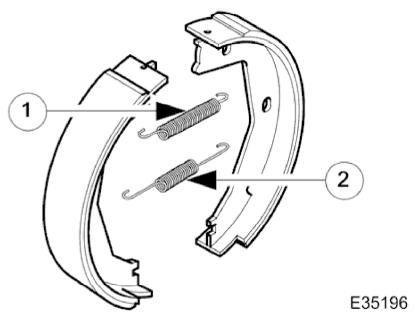

- 8. Remove return springs from shoes.
 - 1. Remove upper return spring.
 - 2. Remove lower return spring.
- 9. Remove brake dust and clean components, see WARNING above.
- 10. Repeat procedure to remove parking brake shoes on opposite side of vehicle.


Installation

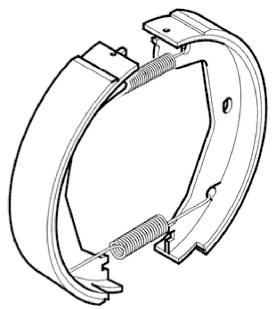

E35195

- 1. Install brake shoes to vehicle.
 - Install brake shoes to parking brake lever-mechanism in the arrangement shown.

3 2011-06-24

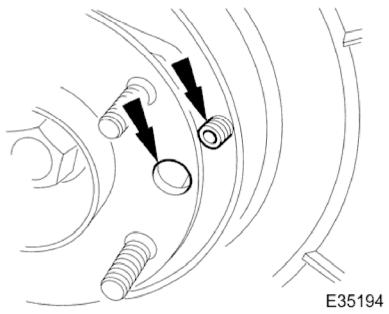


2. **NOTE:**

Make sure retaining pin is seated correctly in backing plate.


Install rear shoe retaining pin.

- Align hub access hole.
- Install retaining pin.

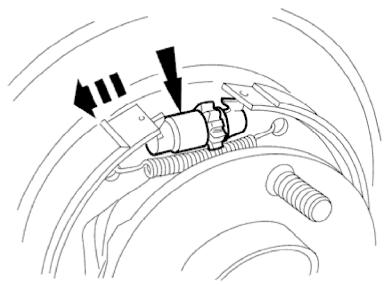

E35193

- 3. Install adjuster assembly.
 - Lubricate adjuster mechanism with appropriate grease.
 - Move front shoe forwards.
 - Install adjuster assembly.

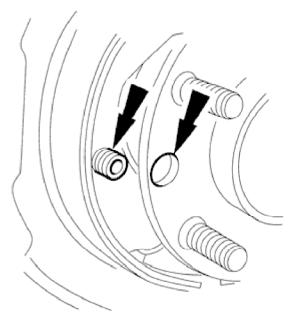

E35192

5

4. **NOTE:**

Make sure retaining pin is seated correctly in backing plate.

Install front shoe retaining pin.

- Align hub access hole.
- Install retaining pin.
- 5. Make sure brake shoes are seated correctly in adjuster and lever mechanism.
- 6. Repeat procedure to install parking brake shoes on opposite side of vehicle.
- 7. Install both rear brake discs. Refer to operation 70.10.13.
- 8. Set parking brake. Refer to operation <<70.35.37>>.
- 9. Fit rear wheels. See section <<204-04>>.
- 10. Remove stands and lower vehicle.