


Instrument Panel Dimmer Switch 86.65.07

Removal

1. Move driver seat fully rearward.
2. Disconnect battery ground lead; refer to <<86.15.19>>.
3. Displace lower cowl for access; refer to <<76.46.03>>.

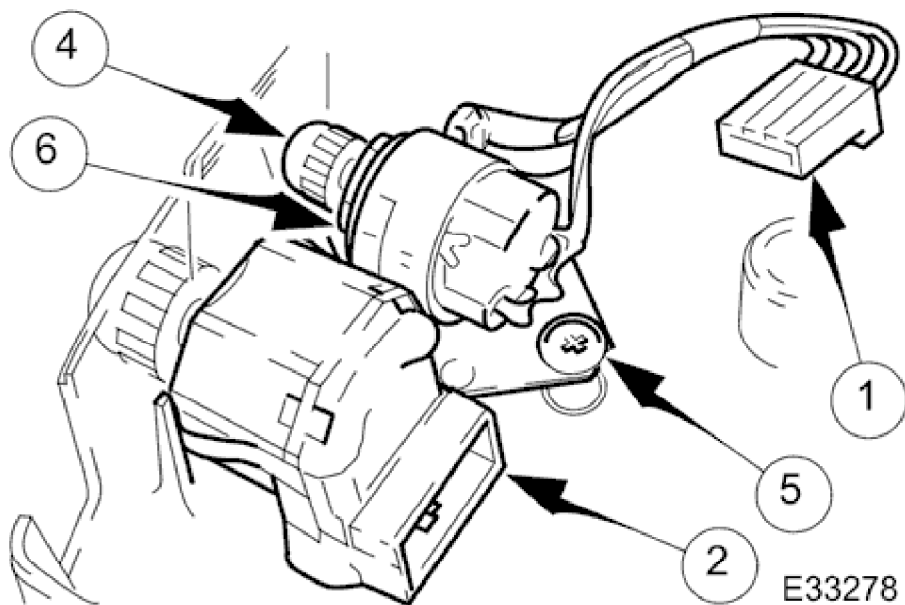

4. Remove rheostat switch from cowl.
 1. Disconnect dimmer module to rheostat switch connector.
 2. Disconnect column tilt switch connector.
 3. Remove lower cowl.
 4. Pull adjusting knob from switch.
 5. Remove screw.
 6. Remove switch.

Installation

1. Installation is reverse of removal.
2. Reconnect battery ground lead; refer to <<86.15.15>>.