



## Heated Oxygen Sensor (HO2S) RH 18.30.78

Snap-on tool S6176

### Removal

1. Disconnect battery ground cable (IMPORTANT, see SRO <<86.15.19>> for further information).

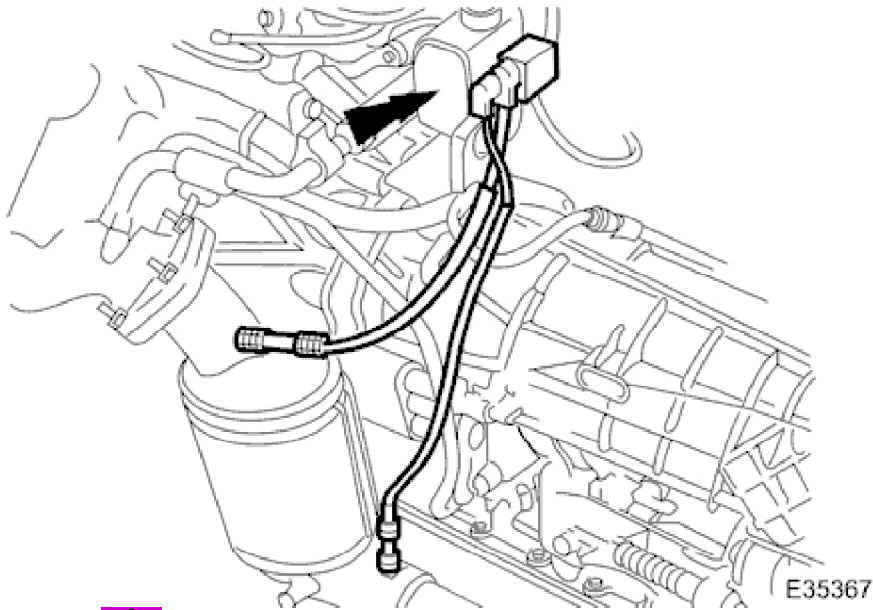


2.  **CAUTION:**  
Make sure the wiring harness is not twisted or damaged on removal. Failure to follow this instruction may result in damage to the vehicle.

#### **NOTE:**


Left-hand shown, right-hand similar.

Release sensor connector from mounting bracket and disconnect.

3. Remove front muffler; refer to <<30.10.18>>.

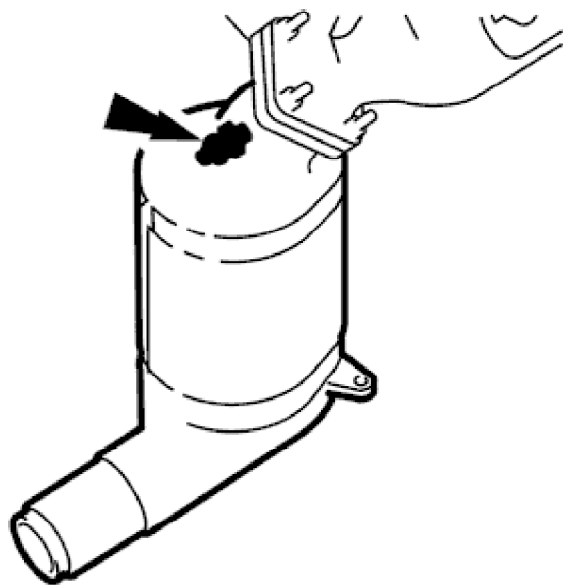


E34240

4.  **CAUTION:**  
Make sure the wiring harness is not twisted or damaged on removal. Failure to follow this instruction may result in damage to the vehicle.

Remove sensor.

**Installation**

1. Installation is a reversal of the removal procedure.

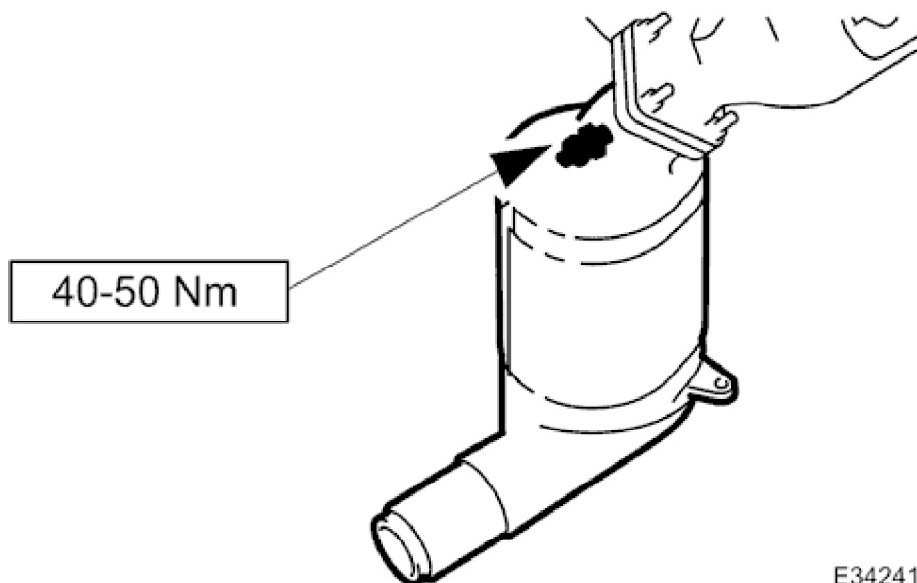

E34241

2.  **CAUTION:**  
Make sure the wiring harness is not twisted or damaged on removal. Failure to follow this

## 1998 XJ RANGE - Electronic Engine Controls - 303-14

**instruction may result in damage to the vehicle.**

Tighten the sensor to specification.

3. Make good the exhaust seals.