
Spring

Special Service tools



E36463 Road spring compressor 204-111 (JD115)

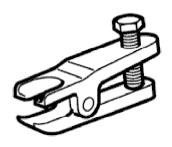

E36397

Taper separator 211-098 (JD 100)



E36462 Ball Joint Taper Separator 204-192 (JD 219)

2011-09-19


1

Removal

CAUTION:


Replacement of nuts and bolts: Various thread-locking devices are used on nuts and bolts throughout the vehicle. These devices restrict the number of times a nut or bolt can be used. See section <<100-00>> for information.

- 1. Raise front of vehicle to provide access for Special Tool 204-111. Refer to Section <<100-02>>
- 2. Remove appropriate road wheel. Refer to Section <<100-02>>.

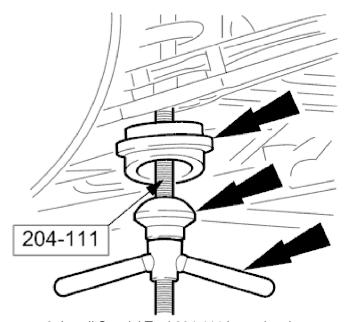


E35086

- 3. Install Special Tool 204-111 in road spring.
 - Slacken tool adjuster to suit spring length.
 - Install adaptor and thrust collar.
 - Position stem of tool in center of spring passing dowel through slot in suspension turret.

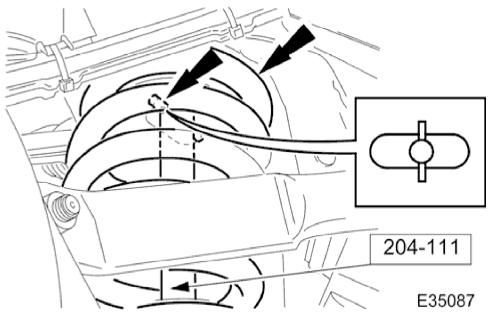


4. Rotate stem of Special Tool 204-111 to position dowel across slot.

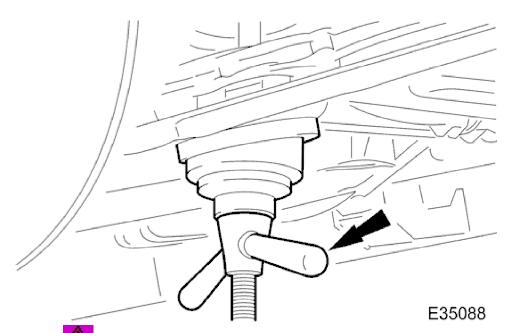


5. WARNING:
WHEN TURNING TOOL ADJUSTER, ENSURE THAT TOOL STEM DOES NOT ROTATE AND DISTURB POSITION OF DOWEL IN SUSPENSION TURRET.

Rotate adjuster of Special Tool to tension spring.

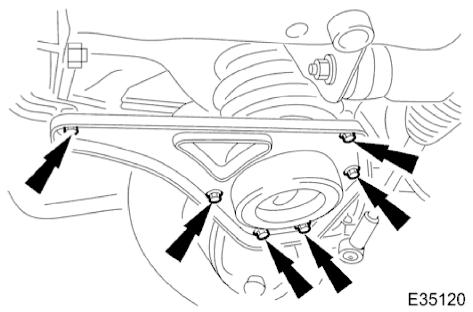

6. Remove spring pan to lower wishbone securing bolts.

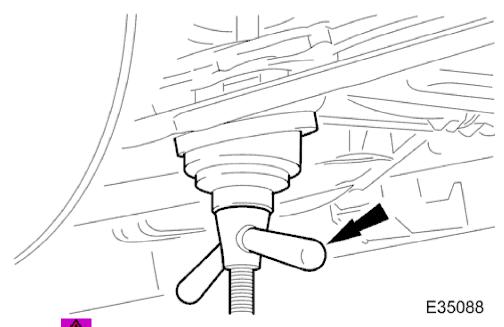


7. WARNING:

WHEN TURNING TOOL ADJUSTER, ENSURE THAT TOOL STEM DOES NOT ROTATE AND DISTURB POSITION OF DOWEL IN SUSPENSION TURRET.


Rotate adjuster of Special Tool to release tension from spring.

- 8. Remove spring assembly and Special Tool from suspension turret.
- 9. Remove Special Tool from spring assembly.


Installation

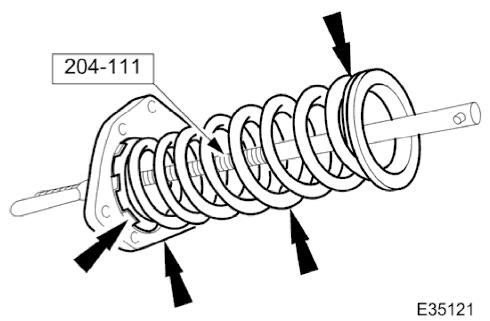


1. Install spring pan, new spring and new spring rubber upper and lower seats on Special Tool 204-111.

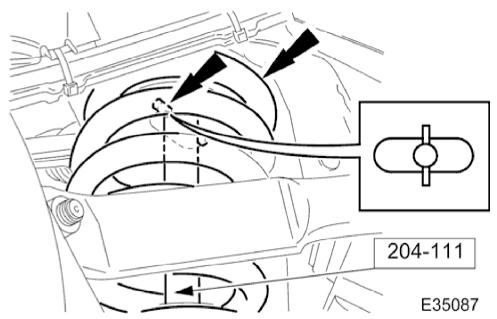

- 2. Install Special Tool 204-111 and spring assembly in suspension turret.
 - Position spring assembly and Special Tool in suspension turret.
 - Ensure spring upper rubber seat is correctly positioned and fully seated.
 - Engage tool dowel in turret slot.

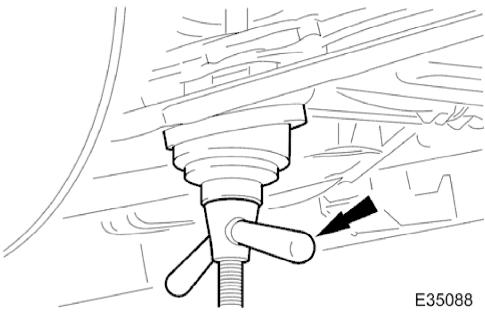


- 3. Position spring pan on lower wishbone.
 - Rotate adjuster of Special Tool to lightly tension spring.
 Align spring pan with lower wishbone bolt locations.

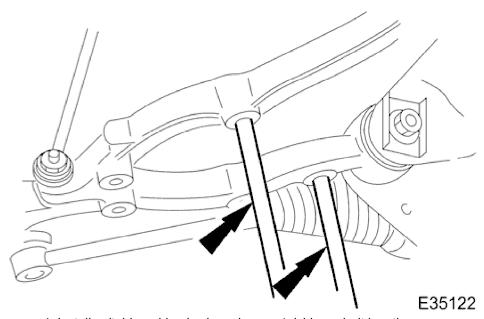

4. Install suitable guide pins in spring pan/wishbone bolt locations.

6 2011-09-19

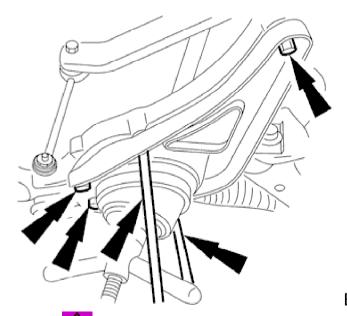


E35123

5. WARNING:

WHEN ROTATING TOOL ADJUSTER, ENSURE THAT TOOL STEM DOES NOT TURN AND DISTURB POSITION OF DOWEL IN SUSPENSION TURRET.

Install spring pan to wishbone securing bolts.

- Rotate tool adjuster to gradually increase spring tension.
- Progressively substitute spring pan securing bolts for guide pins.
- Tighten spring pan securing bolts to 70-90Nm.

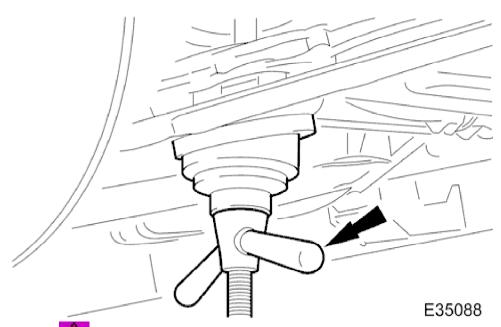

6. WARNING:


WHEN ROTATING TOOL ADJUSTER, ENSURE THAT TOOL STEM DOES NOT TURN AND DISTURB POSITION OF DOWEL IN SUSPENSION TURRET.

7

Remove Special Tool 204-111 from suspension.

2011-09-19

- Ensure spring lower rubber seat is correctly positioned and fully seated.
- Rotate adjuster of Special Tool to release tension on spring.

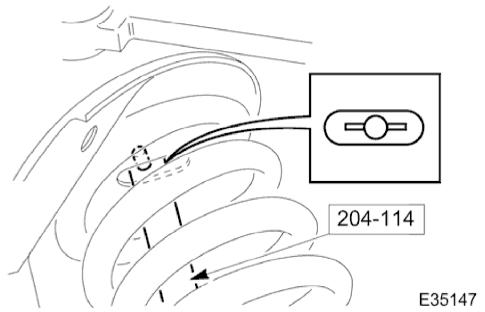

- 7. Rotate tool stem to release dowel from turret and withdraw tool assembly.
- 8. Lower vehicle to working height and support on stands.
- 9. Install road wheel. Refer to Section <<100-02>>.
- 10. Raise vehicle, remove stands and lower vehicle onto road wheels.