


Transmission Fluid Pan 44.24.04


Removal

- 1. Raise the vehicle for access and drain the transmission fluid.

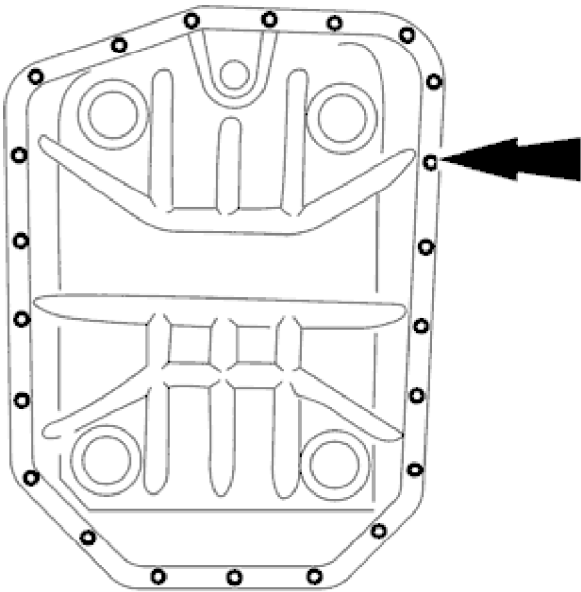

E35352

- 2. Remove the fluid pan.
 - Remove the twenty-two bolts.
- 3. Discard the fluid pan gasket and clean the mating faces.

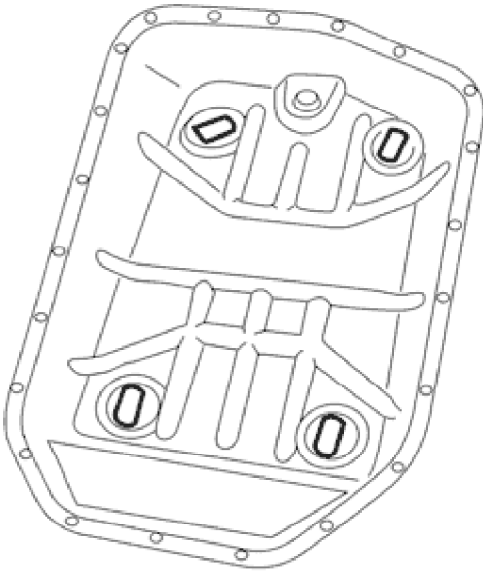


E35359

- 4. Remove the magnets from the fluid pan.
 - Clean the magnets and refit them to the fluid pan.

Installation

1. Installation is the reverse of the removal procedure:

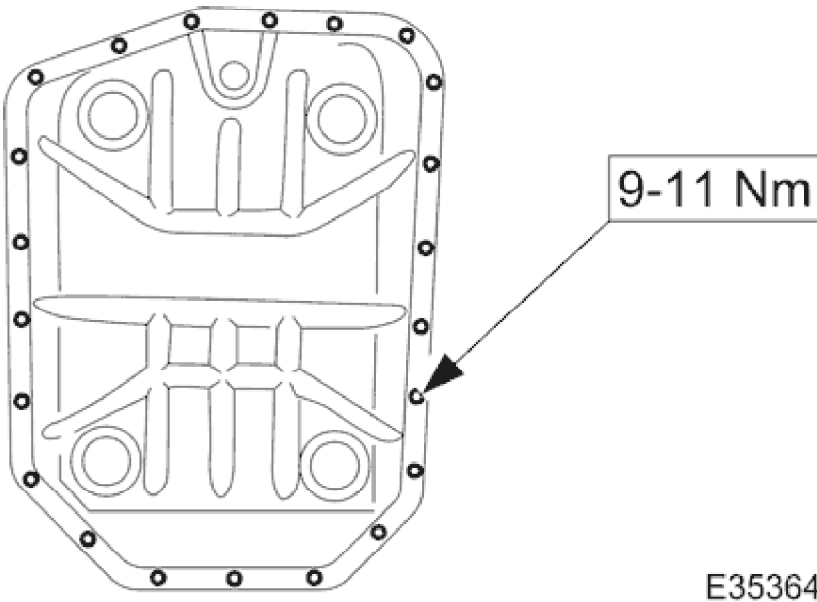

E35364

- 2. Tighten the fluid pan bolts to the specified torque figure.
- 3. Refill the transmission fluid. Refer to Operation <<44.24.02>>.