
### **Climate Control Assembly Housing**


#### Removal

- 1. Move 'J' gate selector to position 'D.'
- 2. Remove battery cover and disconnect ground cable from battery terminal. Refer to <<86.15.19>>.
- 3. Remove 'J' gate finisher. Refer to <<76.25.24>>.
- 4. Remove 'J' gate finisher retaining plate. Refer to <<76.25.26>>.
- 5. Remove centre console veneer panel. Refer to <<76.47.26>>.
- 6. Remove radio and console. Refer to operations in this section.

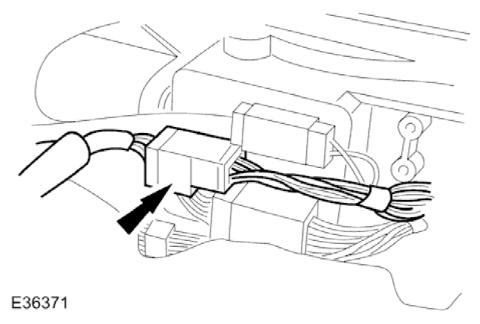

7. Disconnect air conditioning panel flying lead multiplug (blue) in LH side of transmission tunnel.


2

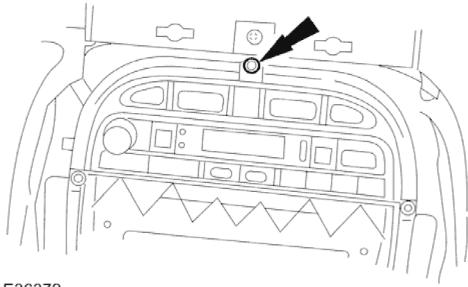

E36372

8. Slacken and remove remaining screw securing air conditioning panel console to BIW.

3

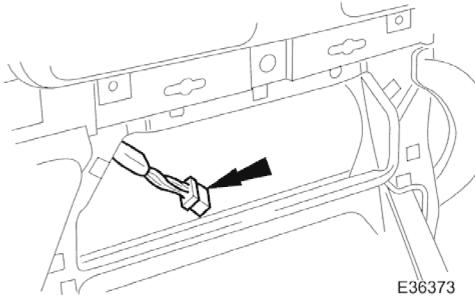

- 9. Withdraw air conditioning panel and console for access and disconnect the harness multiplug behind panel.
- 10. Remove air conditioning panel from vehicle.
- 11. Remove panel from console.

#### Installation

- 1. Fit air conditioning panel to console.
- 2. Position air conditioning panel and console at centre console and connect multiplugs.
- 3. Fully seat air conditioning panel and console on BIW bracket and fit and tighten securing screw.
- 4. Fit radio and console. Refer to operations in this section.

- 5. Fit centre console veneer panel. Refer to operations in this section.
- 6. Fit 'J' gate surround. Refer to operations in this section.
- 7. Fit 'J' gate finisher. Refer to operations in this section.
- 8. Connect ground cable to battery terminal and fit battery cover. Refer to <<86.15.15>>.
- 9. Return 'J' gate selector to position 'P'.

2012-01-02

5