


Instrument Panel Lower Trim Panel 76.46.11

Removal

1. Turn ignition switch to position 'II.'
2. Motor driver seat fully rearwards.
3. Turn ignition switch to position 'O.'

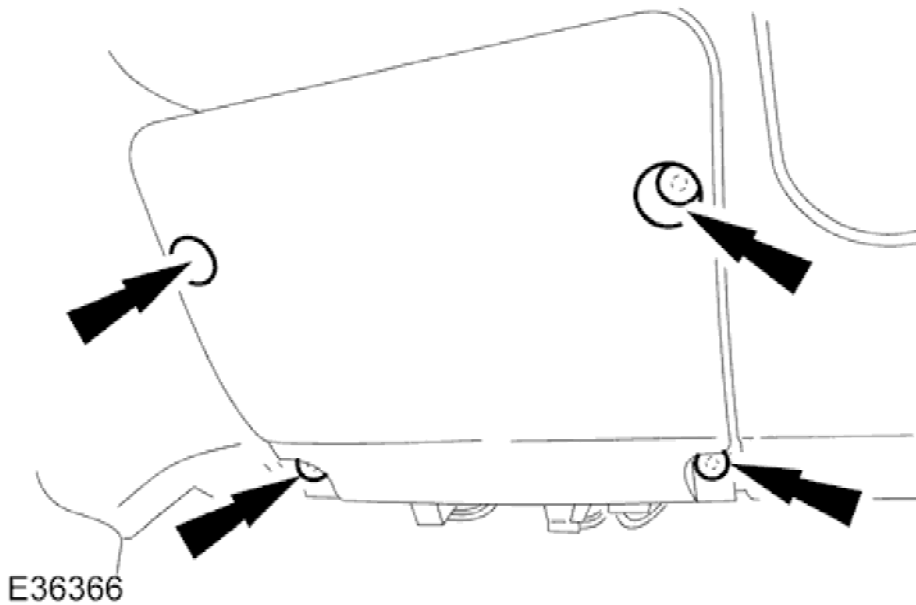

4. Slacken and remove the four underscuttle securing screws.
5. Remove and discard securing clips from screw locations.
6. Remove underscuttle from vehicle.

Installation

1. Fit new securing clips to screw locations.
2. Position and fully seat underscuttle below fascia and fit and tighten securing screws.
3. Return driver seat to original position.