Fuel Pumps

- 1. Remove both rear seats
- 2. Remove parcel shelf, foam insulation and subwoofer
- 3. Remove trunk (boot) carpet from tank and wheel wells and unplug all of the electrical connectors at the top of the tank
- 4. With a Dremel, I used a cutting wheel (well, more like 8) to cut away a portion of the parcel tray metal it looked similar to this:



My cut did not get as close to the edge towards the front of the car, which was a mistake - I had a VERY difficult time getting to one of the hoses and pulling it off, much less putting it back on.

- 5. Remove hoses- this is a bit difficult as they have been there for a long time patience is key here. You may have to do this step after #6, I did.
- 6. Gently hammer the lock ring off of the collar
- 7. Carefully pull out the unit that the hoses all attached to -



My car has the sending unit in the middle of the rear of the tank so yours may be different.

- 8. Unplug small connector that goes to the fuel pump
- 9. You will now be able to look down and see the pump and the small bolt that holds the bracket down.
- 10. Unbolt the bracket and pull the pump up grab the bolt before it falls into the tank (consider using a 1/4 inch ratchet and extensions along with a wobble or universal to reach it and get a good bite).
- 11. Twist and pull the pump until you can get it out enough to loosen the hose clamp and remove the hose from the pump.
- 12. Remove the pump.
- 13. Pull the pump from the bracket and put the new one in- it may not be a perfect fit with the new pump and the old rubber isolators but we aren't using a factory pump now are we?
- 14. Put strainer on new pump that is in the bracket
- 15. installation is the opposite of removal
- 16. I attached the fuel pressure tester and turned the key to the on position BAM! Pressure was good again!

I used Fuel Injection Corporation pumps which are an exact fit and no modification of any type was required.