



Ignition Coil-On-Plug RH 18.20.43

Removal

Vehicles without supercharger

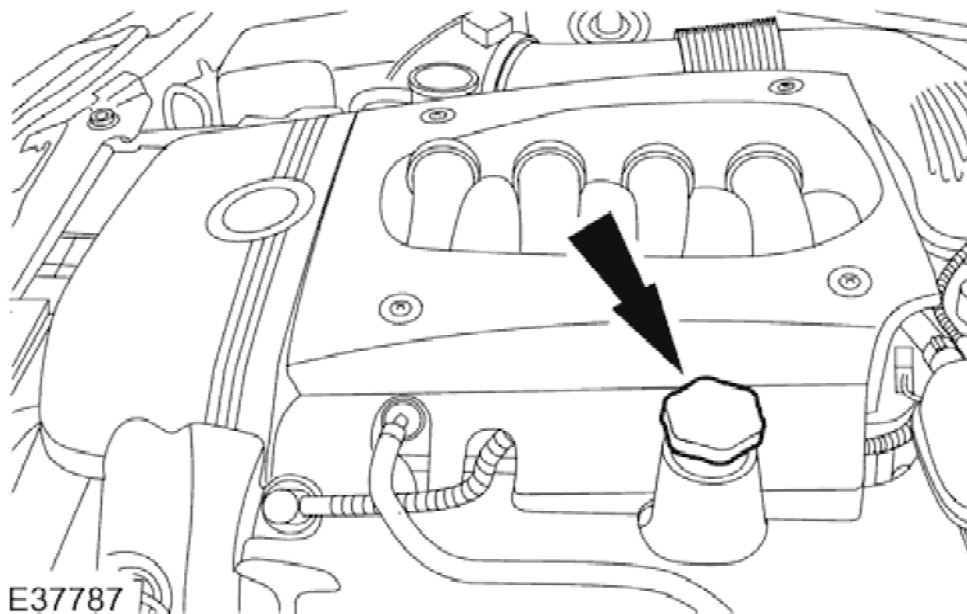


1. Remove the oil filler cap.

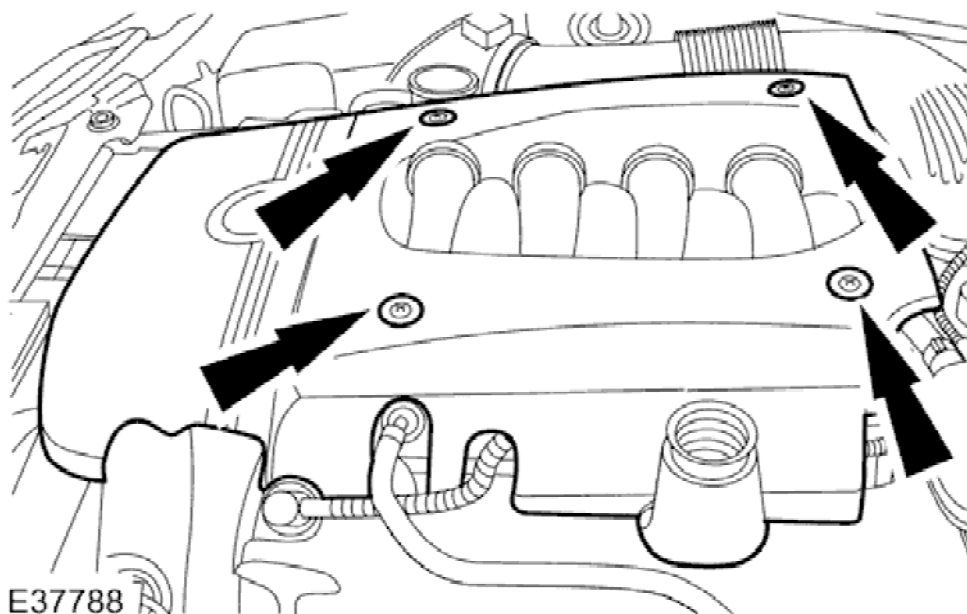

2. Remove the engine cover.


All vehicles

3. Remove the air cleaner element. <<303-12>>

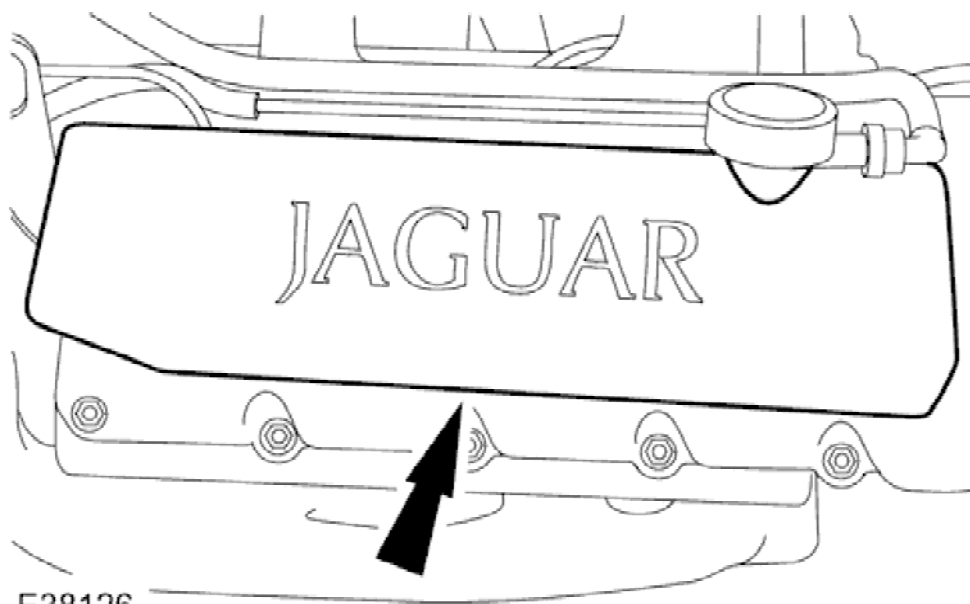


E38126

4. Remove the ignition coil-on-plug cover.

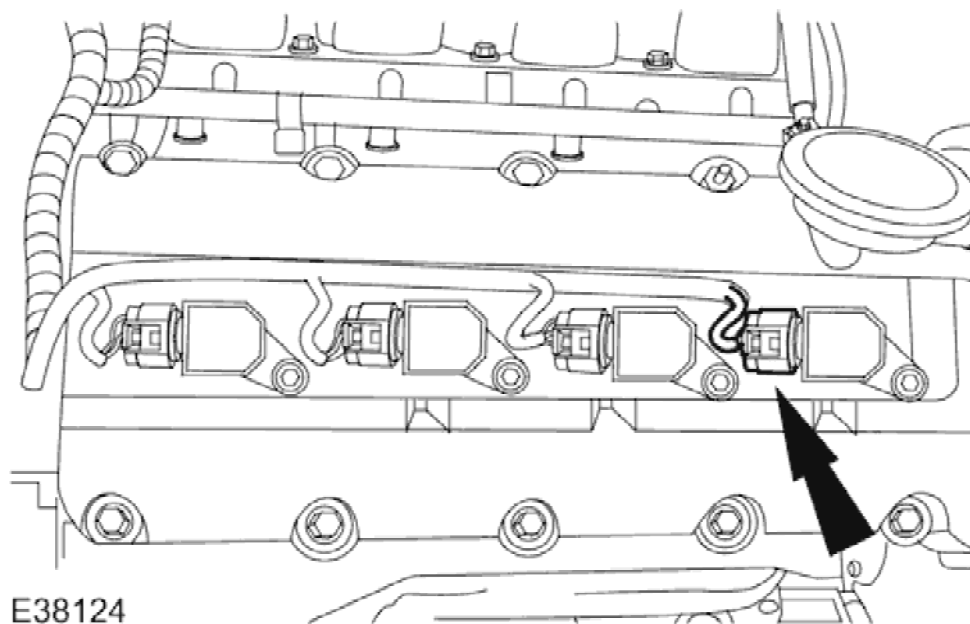

E38124


5. Disconnect the ignition coil-on-plug electrical connector.

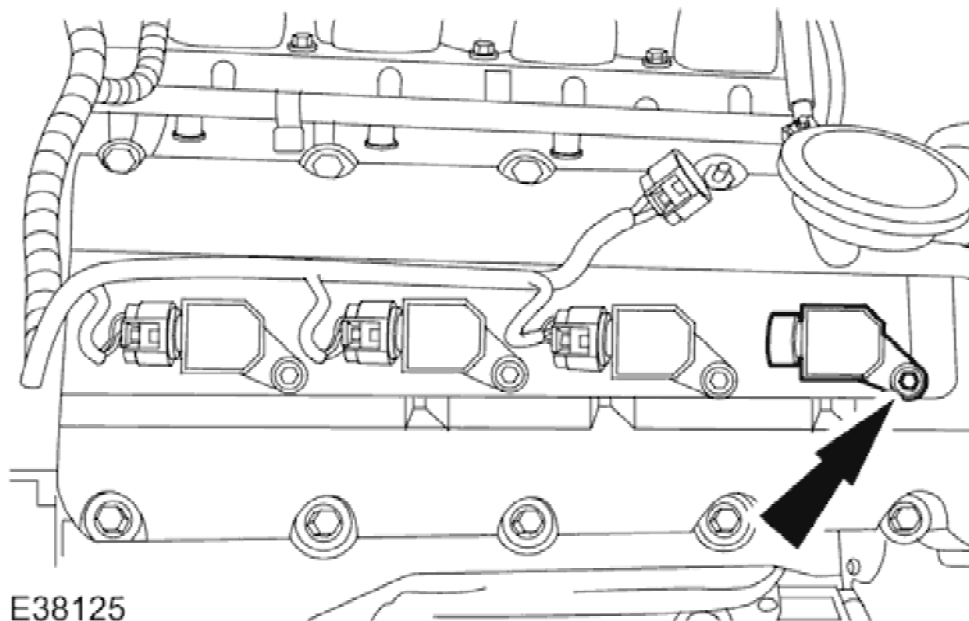

E38125

6. Remove the ignition coil-on-plug.

Installation

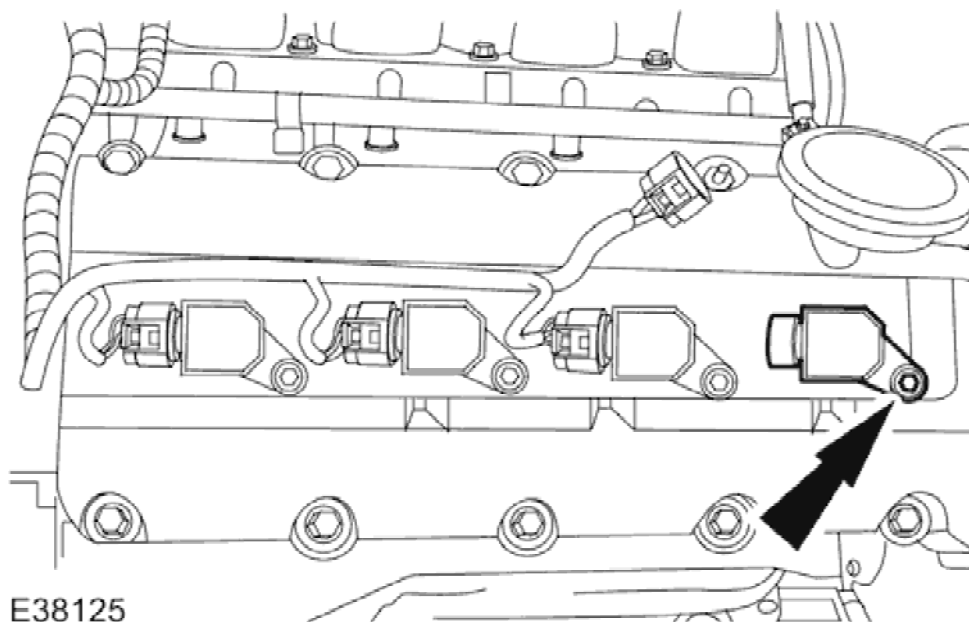

E38125

1. To install, reverse the removal procedure.
• Tighten to 5 Nm.