Brake Disc 70.10.10

Removal

WARNING:

BRAKE DISCS MUST ALWAYS BE REPLACED IN PAIRS.



WARNING:


BRAKE DUST, IF INHALED CAN DAMAGE YOUR HEALTH. ALWAYS REMOVE BRAKE DUST USING A VACUUM BRUSH. DO NOT USE A COMPRESSED-AIR LINE TO DISPERSE BRAKE DUST INTO THE ATMOSPHERE.



CAUTION:

Replacement of nuts and bolts: Various thread-locking devices are used on nuts and bolts throughout the vehicle. These devices restrict the number of times a nut or bolt can be used. See section <<100-00>> for information.

- 1. Open engine compartment and install paint work protection covers to fenders.
- 2. Raise front of vehicle and support on stands. See Section <<100-02>>.
- 3. Remove front wheels. Refer to Section << 204-04>>.

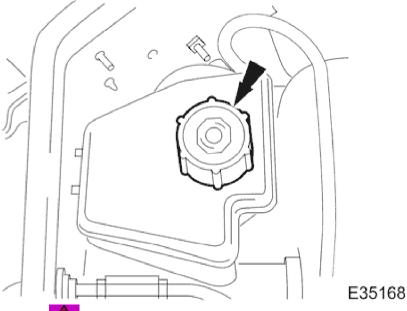


4. CAUTION:

Remove brake fluid spillage immediately from paint work, with clean water.

1

Loosen brake fluid reservoir-cap.

• Position a cloth around the reservoir to collect any fluid spillage.

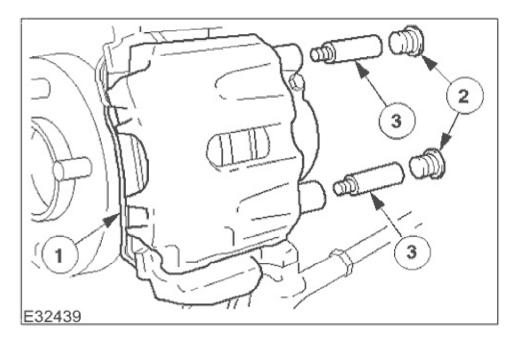

CAUTION:


Tie caliper housing aside. Do not allow the caliper housing to hang on the hydraulic hose, as this will damage the hose.

2

Remove caliper housing from caliper carrier.

1. Remove anti-rattle spring.

- 2. Remove dust covers.
- 3. Remove guide pins.
- Remove and tie caliper housing aside.

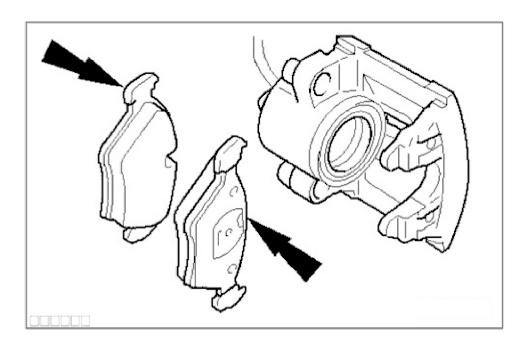



CAUTION:


Always install new brake pads, irrespective of the condition of the original pads, when renewing brake discs.

NOTE:


The inner brake pad is fitted with a clip which secures the pad into the caliper piston.

Remove brake pads from caliper housing.

• Discard brake pads.

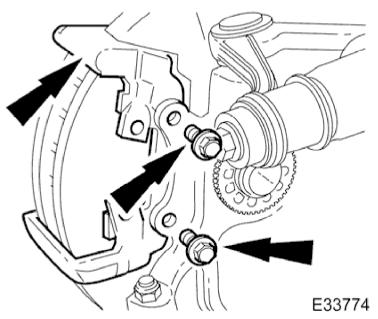


- 7. Remove brake carrier from vertical link.
 - Remove bolts.
 - Remove carrier.

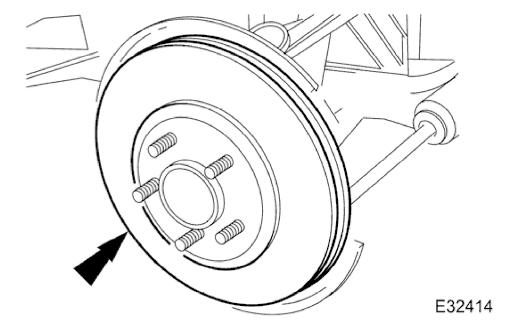


3

- 8. Withdraw brake disc from hub.
- 9. Repeat above procedure to remove opposite side brake disc.
- 10. Remove brake dust from calipers and clean mating surfaces, see WARNING above.
- 11. Thoroughly clean the area of the hubs where they mate against the brake discs.


Installation

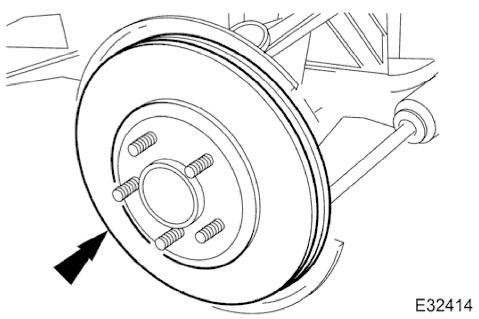

- 1. Install brake disc to hub.
- 2. Check brake disc run-out. Refer to General Procedures section <<206-03>>.

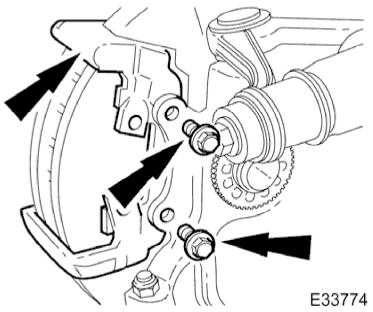

- 3. Install caliper carrier to vertical link.
 - Align carrier to vertical link .
 - Install and tighten bolts to 120-160 Nm.

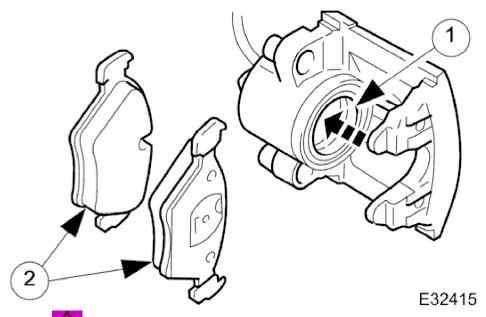

4. CAUTION:

Always install new brake pads, irrespective of the condition of the original pads, when renewing brake discs.

A CAUTION

Retracting the caliper piston may cause the fluid reservoir to over-flow. Remove brake fluid spillage immediately from paint work, with clean water.


5 2010-11-03

NOTE:

Clean caliper piston to pad mating surface.


Install brake pads into caliper housing.

- 1. Slowly retract piston into caliper housing.
- 2. Remove paper backing from pads to reveal adhesive shim. Install brake pads, insert clip located on back of inner pad into caliper piston.

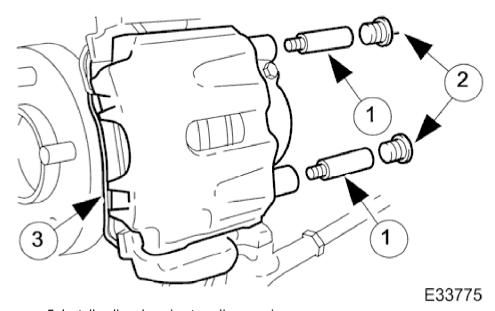

- 5. Install caliper housing to caliper carrier.
 - Align housing to carrier.
 - 1. Install and tighten guide pins to 25-30 Nm.
 - 2. Install dust covers.
 - 3. Install anti-rattle spring.
- 6. Repeat above procedure to install opposite side brake disc.
- 7. Fit wheels. Refer to operation <<74.20.05>>.
- 8. Remove stands and lower vehicle. Refer to section <<100-02>>.

6

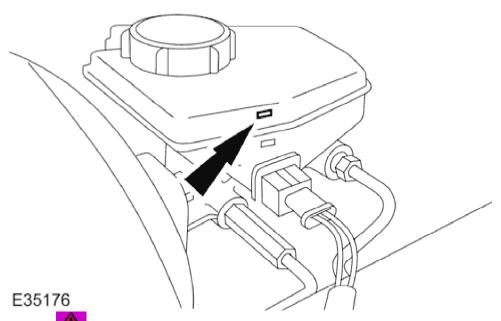

O. CAUTION:

Remove brake fluid spillage immediately from paint work, with clean water.

Check brake fluid level.

- Check brake fluid level is at the maximum mark.
- Remove cloth.
- Fit cap.
- 10. Remove paint work protection covers, and close engine compartment.
- 11. Start the engine and repeatedly press the brake pedal until brake pressure is evident.

7 2010-11-03