
1999 XJ RANGE - Jacking and Lifting - 100-02

Jacking

The vehicle jack and wheel chock are stored in the trunk as part of the vehicle toolkit.

Use of the vehicle jack and workshop jacks is described in the general procedures in this section.

Jacking Points

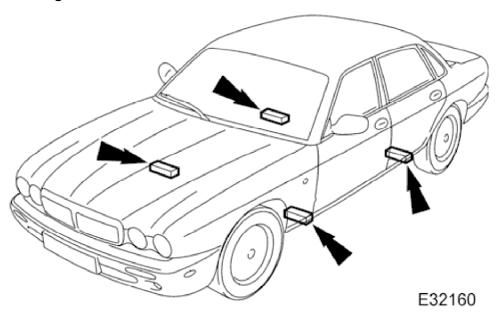

The four vehicle jacking points:

- Are situated below the body side members.
- Are located behind each front wheel and in front of each rear wheel.
- Consist of a square-section socket, protected by a rubber cover, to provide positive engagement with the vehicle jack.

1

• Provide the support points for the four lifting pads of a wheel-free lift.

2010-11-04