


Passenger Door Latch 76.37.75


Removal

1. Remove battery cover and disconnect ground cable from battery terminal. Refer to <<86.15.19>>.
2. Remove front door casing. Refer to <<76.34.01>>.
3. Position water shedder for access and feed door harness through water shedder.
4. Carefully remove water shedder from door and place adhesive side down on a clean dry plastic sheet.

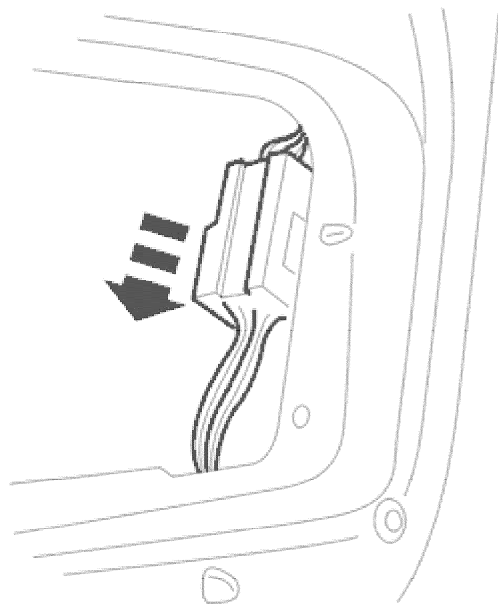


E36287

5. Release door lock actuator harness multiplug from mounting bracket and disconnect multiplug.
6. Position plastic inner sheet for access.

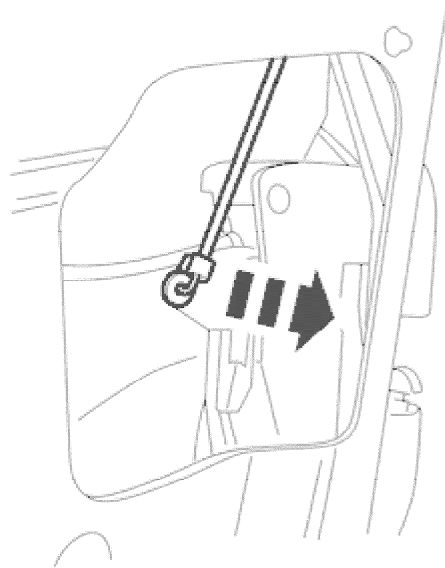


E36288

7. Disconnect outer door handle operating rod from lock mechanism.

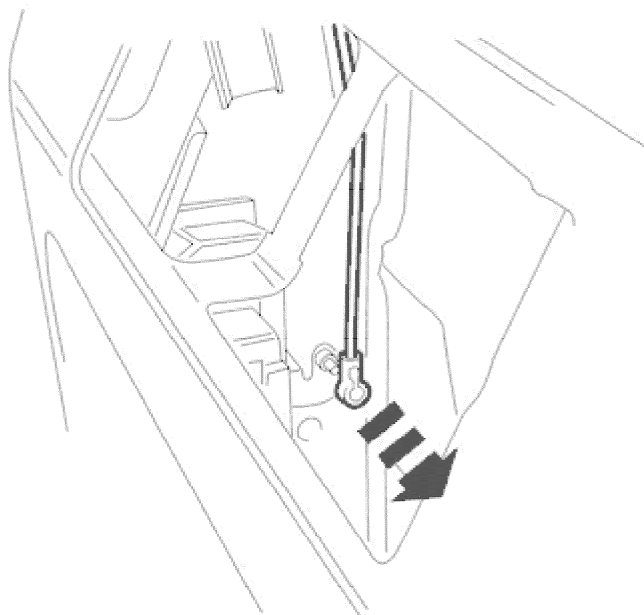


E36293

8. Disconnect inner door lock operating rod from lock mechanism and remove rod assembly.

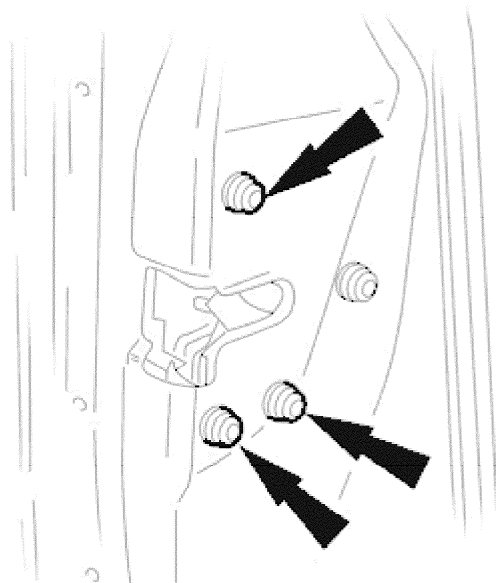

E36291

9. Slacken and remove the three lock securing bolts.

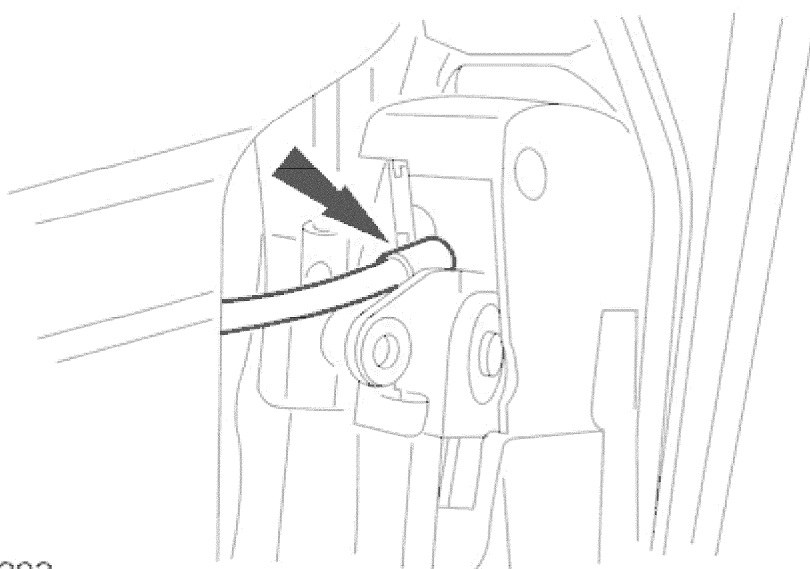

E36292

10. Remove lock assembly from door.
- Position lock assembly for access and remove operating cable rear abutment securing clip.
 - Disconnect cable from lock assembly and remove lock from door.

Installation

1. Position lock assembly in door, connect remote cable and fit and fully seat securing clip.
2. Align lock assembly in door and fit and tighten the three securing bolts.
3. Position inner lock operating rod in door and connect rod to lock assembly.

2003 XJ RANGE - Handles, Locks, Latches and Entry Systems - 501-14

4. Connect door outer handle operating rod to lock assembly.
5. Check for satisfactory door handle operation.
6. Reposition plastic inner sheet.
7. Connect lock actuator harness multiplug and fit multiplug to mounting bracket.
8. Connect ground cable to battery terminal. Refer to <<86.15.15>>.
9. Check for satisfactory operation of locking system.
10. Disconnect ground cable from battery terminal. Refer to <<86.15.15>>.
11. Position water shedder at door and pass door harness through water shedder.
12. Fit and firmly seat water shedder on door ensuring satisfactory adhesion.
13. Fit door casing. Refer to <<76.34.01>>
14. Connect ground cable to battery terminal and fit cover to battery. Refer to <<86.15.15>>.