

Disabling '88-'92 XJ40 Bulb Failure Warning

Module	Connector-Pin#	Wire Color	Connector Type	Location
Central Microprocessor	LB13-14	KG-Pink/Green	36-way PMHD Black	One of two CPU pigtails
	LB13-15	KR-Pink/Red		
Instrument Pack	LB54-32	KS-Pink/Slate	36-way PMHD Black	Below Instrument Pack, beside steering column

Back out or snip the indicated wire at the indicated connector location. This will disable the bulb failure warning and leave the bulb failure module disconnect loop intact. I usually removed the terminal from the connector; that way it's easily reversible.

Locate a copy of the appropriate Electrical Guide and match the wire colors, and confirm adjacent wire colors to be sure you have the correct wire.

Disabling '93-'94 XJ40 Bulb Failure Warning

Module	Connector-Pin#	Wire Color	Connector Type	Location
Central Microprocessor	LB61-21	KG-Pink/Green	48-way AMP PCB Black	One of three connectors on CPU
	LB61-22	KR-Pink/Red		
Instrument Pack	LB23A-12	KS-Pink/Slate	12-way Multilock 040 Blue	Mounted on LH Blower Motor

