

BLOWER MOTOR RESISTANCE UNIT

Renew

Disconnect the battery earth lead.

On right hand drive cars, remove the left hand underscuttle casing and the glove box liner.

On left hand drive cars, remove the left hand underscuttle casing and the left hand side casing.

Note the position of and disconnect the cables from the resistance unit lucar connectors (1, Fig. 72).

Remove the screw securing the vacuum hose clip, move the hose to one side (2, Fig. 72).

Remove the screws securing the resistance unit and withdraw the unit from the air conditioning unit case (3, Fig. 72).

On refitting, ensure the cable connectors are secure and connected correctly.