


**DOOR LOCK STRIKER PLATE**

Remove and refit 76.37.23

- 1 Removing
- 2 Remove rear seat cushion, see 76.70.37.
- 3 Remove two screws at base of rear seat back and lift out seat back.
- 4 Lift off rear arm rest adjacent to striker plate.
- 5 Remove cover from front seat belt mounting on 'B' post, detach bolt and remove seat belt mounting bolt, spacers and spring washer.
- 6 Detach trim pad from 'B' post and remove four screws securing side trim panel.
- 7 Move trim panel aside and remove striker plate attachment screws.
- 8 Detach striker plate.

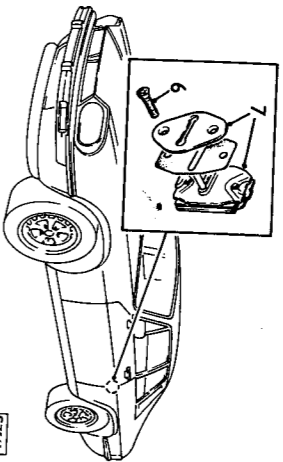

- Refitting**
- 8 Fit striker plate and secure with two screws.
  - 9 Replace trim panel and secure with four screws.
  - 10 Refit 'B' post trim pad.
  - 11 Replace front seat belt mounting on 'B' post and refit bolt with spring washer and two spacers. Fit plastic cover.
  - 12 Push arm rest back into location.
  - 13 Replace seat back and secure with two screws.
  - 14 Replace seat cushion, see 76.70.37.
  - 15 Check adjustment of striker plate.

**DOOR LOCK STRIKER - ADJUST**

Adjust 76.37.27

- 1 Adjusting
- 2 Slacken setscrews securing striker plate to body.
- 3 Reposition striker and tighten setscrews.
- 4 Close door, door should close with minimum push effort.
- 5 Continue operation 2 until door closes as described in operation 3.

**FACIA PANEL**



Remove and refit 76.46.01

- Removing**
- 1 Slacken steering wheel adjuster and pull wheel out to full extent.
  - 2 Remove screws securing upper and lower shroud to steering column, lift shrouds from column.
  - 3 Remove pinch bolt securing steering wheel and adjuster mechanism to upper column.
  - 4 Slacken locknut and Allen screw adjacent to pinch bolt.
  - 5 Withdraw steering wheel and adjuster assembly from upper column.
  - 6 Remove 'A' post trim pads see 76.13.07.
  - 7 Remove instrument module, see 88.20.01.
  - 8 Remove driver's underscuttle casing, see 76.46.11.
  - 9 Remove interior and map lamp mounted in facia, see 86.45.04.
  - 10 Remove passenger underscuttle casing, see 76.46.15.
  - 11 Remove facia switch panel, see 76.46.16.
  - 12 Remove glove compartment liner, see 76.52.03.
  - 13 Pull air conditioning control knobs from spindles.
  - 14 Remove radio or locking rings securing radio blanking panel to console, remove panel.
  - 15 Remove two screws securing facia and console to air conditioning unit.
  - 16 Slacken nuts securing top rear portion of facia to bulkhead.

**FACIA SWITCH PANEL**


Remove and refit 76.46.16

- Removing**
- 1 Ease clock from its aperture in panel, disconnect leads and remove bulb holder. Remove clock.
  - 2 Working through clock aperture, prise switch panel away from its six press-in attachments.
  - 3 Ease panel clear of facia, manoeuvring hazard warning switch wires past sharp edge of facia aperture.

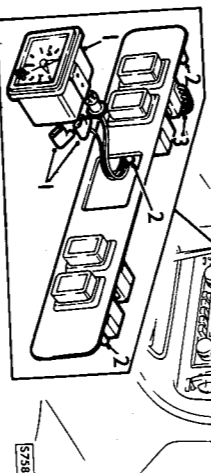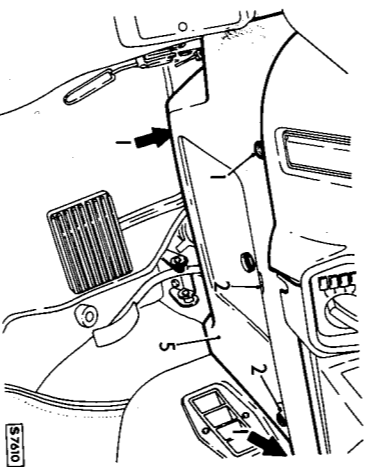

- Refitting**
- 4 Disconnect wiring at switches and bulb holders.
  - 5 Remove all switches and bulb holders from panel.

- Refitting**
- 6 Fit bulb holders and switches to new panel.
  - 7 Offer 'up' panel to facia and connect wiring.
  - 8 Manoeuvre wiring through facia aperture and press panel fasteners home.
  - 9 Offer up clock, reconnect wires, replace bulb holder and press clock into its aperture in panel.



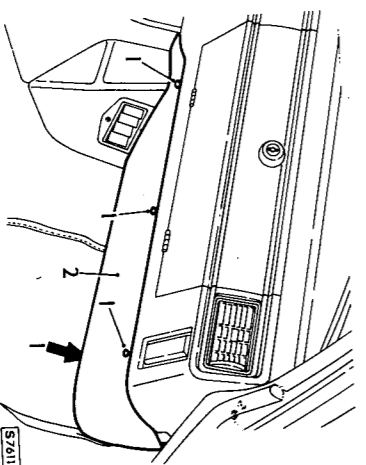


Refitting Reverse operations 1 and 2.

- 17 Remove bolts securing sides of facia to bulkhead, access to these bolts is through either underscuttle aperture.
- 18 Remove nut securing main light switch to mounting, ease switch from mounting.
- 19 Carefully remove facia from car.


**NOTE:** If facia is removed for access only proceed to refitting operation, if new facia is to be fitted carry out following operations.

- 20 Remove glove box lid, see 76.52.02.
- 21 Push centre air vent retaining clips towards facia and disengage clips from air vent.
- 22 Remove centre air vent from facia.
- 23 Remove nut securing centre air vent trim to facia, lift trim from facia.
- 24 Remove facia side air vents.
- 25 Remove screws securing glove box lid catch to facia, remove catch.
- 26 Prise heat sensor tubing from facia.

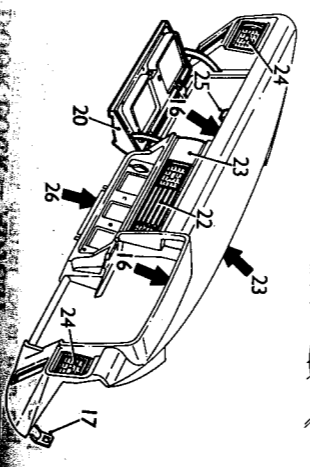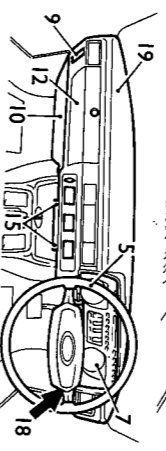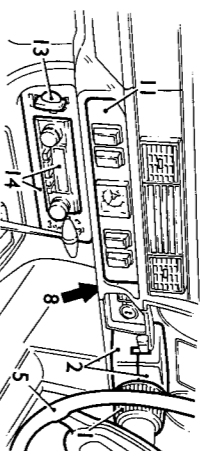**GLOVE BOX LID**

Remove and refit 76.52.02

- Removing**
- 1 Remove screws securing vanity mirror and tray to glove box lid, lift assembly from lid.
  - 2 Remove nuts securing lid check straps, detach straps from mounting studs.
  - 3 Remove screws securing glove box lid to hinges, lift lid from car.
  - 4 Remove nut securing lid lock, remove lock from lid.
  - 5 Remove fasteners securing metal trim to lid, remove trim.

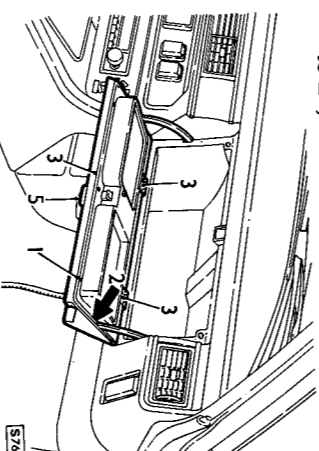


Refitting Reverse operations 1 to 5.

**GLOVE BOX LINER**

Remove and refit 76.52.03

- Removing**
- 1 Remove screws securing liner to facia.
  - 2 Carefully prise liner around latch withdraw liner from facia.

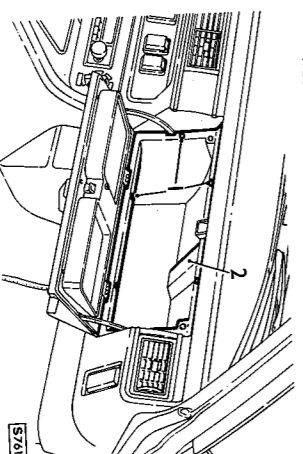

- 27 Remove ignition and light switch bracket clamp screws, remove switch brackets.
- 28 Remove underscuttle casing securing clips from lip of facia.


**Refitting**

- 29 Reverse operations 20 to 28.
- 30 Relocate facia to bulkhead.
- 31 Reverse operations 16 and 17 ensuring earth lead is fastened between near side mounting and securing bolt.
- 32 Feed wires for facia lights through rear cover of light mountings.
- 33 Reconnect light units to wires and refit to facia.
- 34 Reverse operations 13 to 15.
- 35 Refit facia switch panel.
- 36 Refit instrument module to facia.
- 37 Refit glove box liner.
- 38 Fit light switch surround around switch assembly.
- 39 Reconnect fibre optic to surround, tighten surround securing screw.
- 40 Reverse operations 1 to 6.
- 41 Refit driver's and passenger's underscuttle casing.

**DRIVER'S UNDERSCUTTLE CASING**


Remove and refit 76.46.11

- Removing**
- 1 Remove screws securing casing to facia and scuttle.
  - 2 Carefully lower casing sufficiently to gain access to rheostat and speedometer trip.

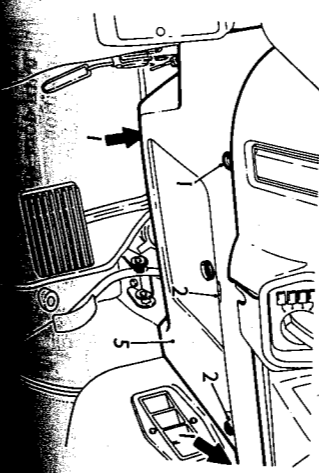**RADIATOR GRILLE**

Remove and refit 76.55.03

- Removing**
- 1 Remove screws securing grille to bonnet, recover washers and distance pieces.

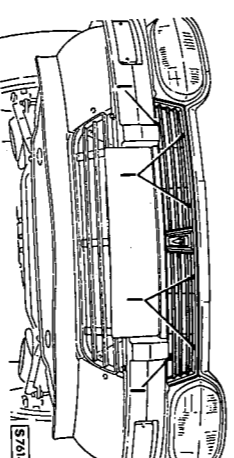


- Refitting**
- 2 Refit grille to bonnet, ensure distance pieces are fitted between grille upper mountings.

**RADIATOR LOWER GRILLE**

Remove and refit 76.55.06

- Removing**
- 1 Remove screws securing grille to wings.
  - 2 Remove grille.

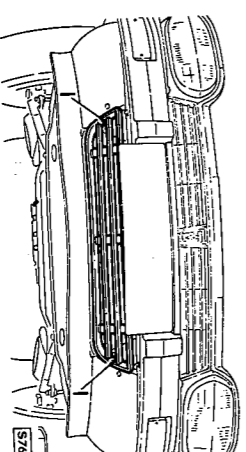

Refitting Reverse operations 1 and 2.