



**COMPONENT**

- Alternator
- Aerial motor
- Aerial motor relay
- Air conditioning ambient sensor
- Air conditioning amplifier
- Air conditioning blower
- Air conditioning blower relay
- Air conditioning blower resistor
- Air conditioning compressor clutch
- Air conditioning control switch
- Air conditioning/heater (to)
- Air conditioning in-car sensor
- Air conditioning servo
- Air conditioning temperature selector
- Air conditioning thermostat
- Air conditioning vacuum valve
- Air conditioning water temperature sensor
- Air temperature sensor
- Auto gearbox kickdown solenoid
- Auto gearbox kickdown pressure switch
- Auto gearbox selector lamp
- Auto gearbox start inhibit switch
- Ballast resistor
- Battery
- Battery condition indicator
- Blocking diode - brake warning
- Blocking diode - direction indicators
- Blocking diode - inhibit incorrect - polarity

**No. COMPONENT**

- 1 Alternator
- 185 Aerial motor
- 186 Aerial motor relay
- 265 Air conditioning ambient sensor
- 261 Air conditioning amplifier
- 33 Air conditioning blower
- 189 Air conditioning blower relay
- 188 Air conditioning blower resistor
- 190 Air conditioning compressor clutch
- 192 Air conditioning control switch
- 139 Air conditioning/heater (to)
- 264 Air conditioning in-car sensor
- 262 Air conditioning servo
- 327 Air conditioning temperature selector
- 191 Air conditioning thermostat
- 263 Air conditioning vacuum valve
- 47 Air conditioning water temperature sensor
- 297 Air temperature sensor
- 181 Auto gearbox kickdown solenoid
- 180 Auto gearbox kickdown pressure switch
- 76 Auto gearbox selector lamp
- 75 Auto gearbox start inhibit switch
- 164 Ballast resistor
- 3 Battery
- 146 Battery condition indicator
- 256 Blocking diode - brake warning
- 289 Blocking diode - direction indicators
- 315 Blocking diode - inhibit incorrect - polarity

**No. COMPONENT**

- 66 Boot light
- 65 Boot light switch
- 160 Brake differential pressure switch
- 323 Brake failure warning light
- 182 Brake fluid level switch
- 159 Brake fluid level warning light
- 168 Buzzer alarm
- 57 Cigar lighter
- 208 Cigar lighter illumination
- 56 Clock
- 300 Cold start injectors
- 299 Cold start relay
- 305 Coolant temperature sensor
- 26 Direction indicator switch
- 27 Direction indicator warning light
- 40 Distributor
- 257 Door lock solenoid
- 258 Door lock solenoid relay
- 260 Door lock switch
- 21 Door switch
- 169 Door switch (buzzer alarm)
- 291 EGR control unit
- 308 EGR thermo switch
- 307 EGR valve
- 277 EGR warning switch } See Service Interval Counter
- 278 EGR warning lamp
- 284 EGR diode
- 66 Fibre optics illumination lamp
- 65 Flasher unit (part of 154)
- 160 Flasher lamp RH front
- 323 Flasher lamp LH front
- 182 Flasher lamp RH rear
- 159 Flasher lamp LH rear
- 168 Fog lamp RH
- 57 Fog lamp LH
- 208 Fog lamp warning light
- 56 Fuel gauge
- 300 Fuel gauge tank unit
- 299 Fuel injection amplifier
- 305 Fuel injection control unit (E.)
- 26 Fuel injection main relay
- 27 Fuel level warning light
- 40 Fuel pump
- 257 Fuel pump relay
- 258 Fuel tank change-over switch
- 260 Full throttle switch (Australia)
- 21 Fuse box
- 169 Handbrake switch
- 291 Handbrake warning lamp
- 308 Hazard warning flasher unit (ir)
- 307 Hazard warning lamp
- 277 Hazard warning switch
- 278 Headlamp dip switch
- 284 Headlamp dip beam
- Headlamp inner RH