

## WASHER RESERVOIR—ABS

### RENEW

84.10.01


- Disconnect battery earth lead.
- Remove panel on the inside front of the right hand front wheelarch.
- To expose washer reservoir peel back tape to expose washer pumps (1 Fig 2).
- Remove protective covers from washer pumps (2 Fig 2).
- Disconnect harness connector from washer pumps (3 Fig 2).
- Remove inlet pipes to washer pumps (4 Fig 2).
- Remove washer pumps.
- Remove water level sender (5 Fig 2).
- Remove breather pipe from top of reservoir (6 Fig 2).
- Remove screws securing reservoir to bracket (7 Fig 2).
- Ease out reservoir disconnecting filler tube (8 Fig 2).
- Refitting is the reversal of the removal procedure.

177G



J84-055

Fig 1

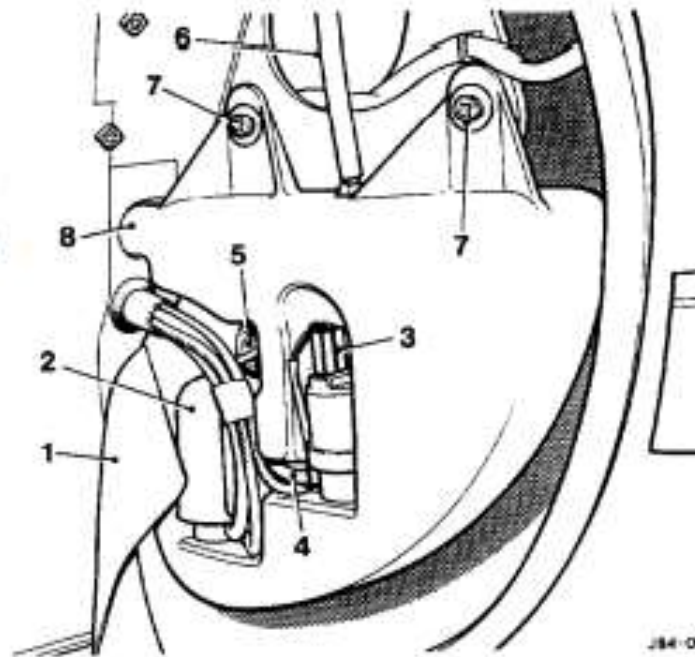

J84-051