


XK CONNECTOR QUICK REFERENCE GUIDE

Document Objective: To provide basic connector location information only, including in-lines and grounds.
For detailed connector information refer to the Electrical Reference Library (ERL).

All paper copies are uncontrolled.


Note: For improved clarity some harnesses have been omitted completely e.g. engines, seats, bumpers, steering, climate control and some link leads. Based on convertible, some coupe differences identified.

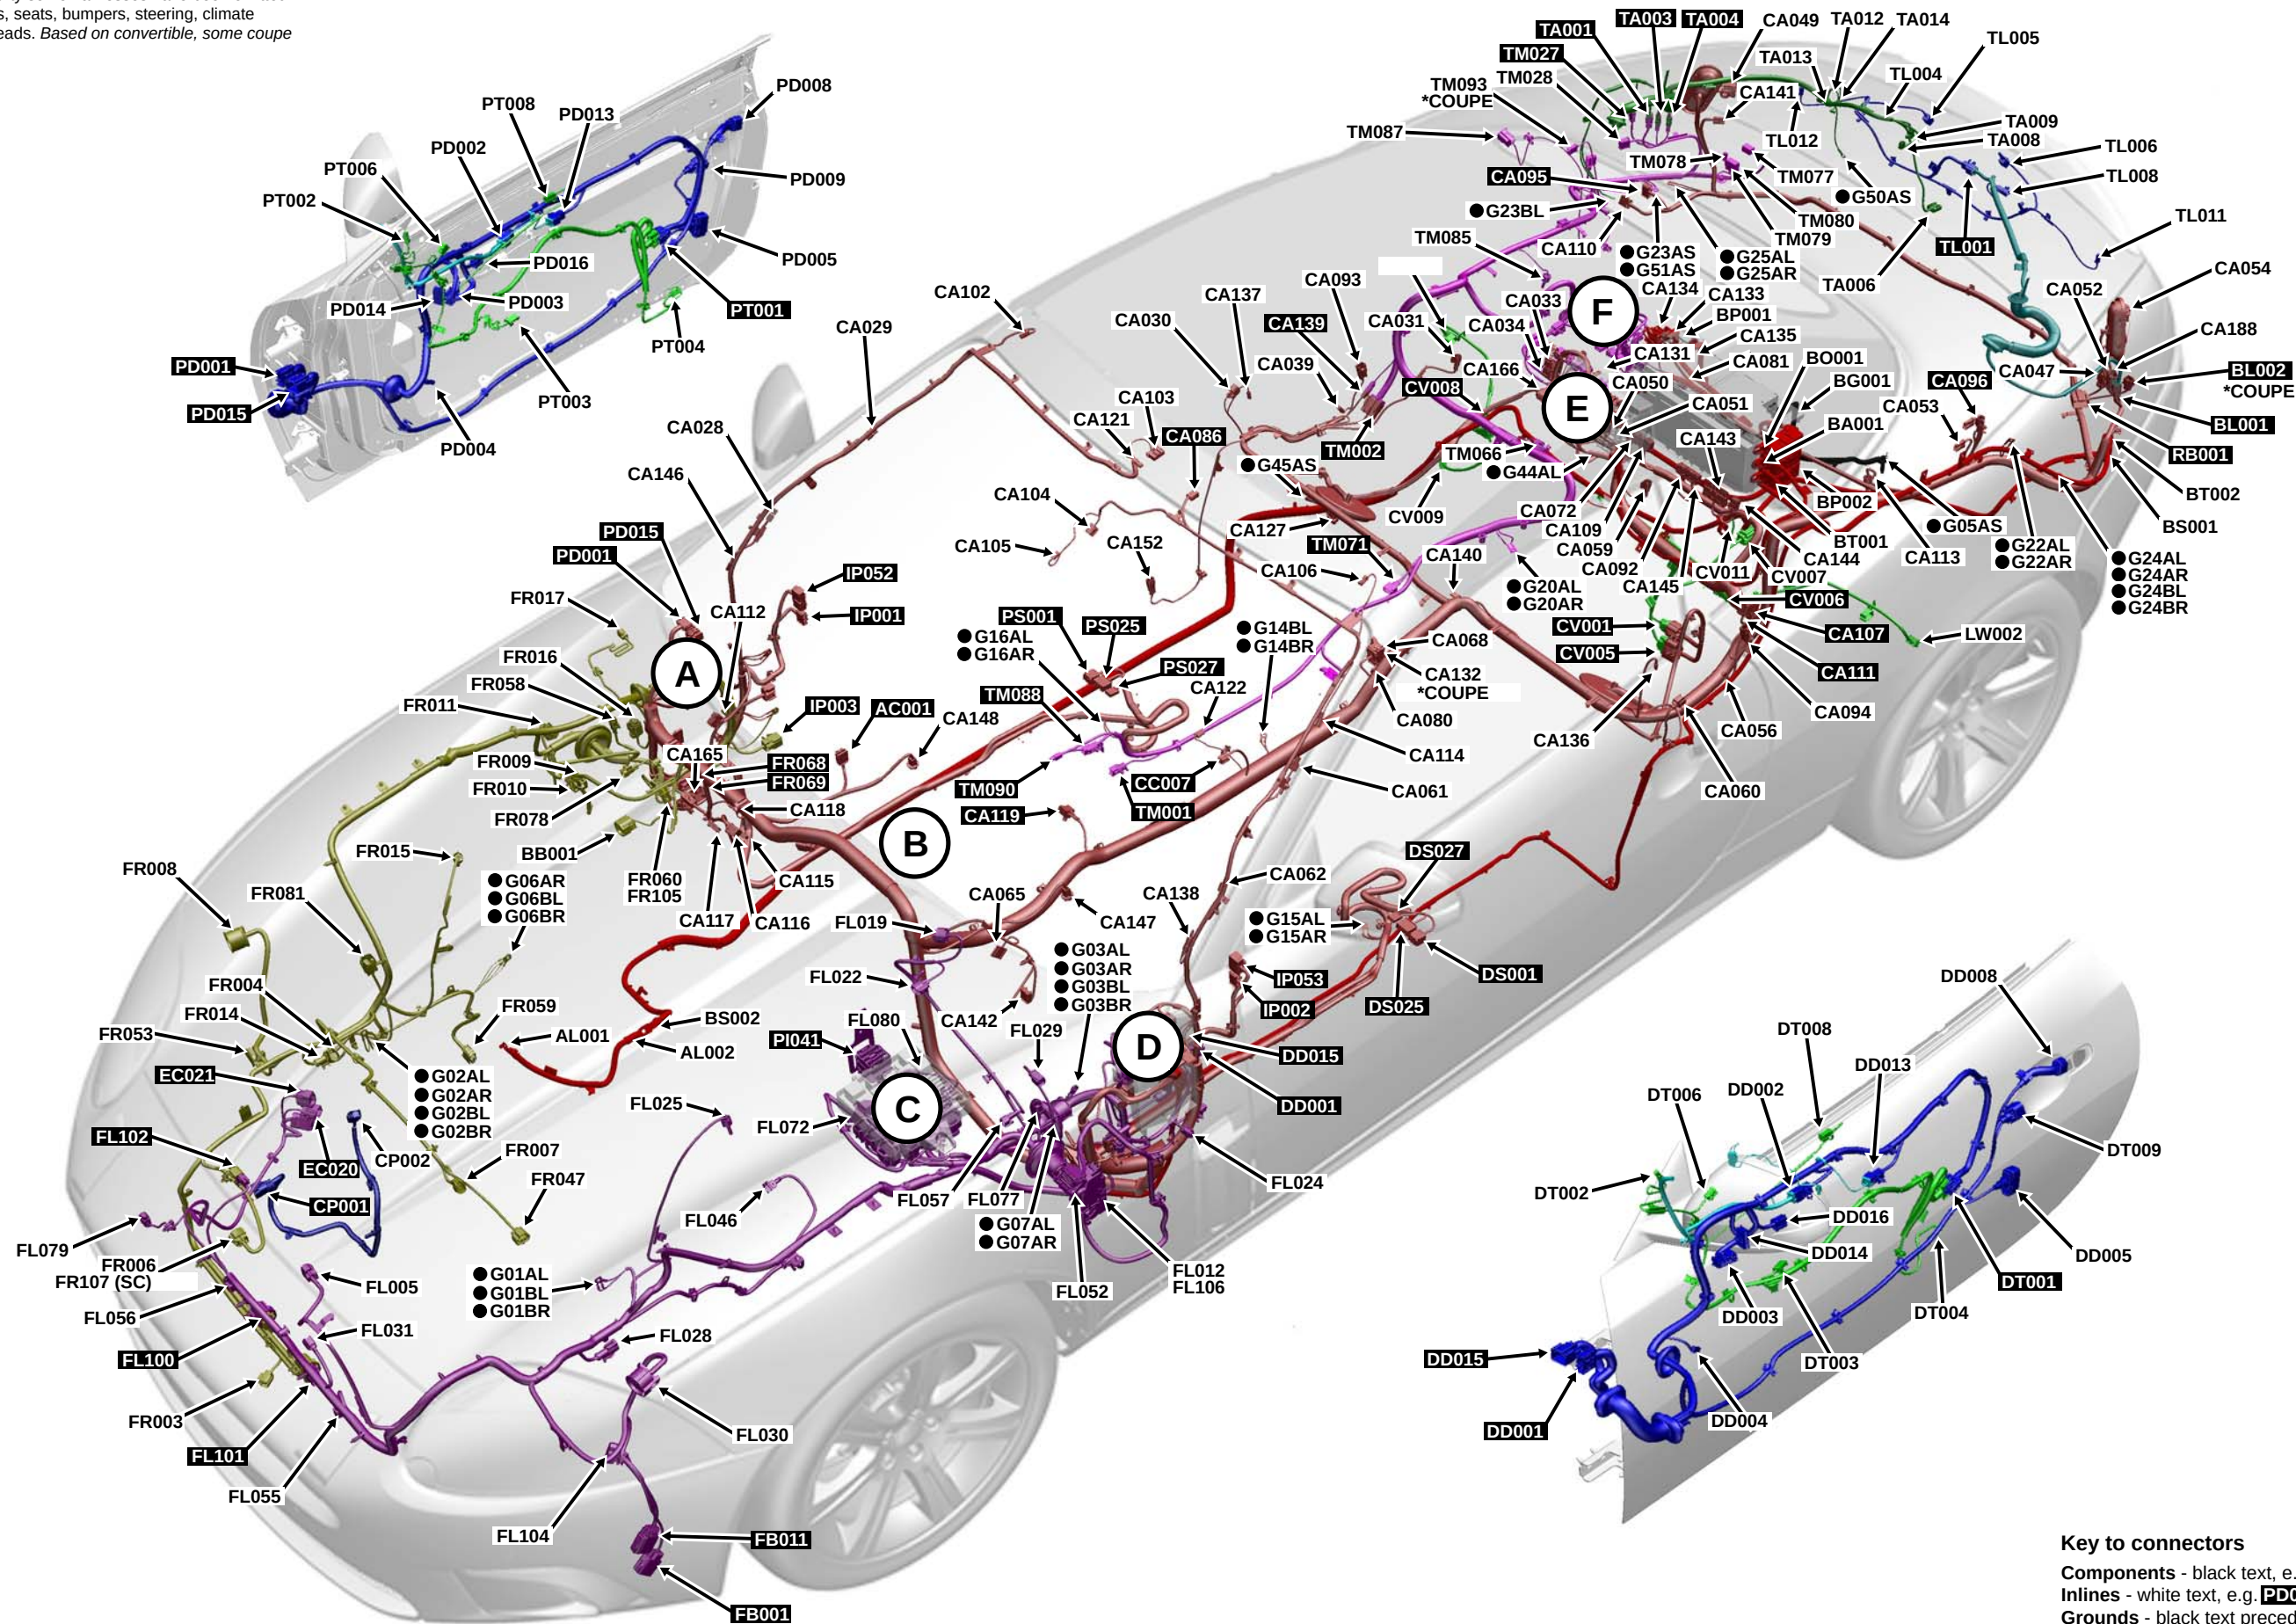


VIN: B20075 >

DETAIL B


IP AND CENTRE CONSOLE

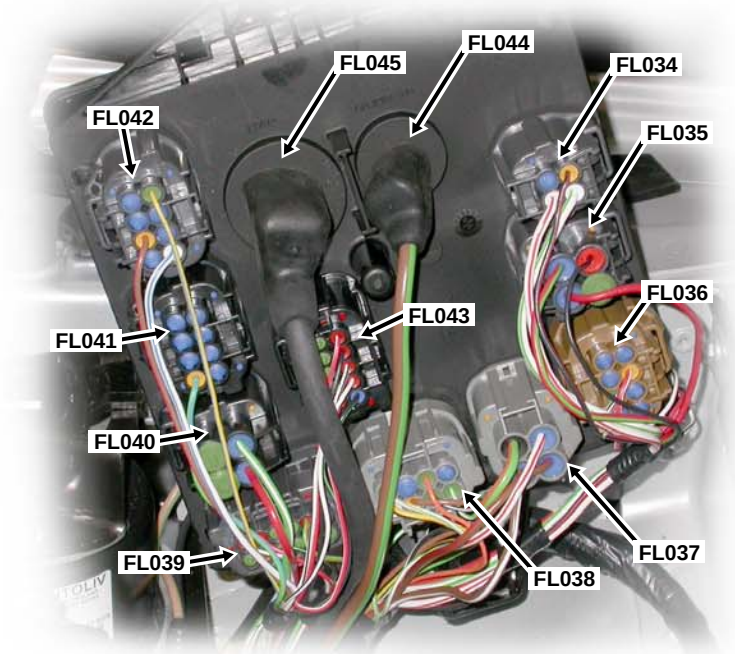

DETAIL D CENTRAL JUNCTION BOX

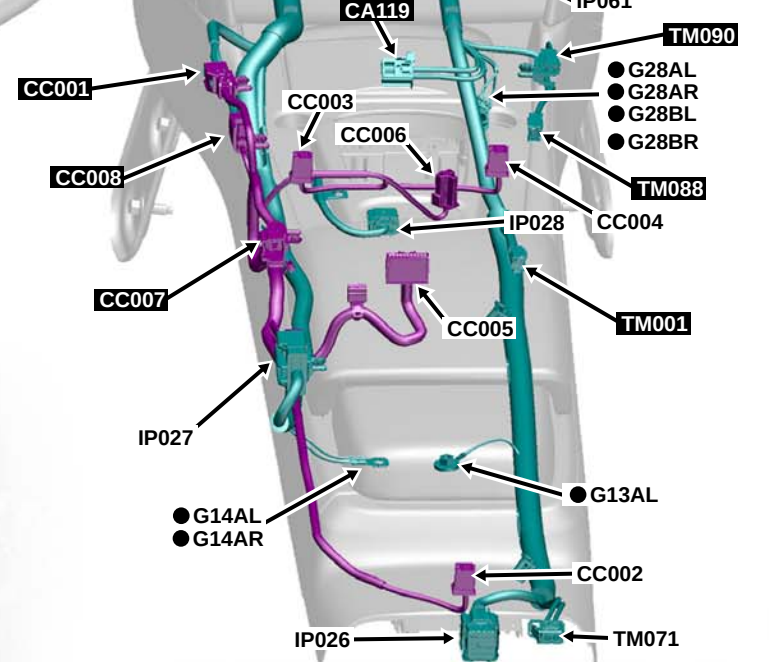

DETAIL A RH 'A' POST

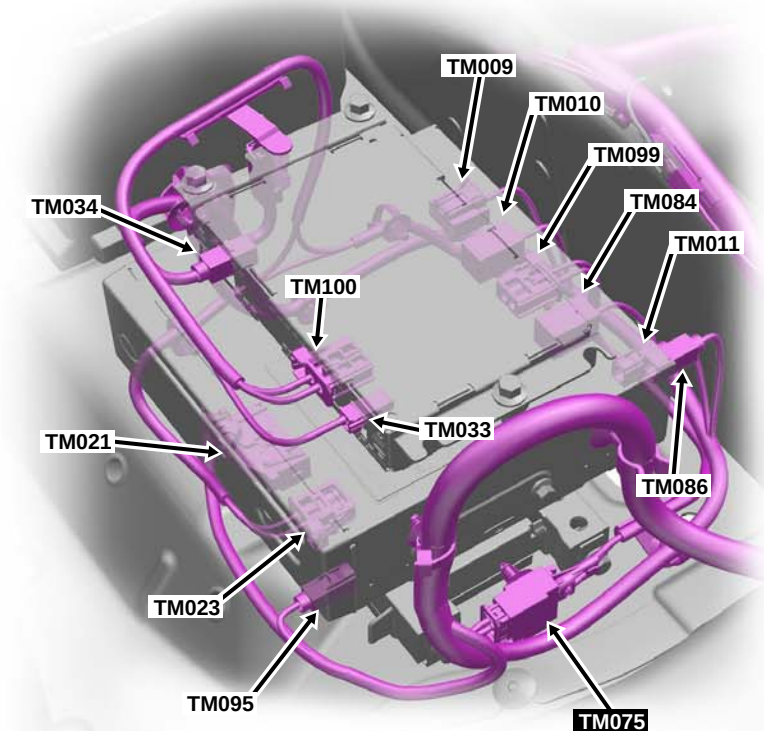

DETAIL F BEHIND REAR SEAT