

Maintenance

Engine oil specification

Jaguar recommends:



Use a 5W-30 engine oil, meeting Jaguar specification WSS M2C913-B is preferred. Where this is not possible, oil meeting ACEA A1/B1 or ACEA A3/B3 specification may be used.

Japan only: Use a 5W-30 oil, meeting specification ILSAC GF-4 API SM is preferred. Where this is not possible, oil meeting ILSAC GF-3 API SL specification may be used.

Engine oil temperature ranges

For climates ranging from -35°C to +50°C (-31°F to +122°F), the following oil viscosities may be used:

0W-30 protects from -35°C to +35°C (-31°F to +95°F).

5W-30 (preferred) protects from -30°C to +35°C (-22°F to +95°F).

0W-40 protects from -35°C to +50°C (-31°F to +122°F).

5W-40 protects from -30°C to +50°C (-22°F to +122°F).

ENGINE COOLANT CHECK

WARNINGS



The radiator cooling fans may continue to run after the ignition has been switched off, but will automatically switch off when the engine has cooled sufficiently.

CAUTION




Running the engine without coolant will cause serious engine damage.



If persistent coolant loss is noticed, seek qualified assistance immediately.

The coolant level in the expansion tank should be checked at least weekly (more frequently in high mileage or severe operating conditions). Always check the level when the system is cold.

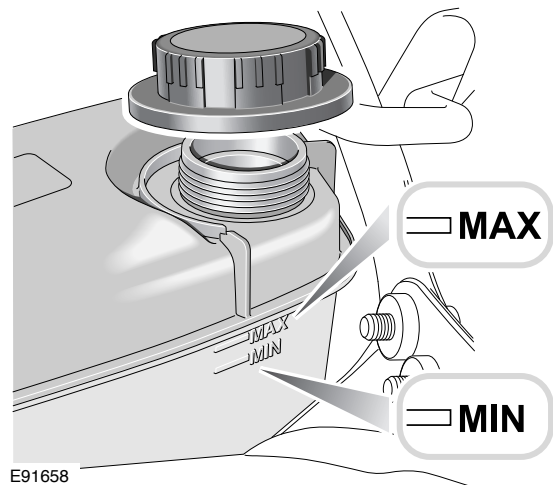

Ensure the coolant level is maintained between the **MAX** and **MIN** level indicators, located on the side of the expansion tank.

If the level has fallen appreciably, suspect leakage or overheating and arrange for the vehicle to be examined by a qualified technician.