


In-Vehicle Temperature Sensor

Removal

- 1 . Remove the instrument panel, lower trim panel.
For additional information, refer to Instrument Panel Lower Trim Panel (76.46.11)

- 2 . Remove the in-vehicle temperature sensor.

- ▶ Remove the Torx screw.
- ▶ Disconnect the electrical connector.

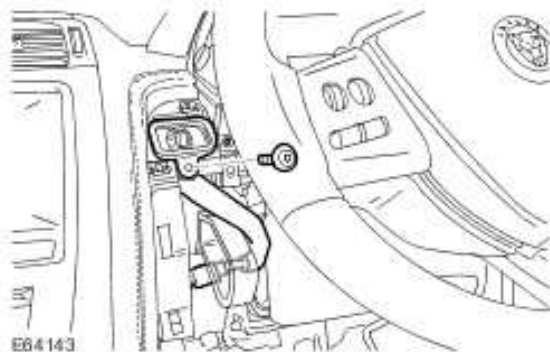

Installation

- 1 . Install the in-vehicle temperature sensor.

- ▶ Position the electrical harness.
- ▶ Connect and secure the electrical connector.
- ▶ Install the Torx screw.


- 2 . Install the instrument panel, lower trim panel.

For additional information, refer to Instrument Panel Lower Trim Panel (76.46.11)


Instrument Panel Lower Trim Panel

Removal

- 1 . Remove the instrument panel end trim panel.
 - ▶ Open the front door for access.
 - ▶ Carefully release the 3 clips.

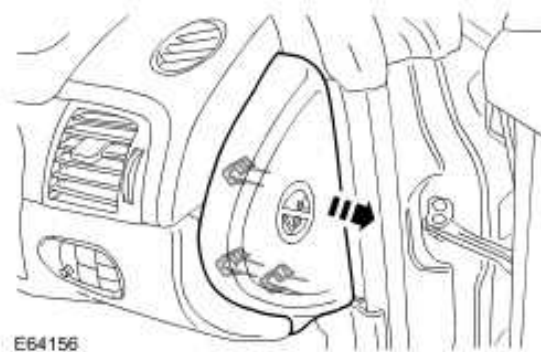



- 2 . Remove the instrument panel driver's side reinforcement trim panel.
 - ▶ Carefully release the 4 clips.

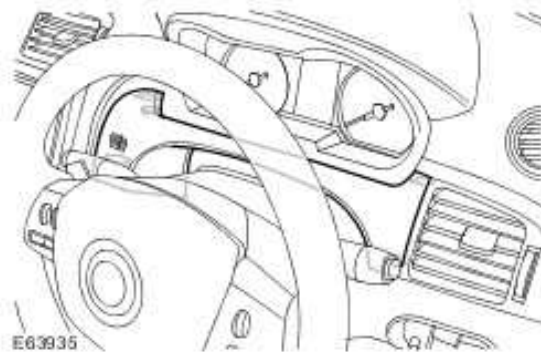

- 3 .  **CAUTION: Care must be taken to avoid damage to the mating surfaces.**

Carefully release and remove the rheostat switch assembly.

- ▶ Disconnect the electrical connector.

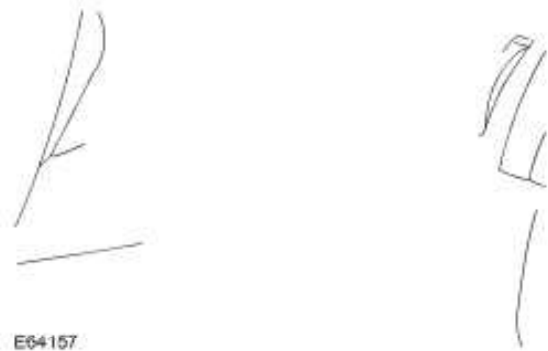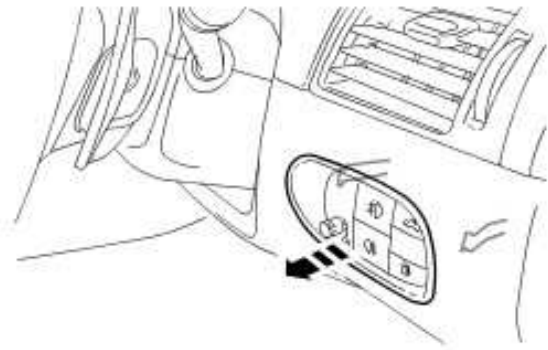

E64157

4



CAUTION: Removal of the clips is a delicate procedure, damage will occur if any force is used.

Remove the driver's side footwell trim panel.


▶ Carefully release the 3 clips.



E64158


5 . Release the MOST diagnostic port.

▶ Carefully release the clip.

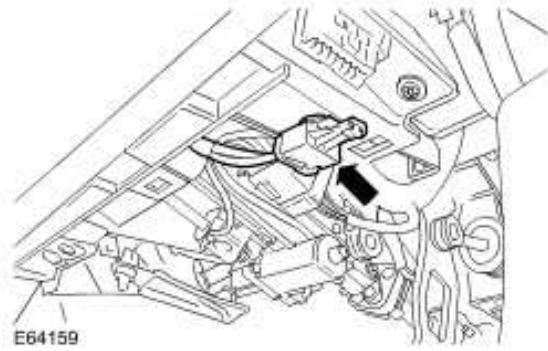

6 . Remove the instrument panel, lower trim panel.

- ▶ Remove the 3 Torx bolts.
- ▶ Remove the 2 Torx screws.
- ▶ Release the 2 clips.
- ▶ Release the vehicle diagnostic port.

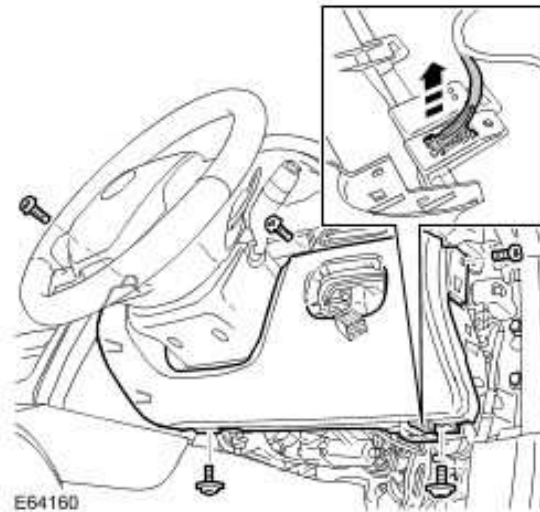

Installation

1 . Install the rheostat switch assembly and align the instrument panel lower trim panel.

- ▶ Secure the switch assembly clips.
- ▶ Connect the switch assembly electrical connector.

2 . Install the instrument panel, lower trim panel.

- ▶ Install and secure the diagnostic socket.
- ▶ Align the clips.
- ▶ Install the Torx screws.
- ▶ Install the Torx bolts and tighten to 6 Nm (4 lb.ft).

3 . Install the MOST diagnostic port.

▶ Secure the clip.

4 . Install the driver's side footwell trim panel.

▶ Carefully align and secure the clips.

5 . Install the instrument panel driver's side reinforcement trim panel.

▶ Align the pegs and secure with the clips.

6 . Install the instrument panel end trim panel.

▶ Release the door aperture seal.

▶ Carefully align and secure the clips.

▶ Install the aperture seal.