

DOOR WINDOW MOTOR INITIALIZATION

Door Window Motor Initialization

1. **NOTE:** After the battery has been disconnected it is necessary to initialize each door window motor separately to operate the 'one-touch' up function.

Operate the window control switch until the door window glass is in the fully closed position, continue to operate the window control switch for a further two seconds.

2. Release the window control switch.

3. Operate the window control switch in the closed position and continue to operate the window control switch for a further two seconds.

4. Operate the window control switch until the door window glass is in the fully open position ('one-touch' down).

5. **NOTE:**

- If the door window motor initialization has been completed correctly, when the window control switch is operated, the door window glass should move to the fully closed position ('one-touch' up) automatically.
- If the door window glass does not fully close automatically ('one-touch' up), repeat the complete procedure.

Operate the window control switch once to the close position.

6. Repeat the door window motor initialization for each door window motor.