




25. Remove the engine cover.
[Engine Cover \(76.11.35\)](#)

26. Remove the supercharger coolant fill plug.

- Remove and discard the sealing washer.

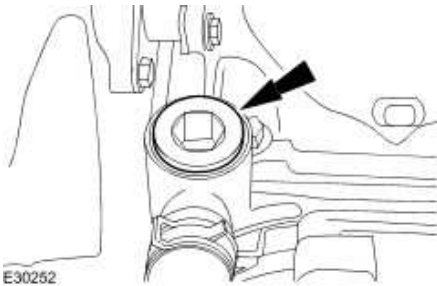

27.



CAUTION: Coolant may spill from the supercharger fill port when the ignition is switched on.

Switch the ignition on.

28.



CAUTION: Do not allow the supercharger coolant pump to run dry for more than one minute. Failure to follow this instruction may result in damage to the vehicle.

Allow the supercharger pump to run and top-up the coolant through the supercharger fill port.

- Switch the ignition off.

29. Install the supercharger coolant fill plug.

- Clean the components.
- Install a new sealing washer.
- Tighten to 45 Nm (33 lb.ft).