


Luggage Compartment Lid Alignment (76.19.03)


1. Remove the luggage compartment floor panel.
2. Remove the luggage compartment lid striker panel.
 - Remove the 4 Torx screws.




3. Remove the luggage compartment striker.
 - Remove the 2 Torx bolts.

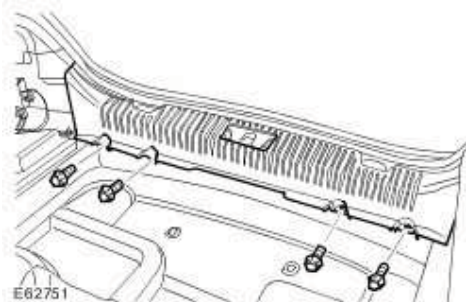

4. Remove the luggage compartment aperture seal.

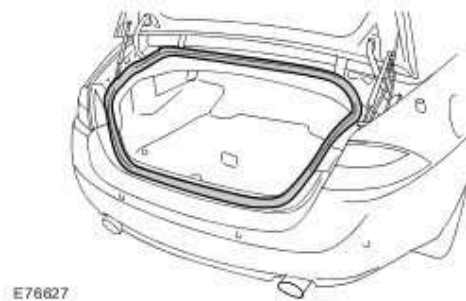

5. Remove the luggage compartment lid struts.
 - Release the 4 clips.

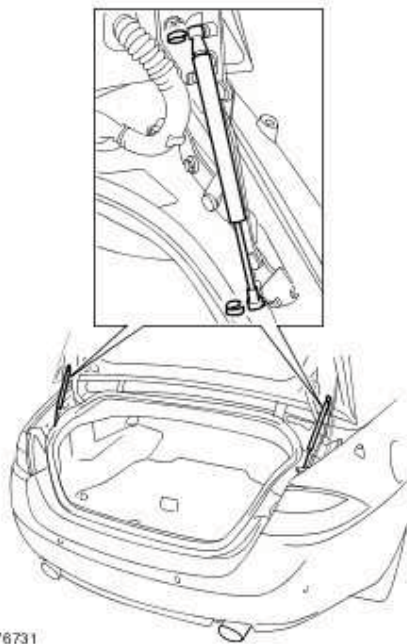


E76731

6. Loosen the luggage compartment lid hinge fixings.
 - Loosen but do not remove the 4 nuts.




E76628

7. Make sure the gaps between the luggage compartment lid are all 3.5 mm.

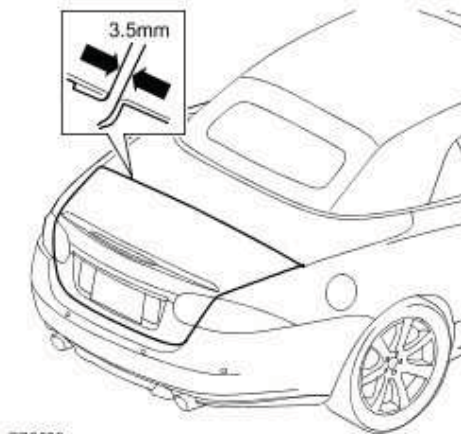

E76629


8. Make sure the luggage compartment lid to rear bumper gap is 6.8 mm.

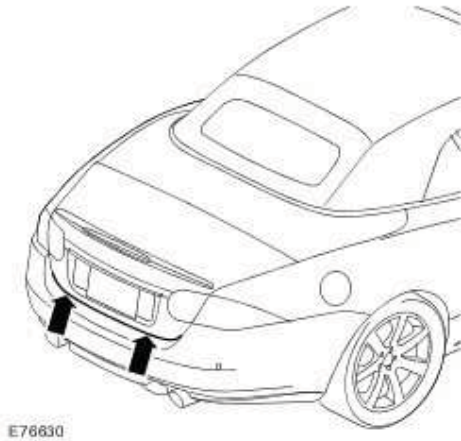

9. Tighten the luggage compartment lid hinge nuts to 23 Nm (17 lb.ft).

10. Loosen the luggage compartment lid hinge to body fixings.

- Loosen the 6 bolts.

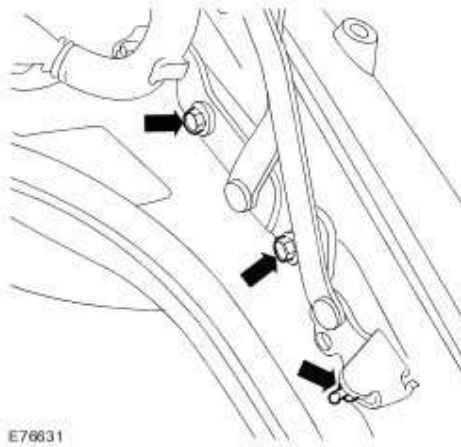

11. Make sure the gaps between the luggage compartment lid are all 3.5 mm.

12. Tighten the luggage compartment lid hinge to body bolts, to 23 Nm (17 lb.ft).

13. Install the luggage compartment lid support struts.

- Secure the 4 clips.

14. With the luggage compartment lid closed, check the profile of the luggage compartment lid to convertible top compartment lid, and luggage compartment lid to rear body side is flush;

adjust as necessary.



E76632

15. Install the luggage compartment lid aperture seal.
16. Install the luggage compartment lid striker.
17. Install the luggage compartment lid striker trim panel.
 - Install the 4 Torx screws
18. Install the luggage compartment floor panel.