


**NOTE:**

Note the fitted position.

Remove the fuel filter.

- ▶ Position a container to collect spillage.
- ▶ Remove the nut.
- ▶ Disconnect the 2 fuel lines.

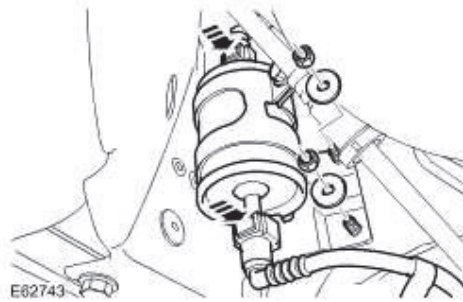

4 . Remove the fuel filter bracket.

- ▶ Remove the bolt.



## Installation

1 . Attach the fuel filter support bracket.