


TIRE PRESSURE MONITORING SYSTEM (TPMS)

COMPONENT LOCATION

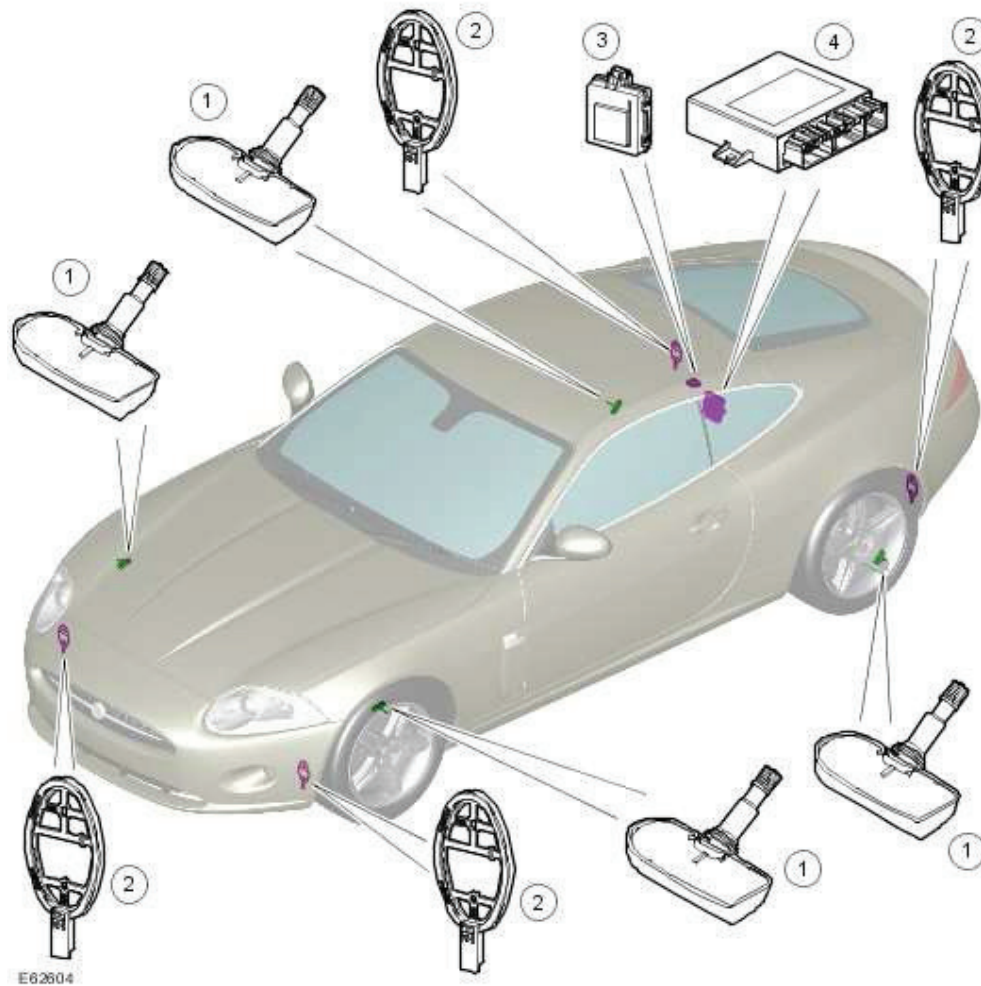

Item	Part Number	Description
1		Tire pressure sensor (4 off)
2		Initiator (4 off)
3		Tire Pressure Monitoring System (TPMS) receiver
4		TPMS module