


XK CONNECTOR QUICK REFERENCE GUIDE

Document Objective: To provide basic connector location information only, including in-lines and grounds.
For detailed connector information refer to the Electrical Reference Library (ERL).

All paper copies are uncontrolled.

Note: For improved clarity some harnesses have been omitted completely e.g. engines, seats, bumpers, steering, climate control and some link leads. Based on convertible, some coupe differences identified.

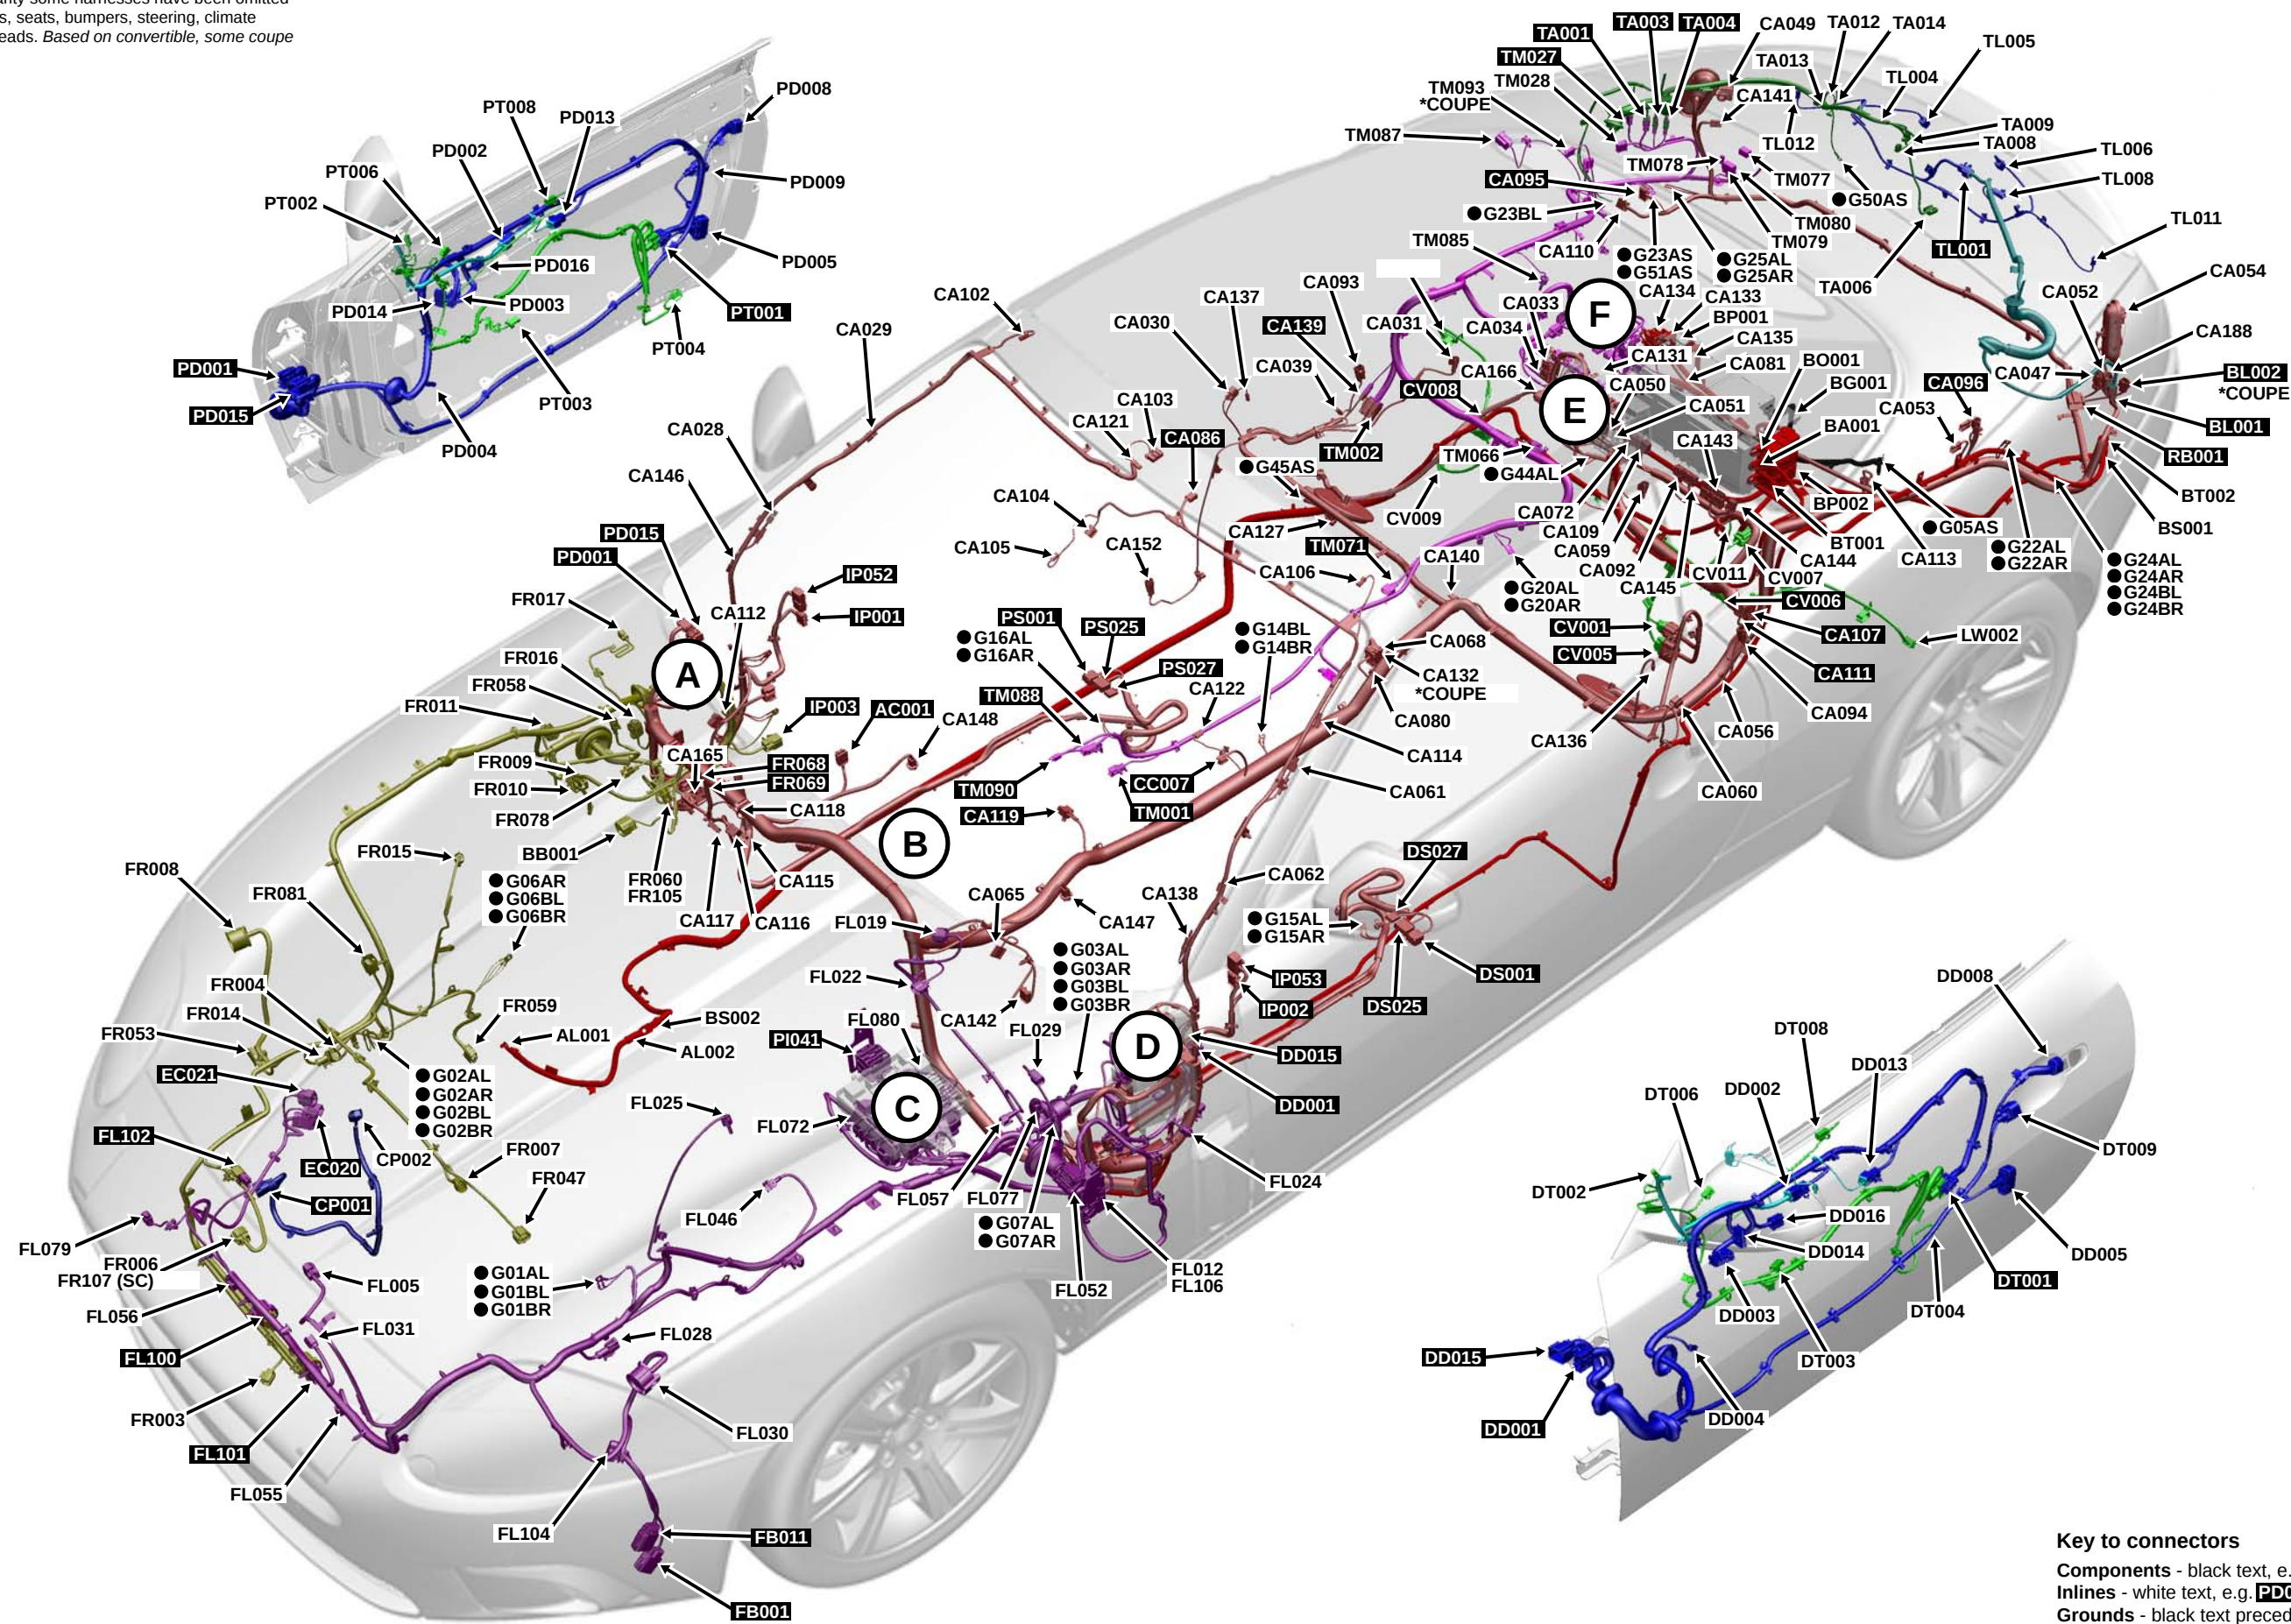



Key to connectors
Components - black text, e.g. CA010
Inlines - white text, e.g. PD001
Grounds - black text preceded by a dot, e.g. ●G02AL

XK CONNECTOR QUICK REFERENCE GUIDE


VIN: B20075 >

All paper copies are uncontrolled.

DETAIL B IP AND CENTRE CONSOLE

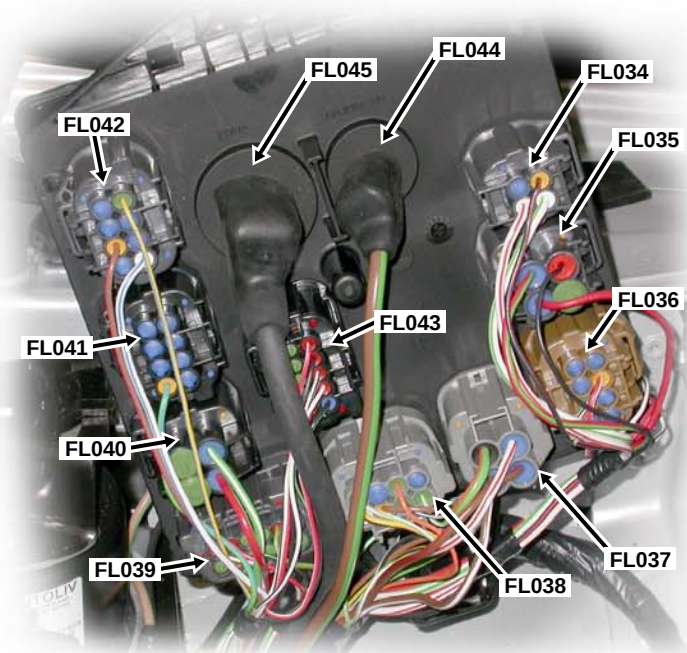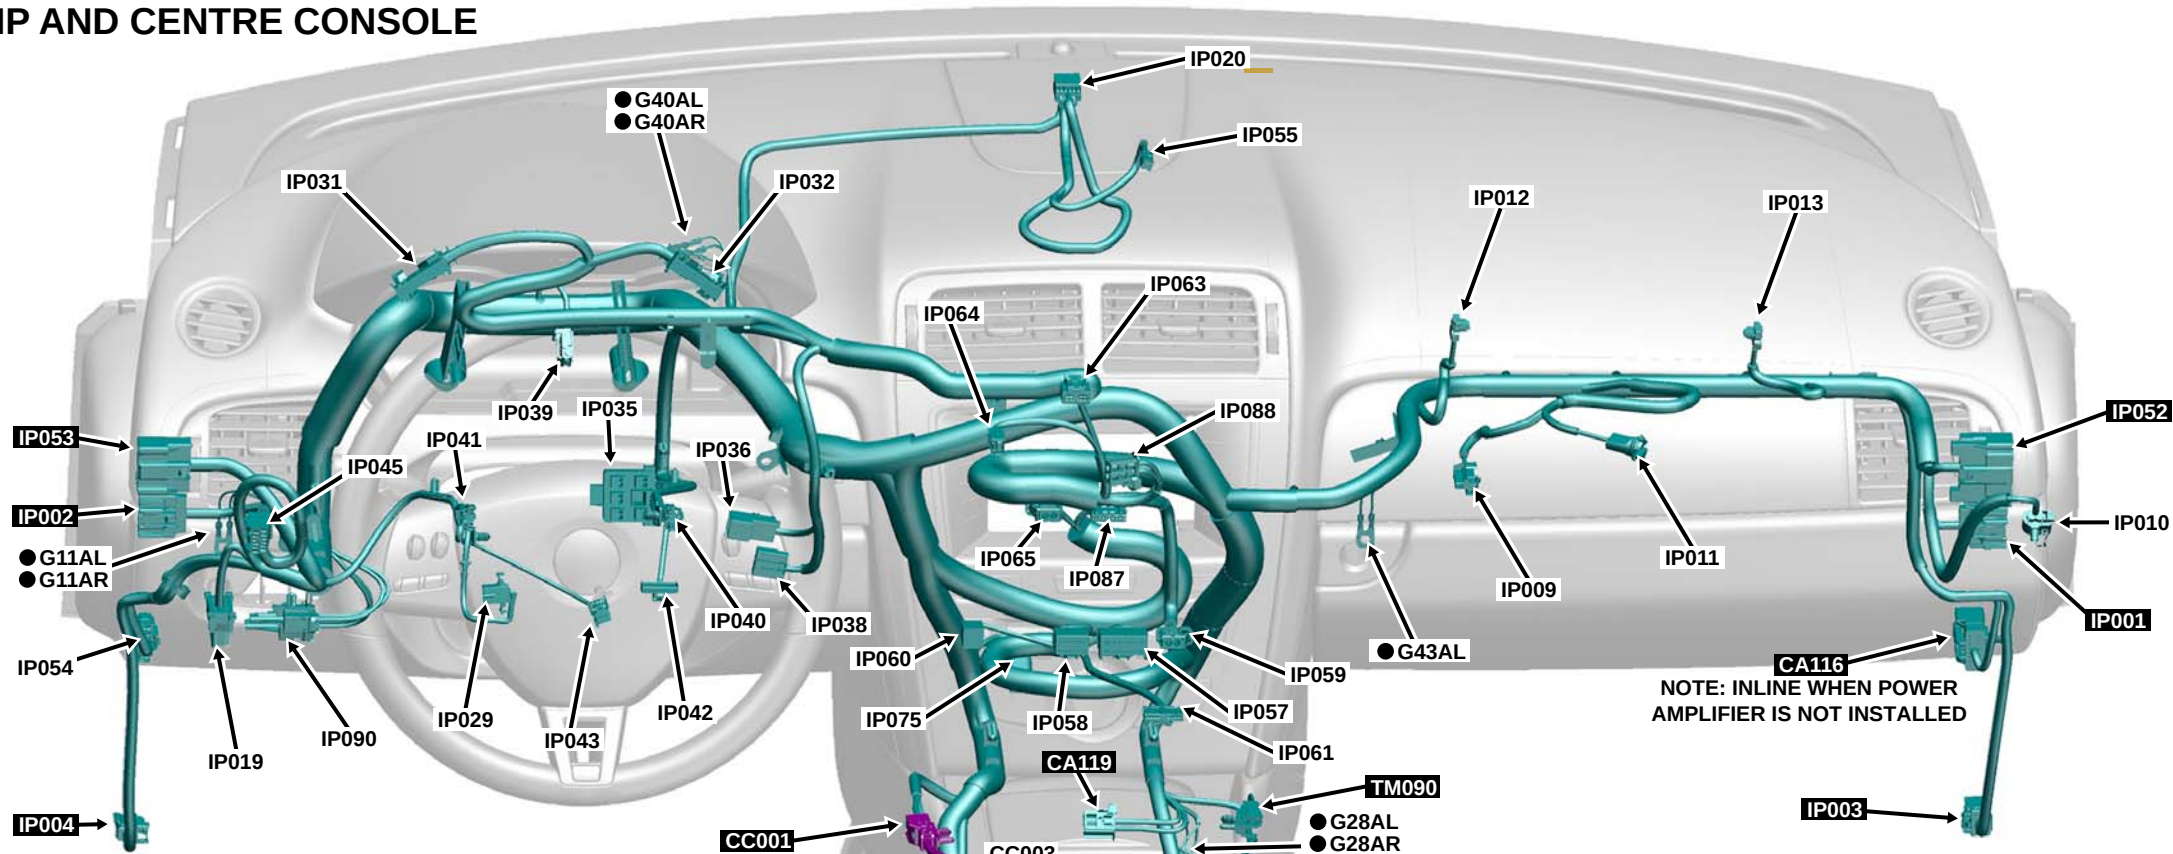


DETAIL C POWER DISTRIBUTION BOX

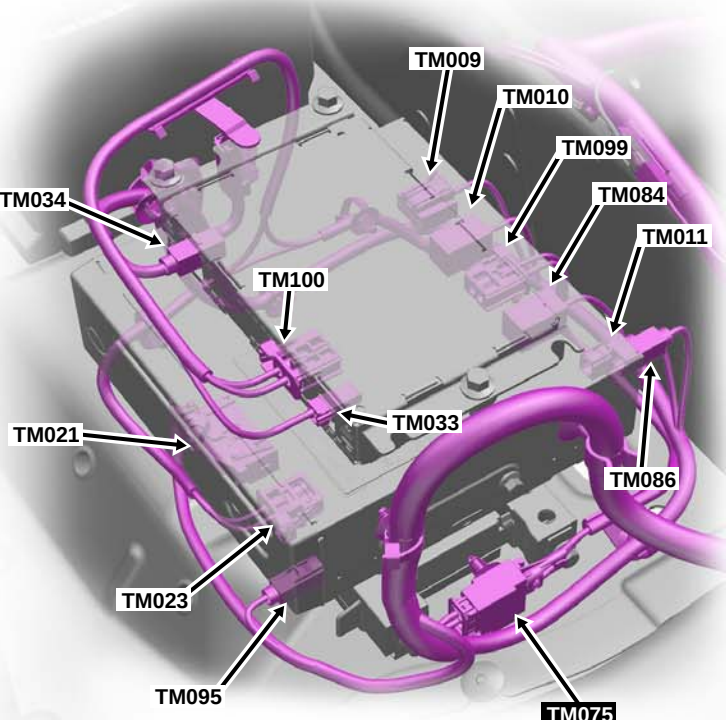


DETAIL F BEHIND REAR SEAT

DETAIL D CENTRAL JUNCTION BOX

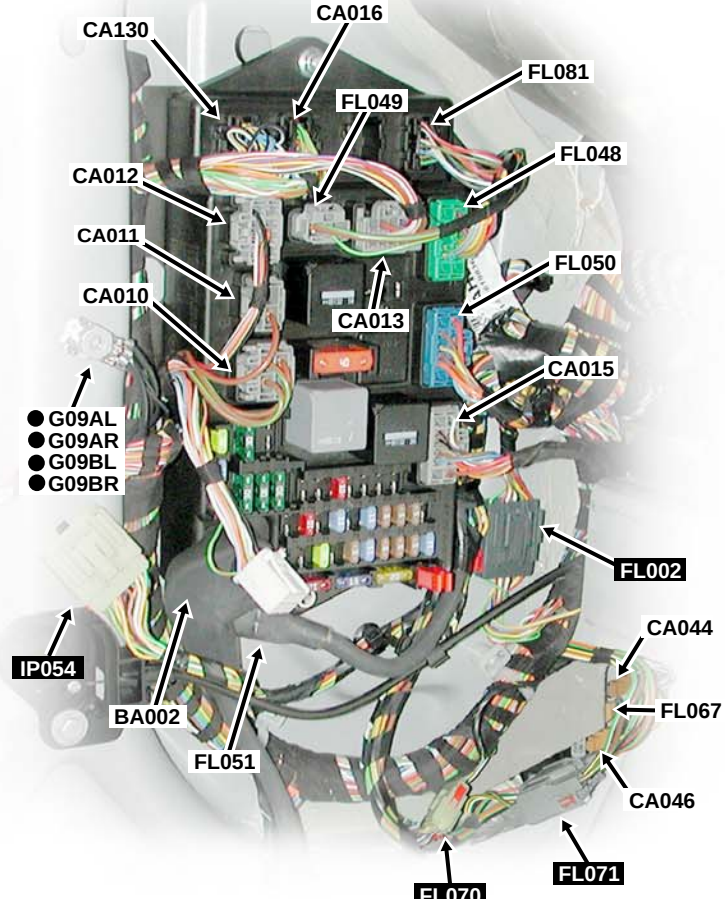

DETAIL E AUXILIARY (REAR) JUNCTION BOX

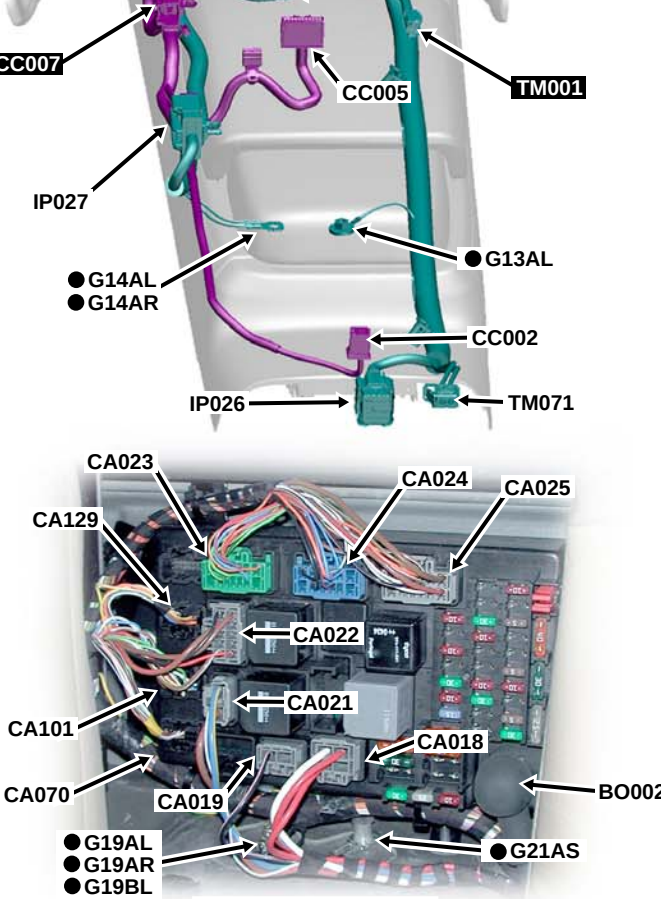

DETAIL A RH 'A' POST

