


Front Scuff Plate Trim Panel (76.13.81)

Removal

- 1 . Remove and discard the scuff plate decal.
 - ▶ Release the adhesive strip.
- 2 . Remove the front scuff plate trim panel.
 - ▶ Remove the 5 Torx screws.
 - ▶ Carefully release horizontally.

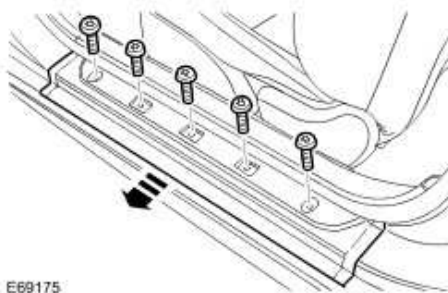

Installation

- 1 . Install the front scuff plate trim panel.
 - ▶ Align the component.
 - ▶ Tighten the Torx screws to 6 Nm (4 lb.ft).
- 2 . Install the scuff plate decal.
 - ▶ Remove backing tape from adhesive strip.
 - ▶ Clean the adhesive contact area.