


XK CONNECTOR QUICK REFERENCE GUIDE

Document Objective: To provide basic connector location information only, including in-lines and grounds.
For detailed connector information refer to the Electrical Reference Library (ERL).

All paper copies are uncontrolled.

Note: For improved clarity some harnesses have been omitted completely e.g. engines, seats, bumpers, steering, climate control and some link leads. Based on convertible, some coupe differences identified.

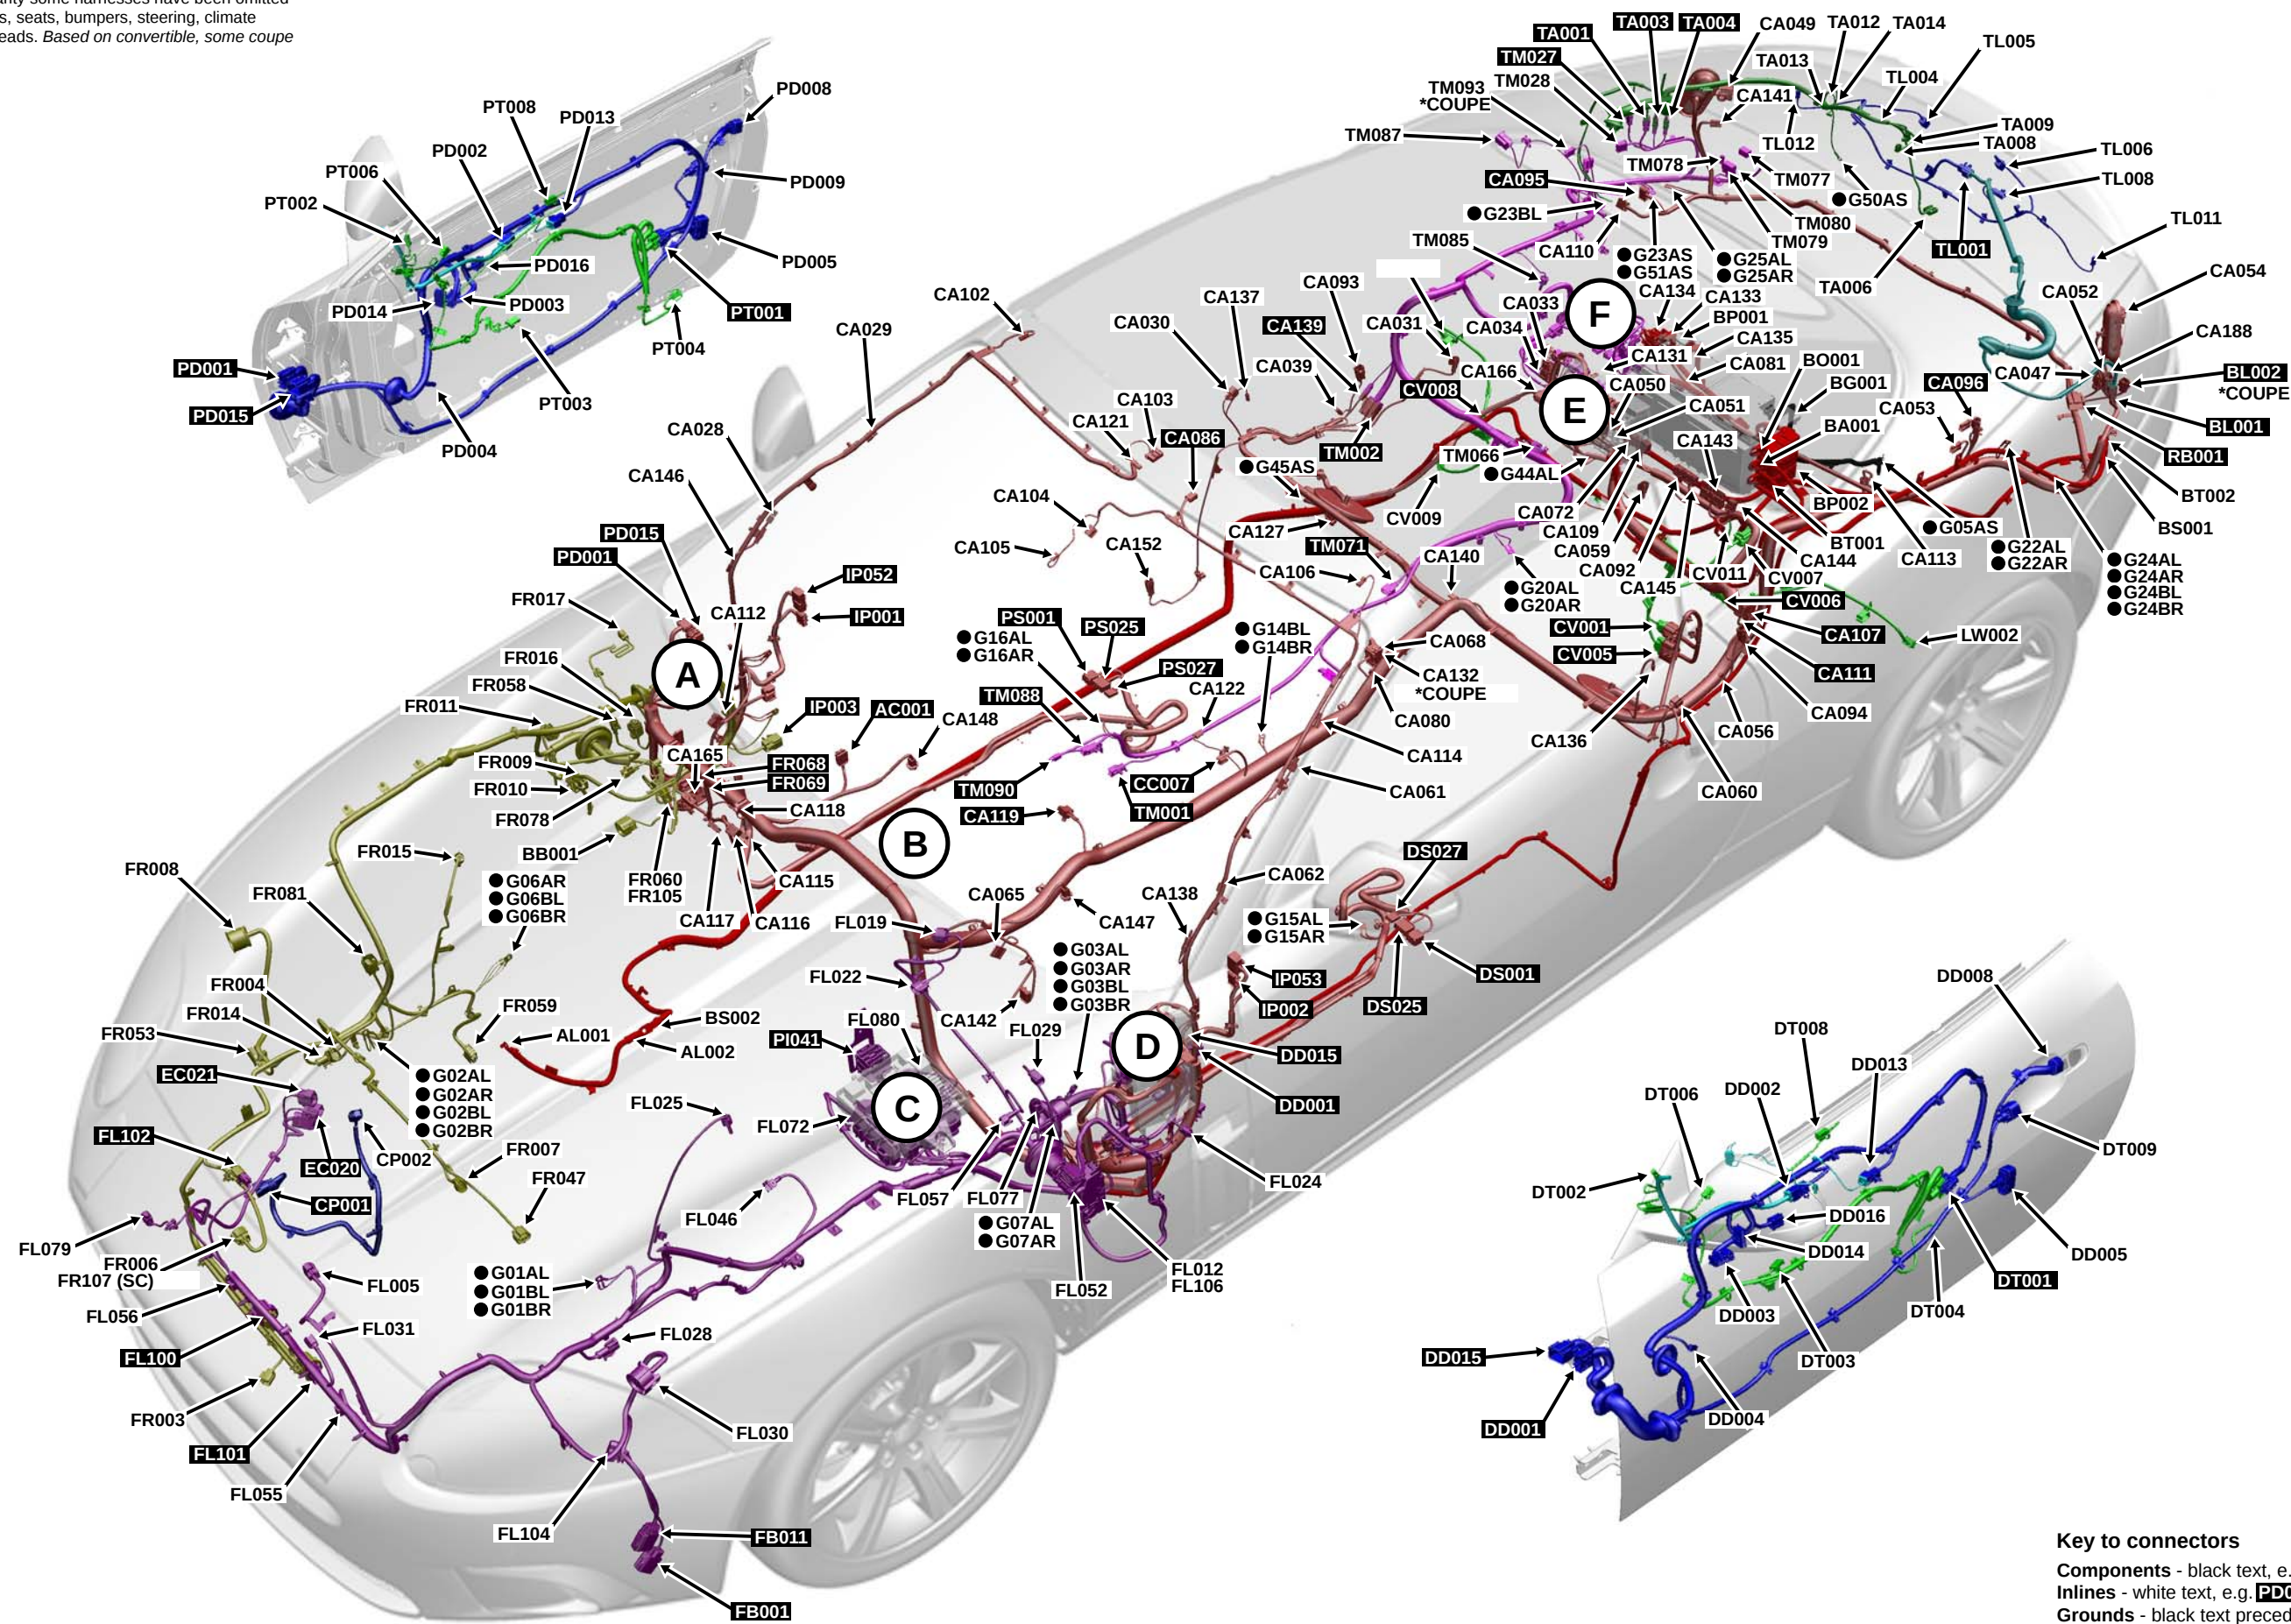

Key to connectors
Components - black text, e.g. CA010
Inlines - white text, e.g. PD001
Grounds - black text preceded by a dot, e.g. G02AL



XK CONNECTOR QUICK REFERENCE GUIDE

VIN: B20075 >


All paper copies are uncontrolled.

DETAIL B



IP AND CENTRE CONSOLE

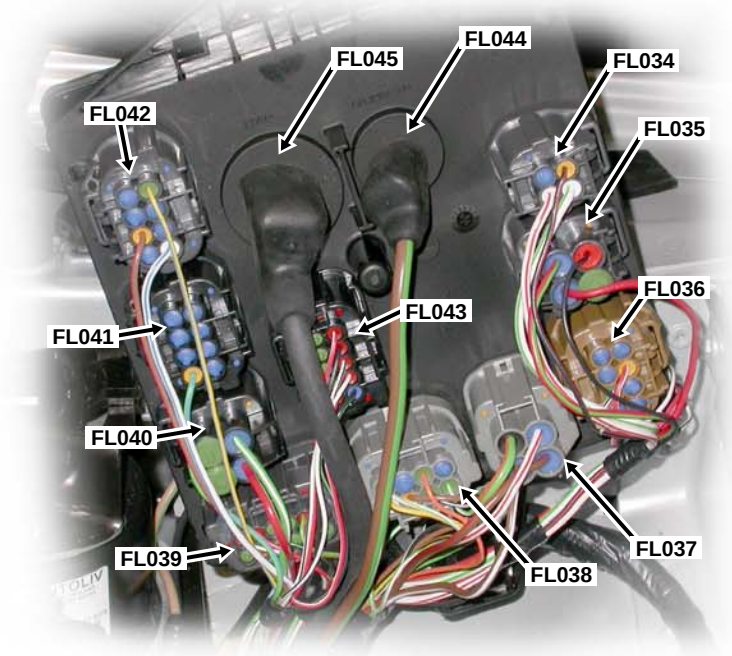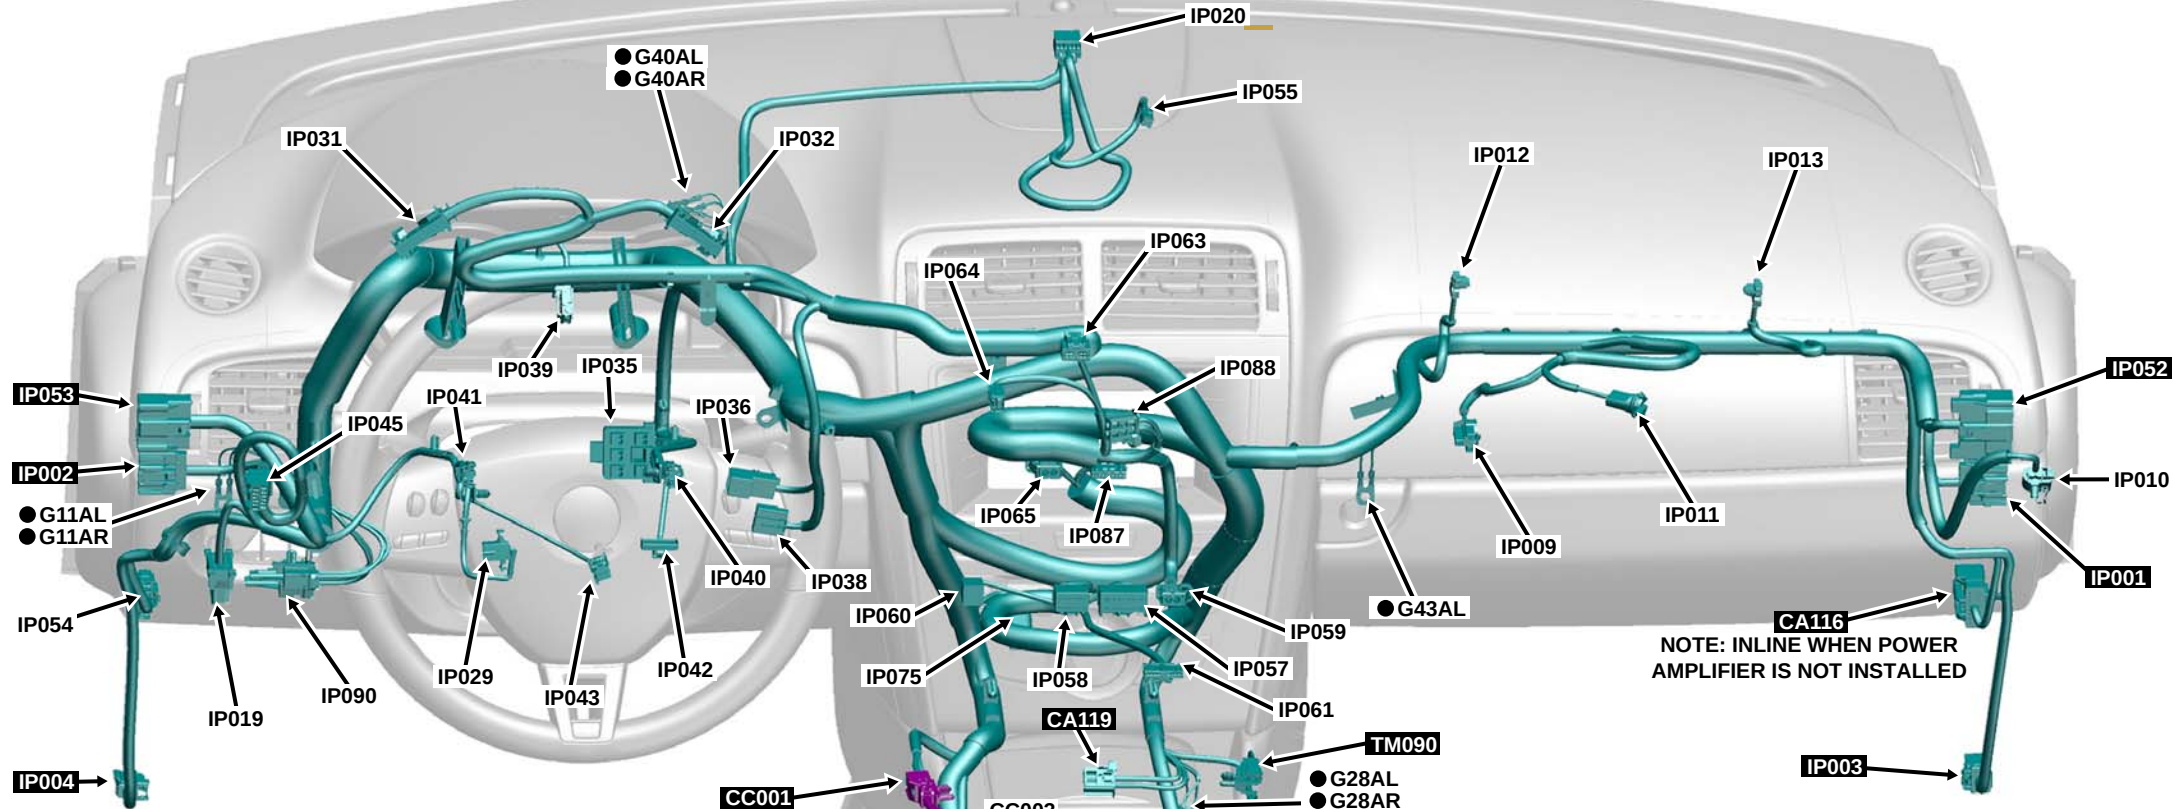

DETAIL C
POWER DISTRIBUTION BOX

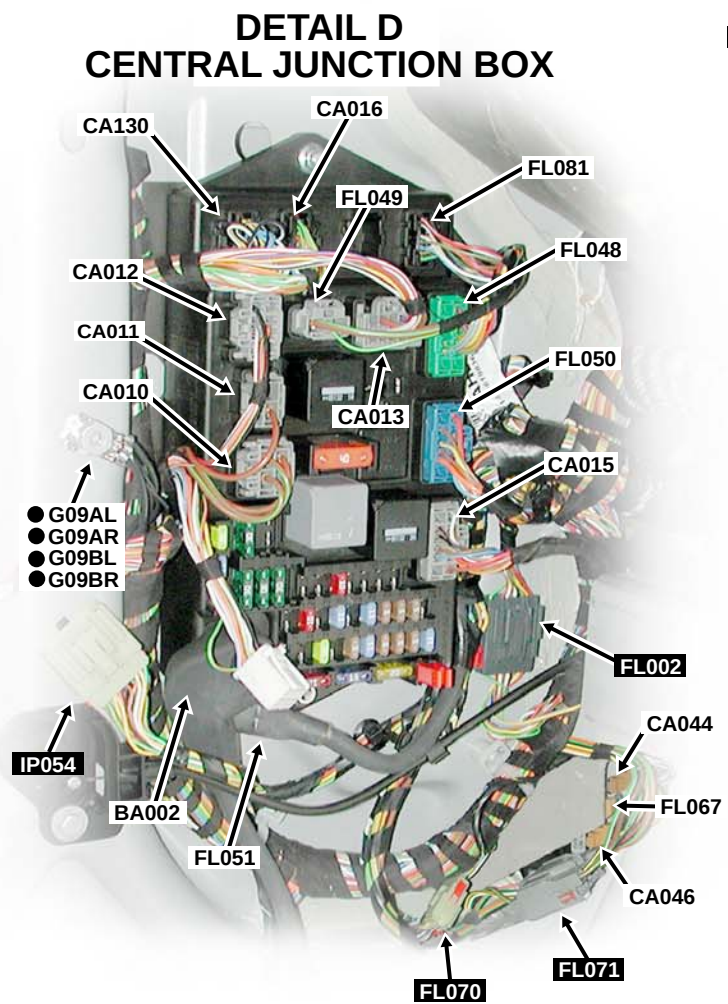


DETAIL D CENTRAL JUNCTION BOX

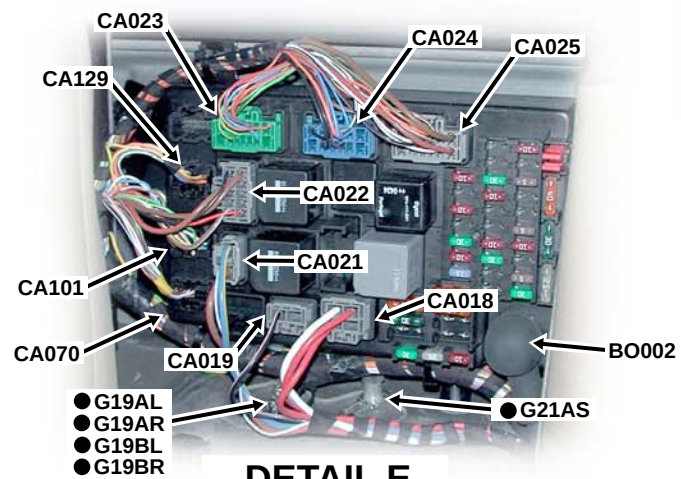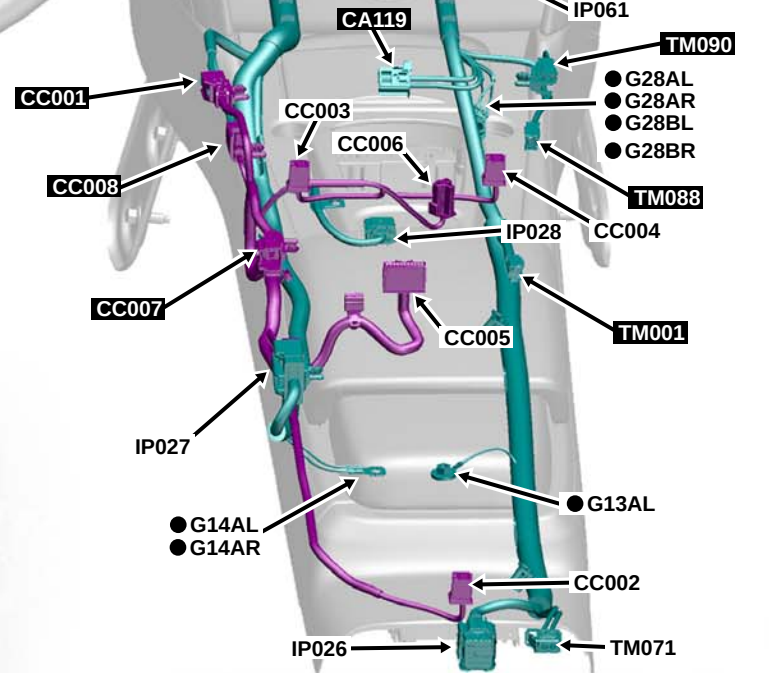


●G19BR

DETAIL E

AUXILIARY (REAR) JUNCTION BOX

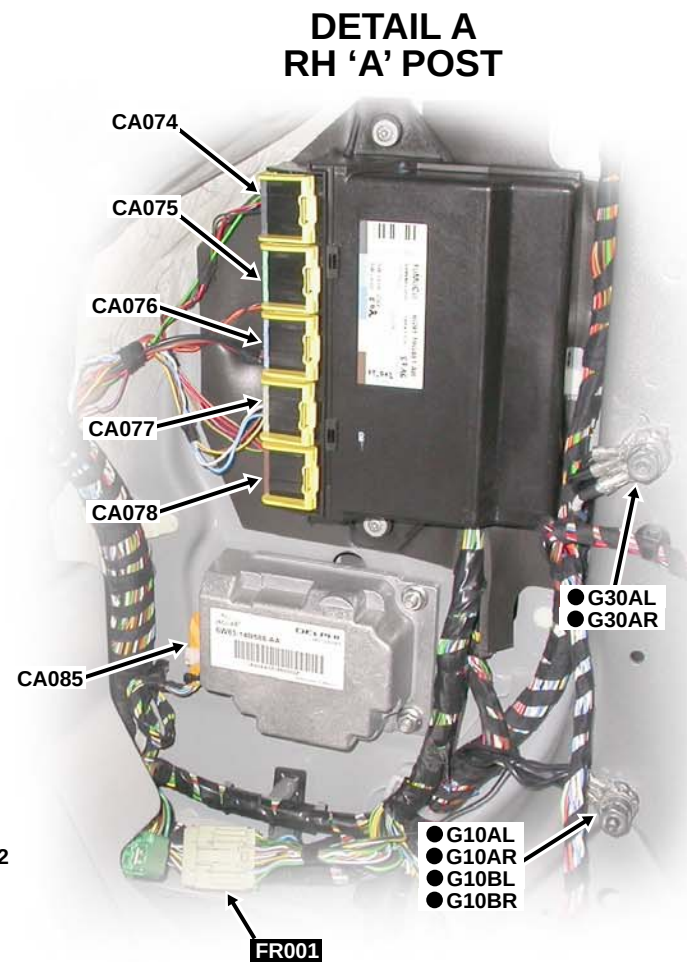

DETAIL A RH 'A' POST

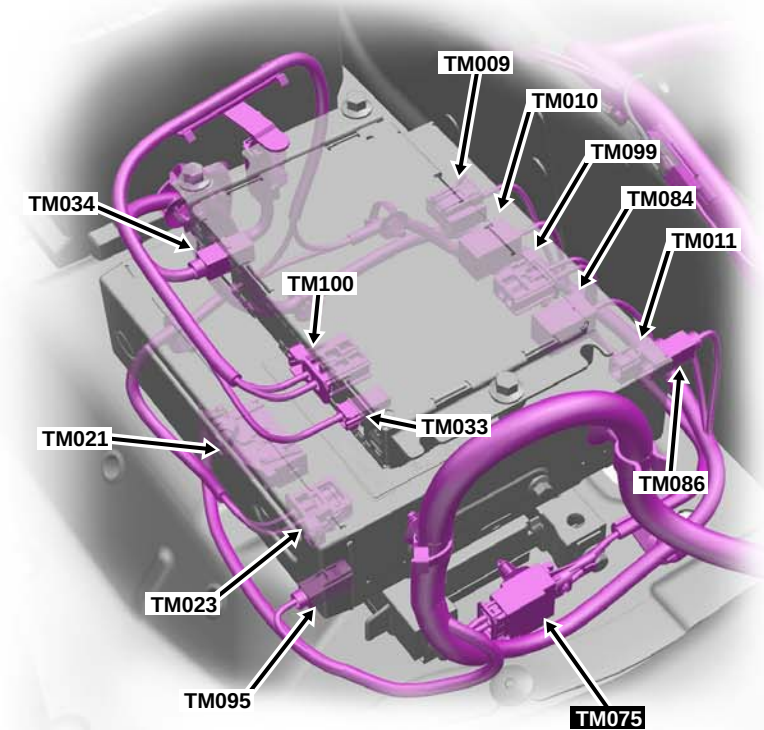

DETAIL F BEHIND REAR SEAT