

Connector	Description	Color	Cav	Location	Harness
G01AL	Ground point		1	Behind LH front fender splash shield	FRONT LEFT
G01BL	Ground point		1	Behind LH front fender splash shield	FRONT LEFT
G01BR	Ground point		1	Behind LH front fender splash shield	FRONT LEFT
G02AL	Ground point		1	Below RH front wheelarch	FRONT RIGHT
G02AR	Ground point		1	Below RH front wheelarch	FRONT RIGHT
G02BS	Ground point		1	Below RH front wheelarch	FRONT RIGHT
G03AL	Ground point		1	Rear LH side of engine compartment	FRONT LEFT
G03AR	Ground point		1	Rear LH side of engine compartment	FRONT LEFT
G03BL	Ground point		1	Rear LH side of engine compartment	FRONT LEFT
G03BR	Ground point		1	Rear LH side of engine compartment	FRONT LEFT
G05AS	Ground point		1	Front of luggage compartment - LH side	BATTERY NEGATIVE
G06AS	Ground point		1	Rear RH side of engine compartment	FRONT RIGHT
G07AL	Ground point		1	Rear LH side of engine compartment	FRONT LEFT
G07AR	Ground point		1	Rear LH side of engine compartment	FRONT LEFT
G09AL	Ground point		1	LH 'A' post	CABIN LH
G09AL	Ground point		1	LH 'A' post	CABIN RH
G09AR	Ground point		1	LH 'A' post	CABIN LH
G09AR	Ground point		1	LH 'A' post	CABIN RH
G09BL	Ground point		1	LH 'A' post	CABIN LH
G09BL	Ground point		1	LH 'A' post	CABIN RH
G09BR	Ground point		1	LH 'A' post	CABIN LH
G09BR	Ground point		1	LH 'A' post	CABIN RH
G10AL	Ground point		1	Base of RH 'A' post	CABIN LH
G10AL	Ground point		1	Base of RH 'A' post	CABIN RH
G10AR	Ground point		1	Base of RH 'A' post	CABIN LH
G10AR	Ground point		1	Base of RH 'A' post	CABIN RH
G10BL	Ground point		1	Base of RH 'A' post	CABIN LH
G10BL	Ground point		1	Base of RH 'A' post	CABIN RH
G10BR	Ground point		1	Base of RH 'A' post	CABIN LH
G10BR	Ground point		1	Base of RH 'A' post	CABIN RH
G11AL	Ground point		1	Behind LH side of Instrument panel	INSTRUMENT PANEL
G11AR	Ground point		1	Behind LH side of Instrument panel	INSTRUMENT PANEL
G12AL	Ground point		1	Behind instrument cluster	INSTRUMENT PANEL
G12AR	Ground point		1	Behind instrument cluster	INSTRUMENT PANEL
G12BL	Ground point		1	Behind instrument cluster	INSTRUMENT PANEL
G12BR	Ground point		1	Behind instrument cluster	INSTRUMENT PANEL
G13AL	Ground point		1	Beneath center console	INSTRUMENT PANEL
G13AL	Ground point		1	Beneath center console	INSTRUMENT PANEL
G14AL	Ground point		1	Beneath center console	INSTRUMENT PANEL
G14AL	Ground point		1	Beneath center console	INSTRUMENT PANEL

Connector	Description	Color	Cav	Location	Harness
G14AR	Ground point		1	Beneath center console	INSTRUMENT PANEL
G14AR	Ground point		1	Beneath center console	INSTRUMENT PANEL
G14BL	Ground point		1	Beneath center console	CABIN LH
G14BL	Ground point		1	Beneath center console	CABIN RH
G14BR	Ground point		1	Beneath center console	CABIN LH
G14BR	Ground point		1	Beneath center console	CABIN RH
G15AL	Ground point		1	Beneath LH Front seat	CABIN LH
G15AL	Ground point		1	Beneath LH Front seat	CABIN RH
G15AR	Ground point		1	Beneath LH Front seat	CABIN LH
G15AR	Ground point		1	Beneath LH Front seat	CABIN RH
G16AL	Ground point		1	Beneath RH Front seat	CABIN LH
G16AL	Ground point		1	Beneath RH Front seat	CABIN RH
G16AR	Ground point		1	Beneath RH Front seat	CABIN LH
G16AR	Ground point		1	Beneath RH Front seat	CABIN RH
G19AL	Ground point		1	Behind rear seat backrest	CABIN LH
G19AL	Ground point		1	Behind rear seat backrest	CABIN RH
G19AR	Ground point		1	Behind rear seat backrest	CABIN LH
G19AR	Ground point		1	Behind rear seat backrest	CABIN RH
G19BL	Ground point		1	Behind rear seat backrest	CABIN LH
G19BL	Ground point		1	Behind rear seat backrest	CABIN RH
G19BR	Ground point		1	Behind rear seat backrest	CABIN LH
G19BR	Ground point		1	Behind rear seat backrest	CABIN RH
G21AS	Ground point		1	Behind rear seat backrest	CABIN LH
G21AS	Ground point		1	Behind rear seat backrest	CABIN RH
G21BL	Ground point		1	Behind rear seat backrest	TELEMATICS
G21BR	Ground point		1	Behind rear seat backrest	TELEMATICS
G22AL	Ground point		1	Behind luggage compartment carpet LH side	CABIN LH
G22AL	Ground point		1	Behind luggage compartment carpet LH side	CABIN RH
G22AR	Ground point		1	Behind luggage compartment carpet LH side	CABIN LH
G22AR	Ground point		1	Behind luggage compartment carpet LH side	CABIN RH
G22AS	Ground point		1	Behind luggage compartment carpet LH side	CABIN LH
G22AS	Ground point		1	Behind luggage compartment carpet LH side	CABIN RH
G23AL	Ground point		1	Behind luggage compartment carpet RH side	CABIN LH
G23AL	Ground point		1	Behind luggage compartment carpet RH side	CABIN RH
G23AR	Ground point		1	Behind luggage compartment carpet RH side	CABIN LH
G23AR	Ground point		1	Behind luggage compartment carpet RH side	CABIN RH
G23BS	Ground point		1	Behind luggage compartment carpet RH side	TAILGATE ANTENNA
G24AL	Ground point		1	Behind luggage compartment carpet LH side	CABIN LH
G24AL	Ground point		1	Behind luggage compartment carpet LH side	CABIN RH
G24AR	Ground point		1	Behind luggage compartment carpet LH side	CABIN LH
G24AR	Ground point		1	Behind luggage compartment carpet LH side	CABIN RH

Connector	Description	Color	Cav	Location	Harness
G24BL	Ground point		1	Behind luggage compartment carpet LH side	CABIN LH
G24BL	Ground point		1	Behind luggage compartment carpet LH side	CABIN RH
G24BR	Ground point		1	Behind luggage compartment carpet LH side	CABIN LH
G24BR	Ground point		1	Behind luggage compartment carpet LH side	CABIN RH
G25AS	Ground point		1	Behind luggage compartment carpet RH side	TELEMATICS
G28AL	Ground point		1	Behind front of center console	INSTRUMENT PANEL
G28AL	Ground point		1	Behind front of center console	INSTRUMENT PANEL
G28AR	Ground point		1	Behind front of center console	INSTRUMENT PANEL
G28AR	Ground point		1	Behind front of center console	INSTRUMENT PANEL
G28BL	Ground point		1	Behind front of center console	INSTRUMENT PANEL
G28BL	Ground point		1	Behind front of center console	INSTRUMENT PANEL
G28BR	Ground point		1	Behind front of center console	INSTRUMENT PANEL
G28BR	Ground point		1	Behind front of center console	INSTRUMENT PANEL
G30AL	Ground point		1	Base of RH 'A' post	CABIN LH
G30AR	Ground point		1	Base of RH 'A' post	CABIN LH
G30AR	Ground point		1	Base of RH 'A' post	CABIN RH
G30BS	Ground point		1	Base of RH 'A' post	FRONT RIGHT
G40AL	Ground point		1	Behind instrument cluster	INSTRUMENT PANEL
G40AR	Ground point		1	Behind instrument cluster	INSTRUMENT PANEL
G41AL	Ground point		1	Behind instrument cluster	INSTRUMENT PANEL
G41AR	Ground point		1	Behind instrument cluster	INSTRUMENT PANEL
G42AL	Ground point		1	Behind passenger side of Instrument panel	INSTRUMENT PANEL
G42AR	Ground point		1	Behind passenger side of Instrument panel	INSTRUMENT PANEL
G43AL	Ground point		1	Under RH side of Instrument panel	INSTRUMENT PANEL
G43AR	Ground point		1	Under RH side of Instrument panel	INSTRUMENT PANEL
G44AL	Ground point		1	Behind rear seat backrest	CABIN LH
G44AL	Ground point		1	Behind rear seat backrest	CABIN RH
G45AS	Ground point		1	Body-RH-side of fuel tank	CABIN LH
G45AS	Ground point		1	Body-RH-side of fuel tank	CABIN RH
G50AS	Ground point		1	Luggage compartment lid - inside	TAILGATE ANTENNA
G51AS	Ground point		1	Behind luggage compartment carpet RH side	TAILGATE ANTENNA
G52AS	Ground point		1	Top of taildoor - RH side	TAILGATE ANTENNA
IP001	Main harness to instrument panel harness	Dark grey	22	Behind RH side of Instrument panel	INSTRUMENT PANEL
IP001	Main harness to instrument panel harness	Dark grey	22	Behind RH side of Instrument panel	CABIN LH
IP001	Main harness to instrument panel harness	Dark grey	22	Behind RH side of Instrument panel	CABIN RH
IP001	Main harness to instrument panel harness	Dark grey	22	Behind RH side of Instrument panel	INSTRUMENT PANEL
IP002	Main harness to instrument panel harness	Green	22	Behind LH side of Instrument panel	INSTRUMENT PANEL
IP002	Main harness to instrument panel harness	Green	22	Behind LH side of Instrument panel	CABIN LH
IP002	Main harness to instrument panel harness	Green	22	Behind LH side of Instrument panel	CABIN RH
IP002	Main harness to instrument panel harness	Green	22	Behind LH side of Instrument panel	INSTRUMENT PANEL