

# Power Steering Fluid Reservoir - 4.2L SC V8 - AJV8 (57.15.08)

## Removal




**CAUTION:** If power steering fluid comes into contact with the paintwork, the affected area must be immediately washed down with cold water.

1 . Remove the engine cover.

For additional information, refer to Engine Cover (76.11.35)

2 . Remove the LH intake air resonator.


- Remove the bolt.
- Release the 2 clips.
- Disconnect the engine breather line.

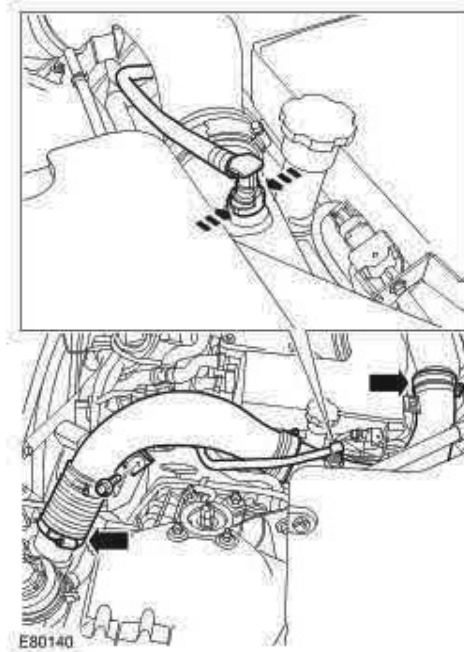

3 . Release the power steering fluid reservoir.

▶ Remove the 2 bolts.




4  **CAUTION:** Before disconnecting or removing the components, ensure the area around the joint faces and connections are clean and dry. Plug open connections to prevent contamination.

Release the 2 power steering fluid reservoir lines.

▶ Position a container to collect the fluid.

▶ Release the feed line clip.


▶ Remove and discard the return line clip.

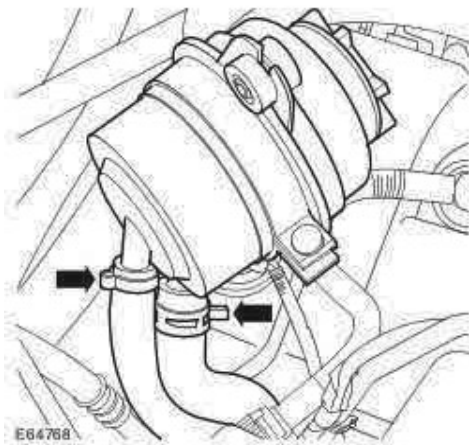

5 . Remove the power steering fluid reservoir.

## Installation

1 . Attach the power steering fluid reservoir lines.

 Clean the components.


 Secure with the clips.

2 . Secure the power steering fluid reservoir.

 Tighten the bolts to 6 Nm (4 lb.ft).

3 . Install the intake air resonator.

 Tighten the clips.

 Tighten the bolt to 10 Nm (7 lb.ft).

 Connect the engine breather line.

4 . Install the engine cover.

For additional information, refer to Engine Cover (76.11.35)

5 . Check and top-up power steering fluid level.

For additional information, refer to Power Steering System Bleeding (57.15.02 )