


Exterior Mirror Glass (76.10.53)

Removal

- 1 Remove the exterior mirror glass.
 - ▶ Carefully apply pressure to the outer edge of the glass, to release the 2 clips.
 - ▶ Disconnect the 2 electrical connectors.

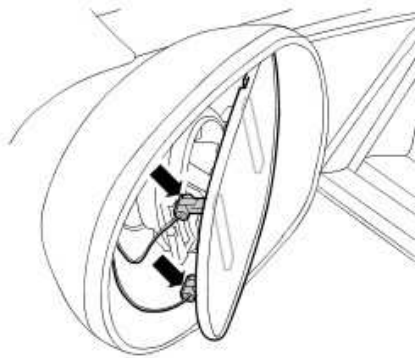

E67917

Installation


- 1 . Install the exterior mirror glass.
 - ▶ Connect the electrical connectors.
 - ▶ Align the glass to the motor.
 - ▶ Apply an even pressure to secure glass to the clips.
- 2 . Check the operation of the exterior mirror.

Exterior Mirror Motor (76.10.57)

Removal

1 Remove the exterior mirror glass.



- ▶ Carefully apply pressure to the outer edge of the glass, to release the 2 clips.
- ▶ Disconnect the 2 electrical connectors.

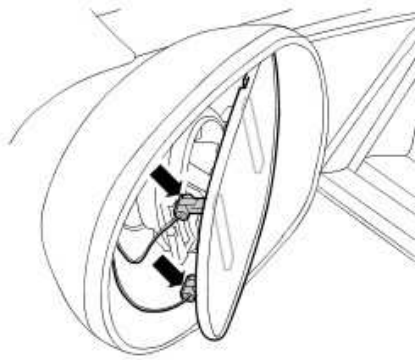

E67917

2 . Remove the exterior mirror motor.

- ▶ Remove the 3 Torx screws.
- ▶ Disconnect the electrical connector.

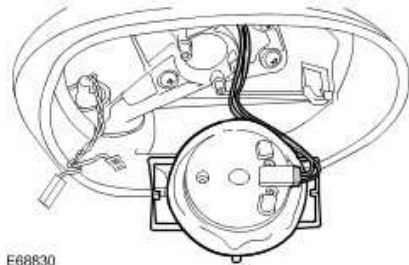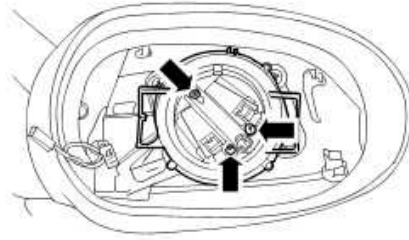

E68830

Installation

- 1 . Install the exterior mirror motor.
 - ▶ Connect the electrical connector.
 - ▶ Install and tighten the Torx screws.

- 2 . Install the exterior mirror glass.
 - ▶ Connect the electrical connectors.
 - ▶ Align the glass to the motor.
 - ▶ Apply an even pressure to secure glass to the clips.

- 3 . Check the operation of the exterior mirror.