


Exterior Lighting - License Plate Lamp

Removal and Installation

Removal


Vehicles with convertible top

1. Remove the luggage compartment lid closing handle.

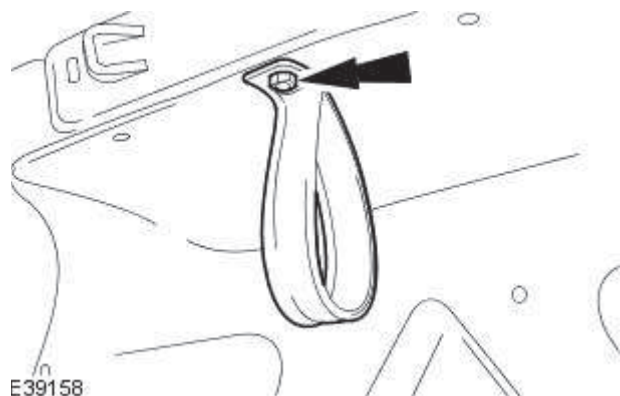


All vehicles

2. Detach the luggage compartment lid trim panel.

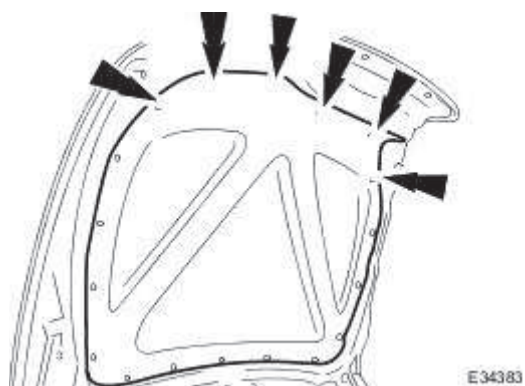


3. Disconnect the luggage compartment lid release switch electrical connector.

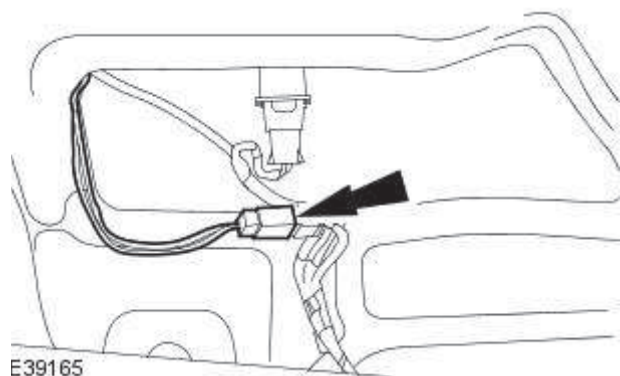


4. Detach the license plate lamp.

1. Disconnect the license plate lamp electrical connectors.
2. Remove the license plate lamp assembly retaining nuts.
3. Detach the license plate lamp.

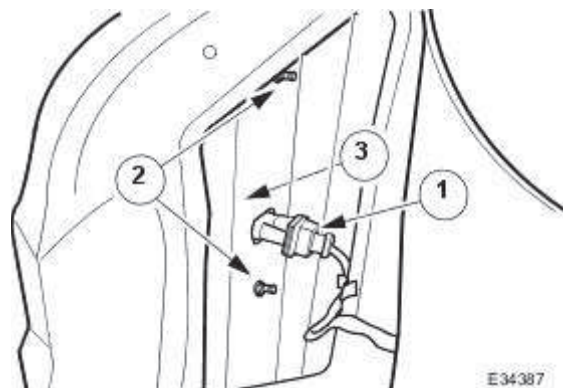

5. Remove the license plate lamp.

- Detach the license plate lamp wiring harness insulator.

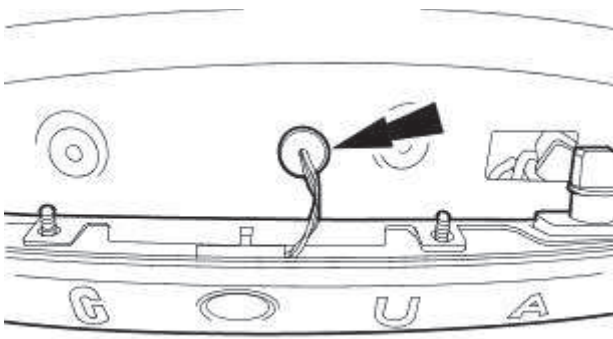

E39164

Installation

1. To install, reverse the removal procedure.