


## Quarter Panel Speaker Vehicles With: Convertible Top 86.50.12


### Removal

1. Remove rear seat cushion. Refer to <<76.70.37>>.
2. On convertible model only, remove rear seat squab. Refer to <<76.70.38>>.
3. On convertible model only, remove rear quarter casing capping. refer to <<76.13.73>>.
4. Remove rear quarter casing. Refer to <<76.13.73>>

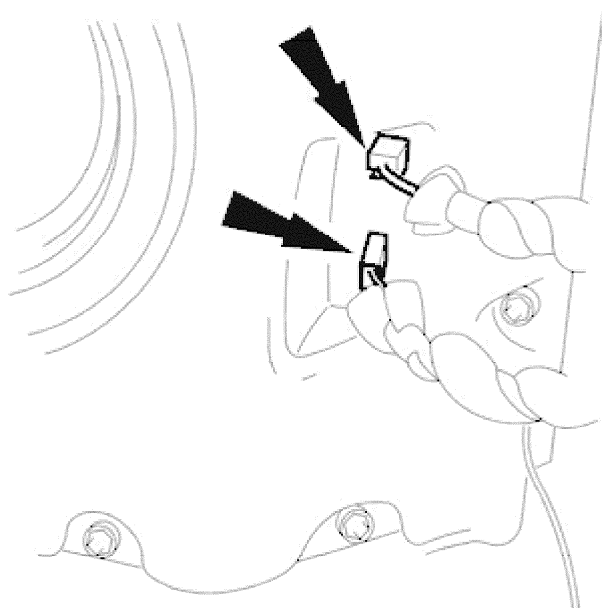

E35978


5. Disconnect harness mutliplugs from speaker assembly.

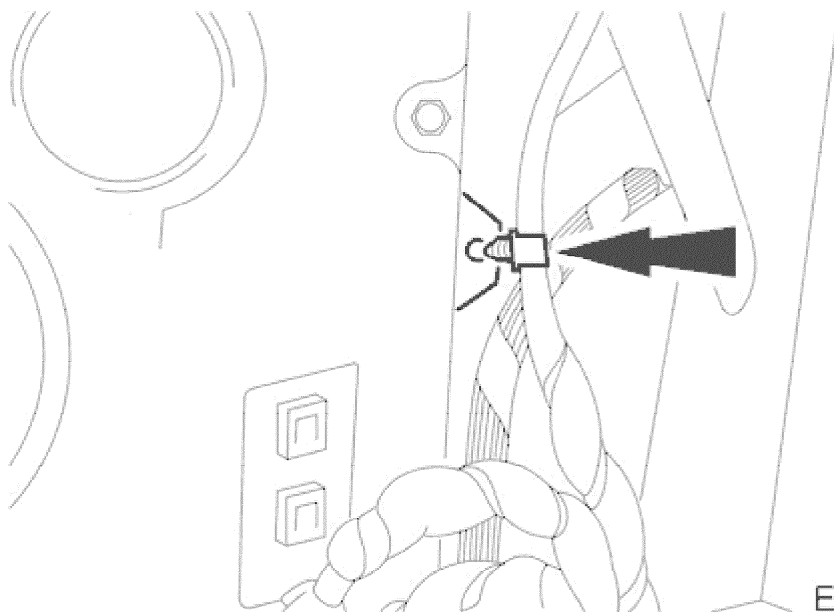

E35979

## 1998 XK RANGE - Speakers - 415-03

6. Release security aerial retaining clip from speaker assembly and position aerial clear.

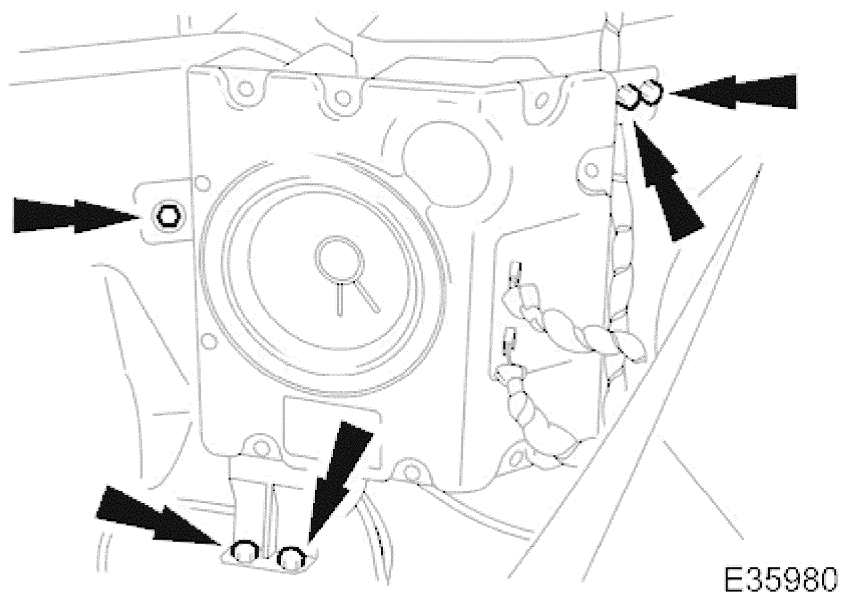

7. Remove nuts and bolts securing speaker assembly to BIW.
8. Remove speaker assembly from vehicle.

### Installation

1. Position speaker assembly in vehicle.
2. Install speaker assembly securing nuts and bolts.
3. Install security aerial clip on speaker assembly.
4. Connect speaker harness multiplugs.
5. Install rear quarter casing. Refer to <<76.13.73>>.
6. Install rear quarter casing capping. Refer to <<76.13.73>>.
7. Install rear seat squab. Refer to <<76.70.38>>.
8. Install rear seat cushion. Refer to <<76.70.37>>.