

Jaguar XK8/XKR 4.2 (MY 2003 on)

Service Item	10k	20k	30k	40k	50k	60k	70k	80k	90k	100k	110k	120k	130k	140k	150k
Check / top up brake fluid level	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check / top up power steering fluid level	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check / top up windshield washer fluid level	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check / top up battery electrolyte fluid level	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check drive belt tension wear indicator(s) Replace if necessary or as specified	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Visually check under hood or under body for any fluid leaks	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Replace air filter element				X				X				X			
Replace fuel filter						X						X			
Replace brake fluid	Every 2 years regardless of mileage														
Replace engine coolant	Every 5 years or 150k miles														
Replace spark plugs – Normally Aspirated										X					
Replace spark plugs - Supercharged															X
Replace accessory drive belt															X
Replace supercharger drive belt										X					
Replace engine oil, filter and drain plug	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Inspect brake pads for wear (check rotor condition on pad change)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Replace windshield wiper rubber inserts	X	X	X		X	X	X		X	X	X		X	X	X
Replace windshield wiper rubber inserts				X				X				X			
Check tire pressures, tread depth and general condition; check for signs of uneven wear; check tyres are correct size and type (check should include spare tire)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Conduct road test; verify parking brake operation	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

Should the vehicle have a high proportion of short journeys or operate in severe conditions, Jaguar Cars recommends that the maintenance procedures scheduled at 10k intervals be performed at intervals not to exceed 6 months