

Engine Management Fuse Box Front Passenger's Side - Within Bulkhead Extension

Fuse No	Ratings (amps)	Circuit
1	30	HO2 sensor heaters.
2	20	Intercooler water pump (Supercharged).
3	25	Starter solenoid.
4	5	Engine control module, transmission control module.
5	10	Injector supply.
6	-	Not used.
7	-	Not used.
8	10	Air conditioning compressor clutch.
9	30	Throttle motor.
10	5	Engine control module.

Fuse No	Ratings (amps)	Circuit
11	10	Adaptive cruise control smartbooster, brake control module & relay.
12	10	Air flow meter, radiator fans control module, canister close valve, air assist control valve.
13	-	Not used.
14	10	HO2 sensor heaters relay (where fitted), EGR valve (where fitted), EVAP valve, ignition coils relay, throttle motor relay, AC compressor clutch relay.
15	30	Windscreen left-hand heater.
16	5	Engine control module cooling fan.
17	30	Windscreen right-hand heater.
18	10	Ignition coils supply.

B on location illustration, page 4-14.

Engine Compartment Fuse Box - Left-hand Side

Fuse No	Ratings (amps)	Circuit
1	10	Transmission control module.
2	5	Generator regulator.
3	5	Security sounder, headlamp levelling, ignition +Ve, centre console switchpack, adaptive cruise control.
4	5	ABS control module.
5	10	Starter relay, engine control module.
6	10	Right-hand dipped beam headlamp.
7	30	Power wash pump.
8	10	Left-hand dipped beam headlamp.
9	10	Security sounder.
10	-	Not used.
11	10	Right-hand horn.

Fuse No	Ratings (amps)	Circuit
12	30	Cooling fans series/parallel.
13	10	Left-hand horn.
14	30	Cooling fans parallel.
15	10	Air conditioning coolant pump.
16	30	ABS control valves.
17	15	Front fog lamps.
18	30	ABS pump motor.
19	10	Right-hand main beam headlamp.
20	-	Not used.
21	10	Left-hand main beam headlamp.
22	5	Adaptive cruise control module.

Luggage Compartment Fuse Box - Electrical Carrier

Fuse No	Ratings (amps)	Circuit
1	5	<b>Coupe:</b> Reversing lamps. <b>Convertible:</b> Reversing lamps, rear quarter windows raise/lower relays.
2	20	Adaptive damping control module.
3	5	Fuse box ignition +Ve, bulb monitoring control module, S/C fuel pump relay, reversing aid.
4	5	Adaptive damping control module.
5	5	Diagnostic connector (ignition).
6	5	Right and left-hand stop lamps via bulb monitoring control module.
7	20	Fuel pump.
8	5	High mounted stop lamp.
9	10	Antenna motor.
10	10	Security and locking control module.
11	10	Accessory sockets.
12	- 20	<b>Coupe:</b> Not used. <b>Convertible:</b> Right-hand rear quarter window lift motor.

Fuse No	Ratings (amps)	Circuit
13	-	Not used.
14	- 40	<b>Coupe:</b> Not used. <b>Convertible:</b> Raise and lower pump for convertible top.
15	10	Rear fog lamps.
16	5	Navigation.
17	25	Heated rear screen.
18	30	Power amplifier.
19	5	Right-hand tail, left-hand and right-hand number plate lights.
20	- 20	<b>Coupe:</b> Not used. <b>Convertible:</b> Left-hand rear quarter window lift motor.
21	5	Left-hand tail, left-hand and right-hand stoneworker lights.
22	20	Supercharger fuel pump.

Fascia Fuse Box – Driver’s Side

Fuse No	Ratings (amps)	Circuit
1	20	Driver’s seat control module.
2	10	Door mirror heaters.
3	30	Windscreen wiper motors and relays.
4	–	Not used.
5	15	Body processor module logic supply.
6	5	Centre console switches, key transponder module, convertible top header console.
7	15	Gearshift interlock solenoid, ignition keylock solenoid, interior lighting, windscreen washer pump.
8	10	Steering column adjustment, driver’s seat switchpack, driver’s headrest.
9	–	Not used.
10	5	Airbag.
11	20	Air conditioning drivers blower motor.

Fuse No	Ratings (amps)	Circuit
12	10	Door mirror heaters relay, Air conditioning: compressor lock, control module ignition supply, blower motor relays, power steering control module.
13	5	Diagnostic connector (battery).
14	10	Cruise control ON/OFF switch, main instrument cluster.
15	25	Driver’s door control module, transit relay.
16	5	Electrochromic interior mirror (where fitted), windscreen heater relay, gear selector, transmission mode switch, J-gate linear switch, rain sensing system.
17	10	Accessory sockets.
18	5	Main instrument cluster (includes clock).

Fascia Fuse Box – Front Passenger’s Side

Fuse No	Ratings (amps)	Circuit
1	20	Passenger seat control module.
2	10	Door locking actuators.
3	–	Not used.
4	5	Door switchpacks, door locking.
5	5	Telephone transceiver and RT connector.
6	10	Air conditioning control module.
7	20	Steering column tilt and reach motors.
8	10	Passenger seat switchpack, passenger seat belt buckle switch, passenger headrest.
9	10	Radio/cassette head unit.
10	5	Telephone handset and transceiver.

Fuse No	Ratings (amps)	Circuit
11	20	Air conditioning passenger’s blower relay.
12	5	Radio/cassette unit.
13	–	Not used.
14	20	Cigar lighter.
15	25	Passenger door control module, transit relay connector.
16	5	Navigation.
17	15	Exterior lights, high power sockets.
18	10	Dimmer control module.