



Front Seat Height Adjustment Motor 86.75.29

Removal

- 1. Remove battery cover and disconnect ground cable from battery terminal. Refer to <<86.15.19>>.
- 2. Remove driver seat for access. Refer to 76.70.01.90.

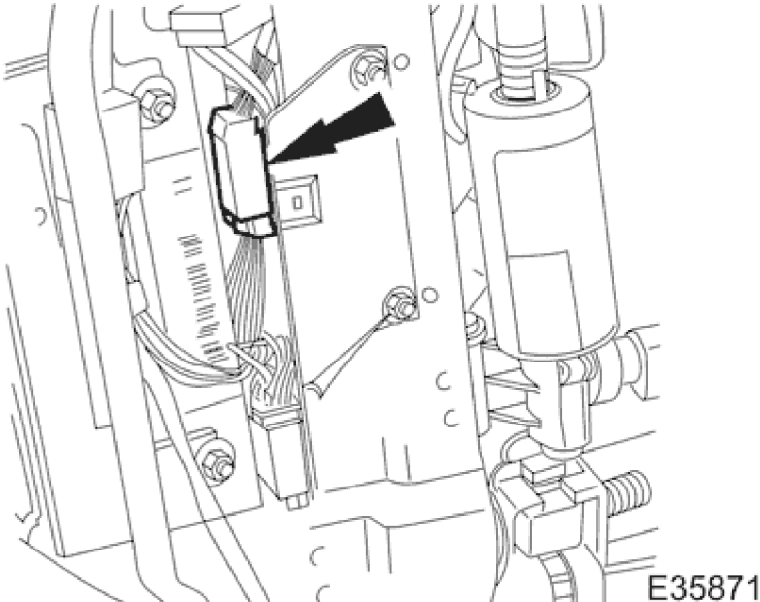


- 3. Release seat cushion riser harness multiplug from mounting bracket clip and disconnect multiplug.

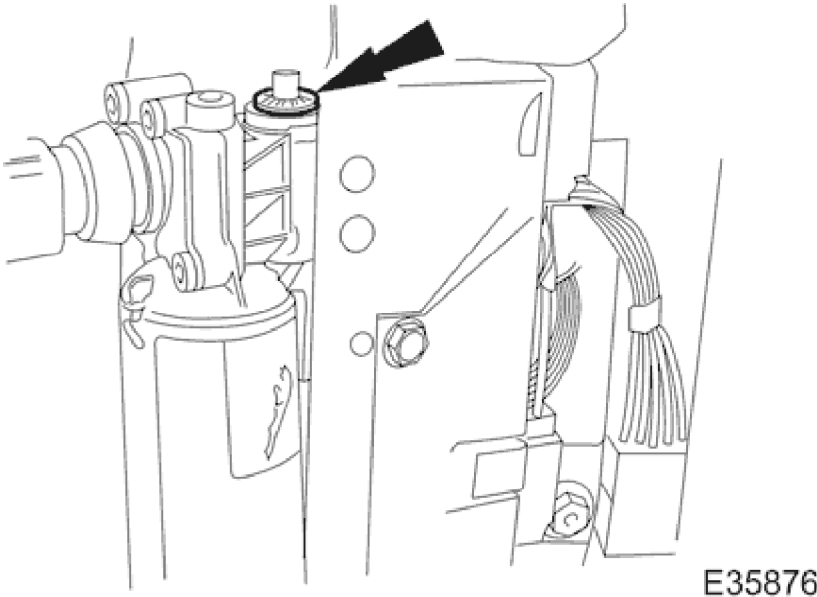


- 4. Remove and discard star securing clip from seat riser motor clevis pin.

1997 XK RANGE - Seating - 501-10

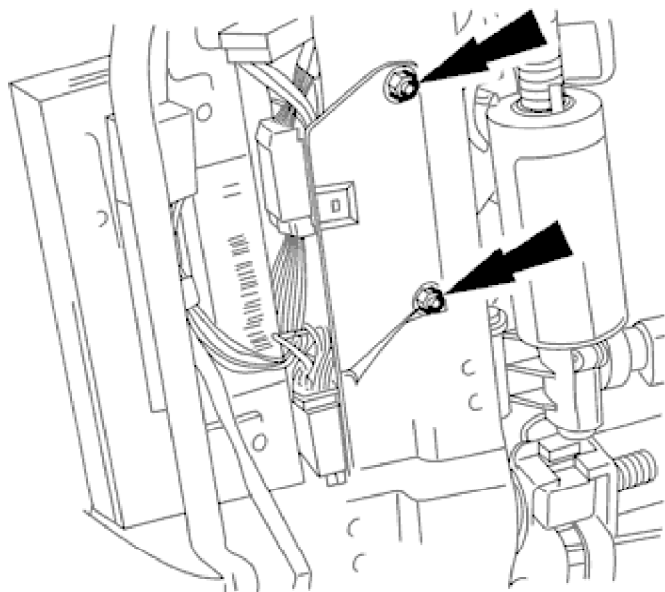

E35873


5. Slacken but do not remove the two driver seat fore and aft adjustment motor securing bolts.

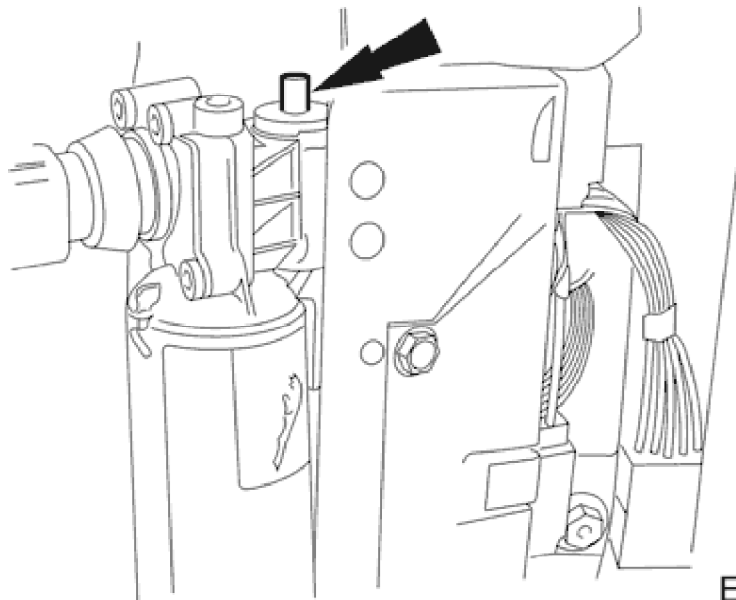


E35877

6. Withdraw seat riser motor clevis pin from upper mounting bracket.

1997 XK RANGE - Seating - 501-10

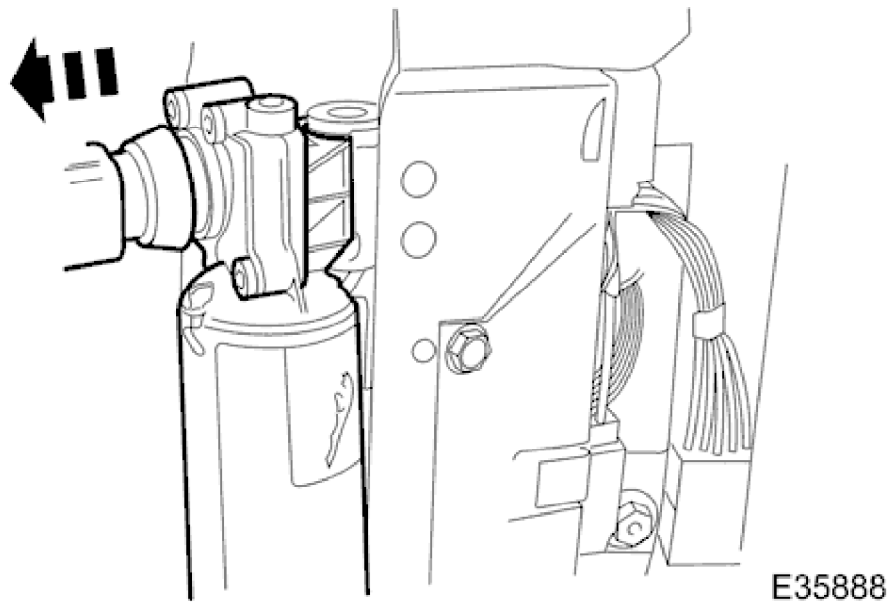


7. Press seat riser motor out of upper mounting bracket.

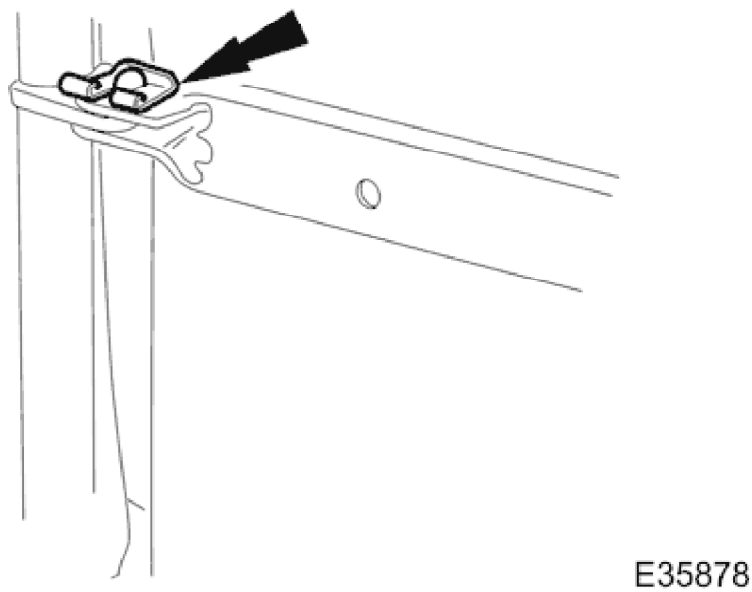

8. Remove spring clip from runner to pivot bar clevis pin and withdraw pin.

1997 XK RANGE - Seating - 501-10

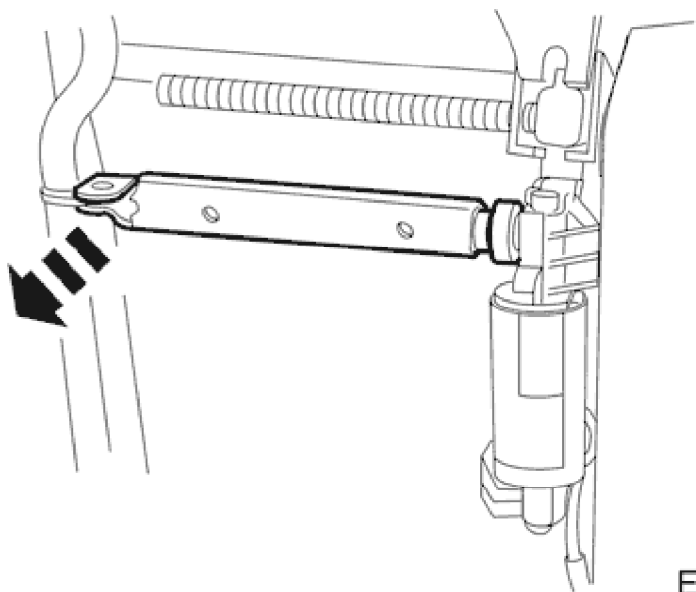


E35879

9. Remove motor/runner assembly from pivot bar.

Installation


1. Position motor on seat upper mounting bracket .

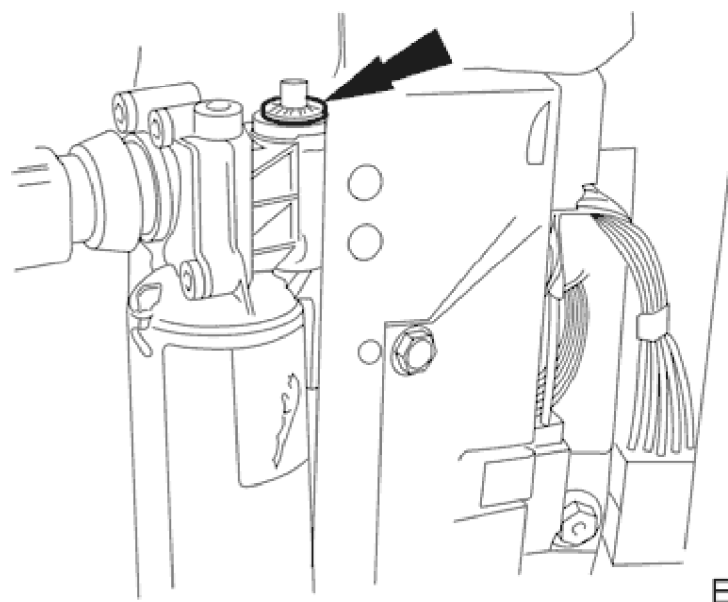

E35876


2. Fit and fully seat clevis pin and fit new star securing clip.

1997 XK RANGE - Seating - 501-10

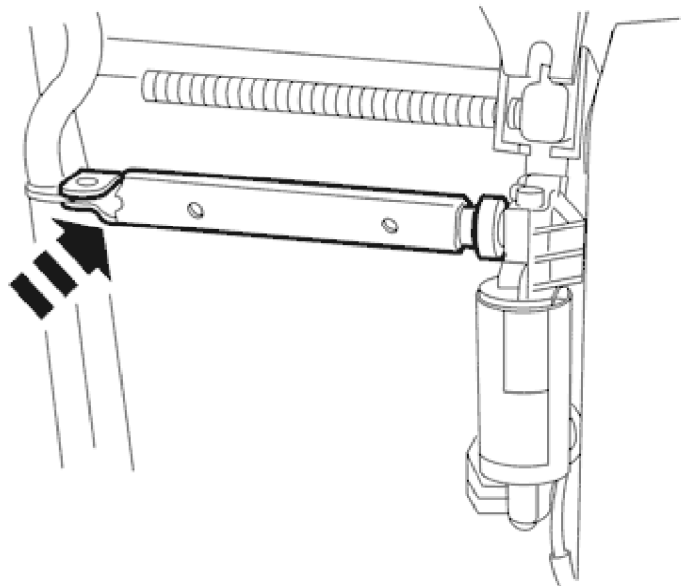

E35894


3. Position motor runner on pivot bar and check position of clevis pin aperture.

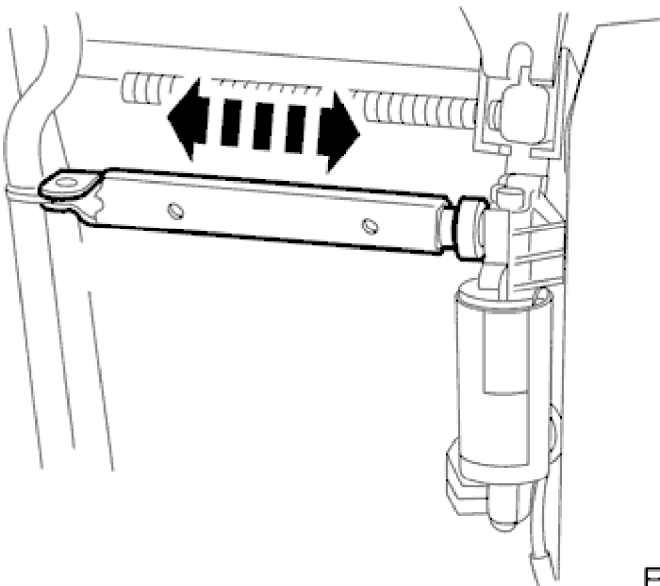

E35880


4. Remove motor runner from pivot bar, adjust runner to required length and re-fit to pivot bar.

1997 XK RANGE - Seating - 501-10

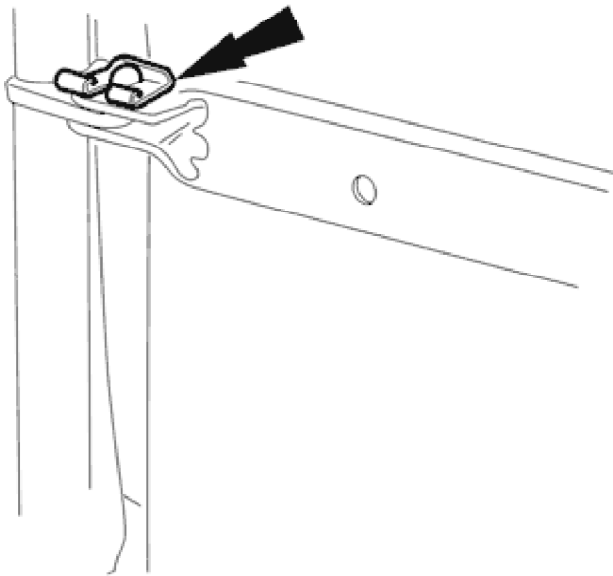

E35878


5. Fit motor to pivot bar clevis pin and fit and fully seat securing clip.

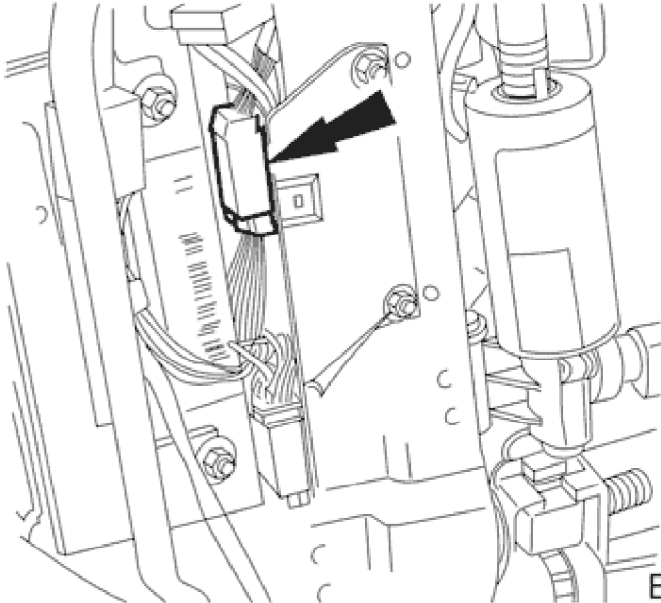

E35871

6. Connect seat riser motor harness multiplug and fit multiplug onto mounting bracket securing clip.

1997 XK RANGE - Seating - 501-10

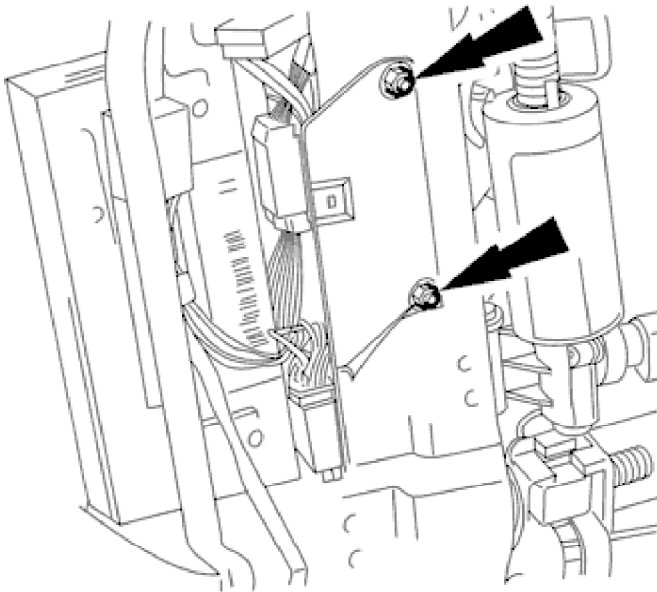

E35873

7. Fully tighten seat fore and aft adjustment motor securing bolts.
8. Fit seat to vehicle. Refer to 76.70.01.90.
9. Connect ground cable to battery terminal and fit battery cover. Refer to <<86.15.15>>.