


Low Beam Headlamp Bulb Vehicles With: High Intensity Discharge Headlamps 86.40.08

Removal  **WARNING:**
MAKE SURE THE HEADLAMPS ARE IN THE OFF POSITION, VOLTAGES OF UP TO 25 KV ARE POSSIBLE WITH HID LIGHTING.

 **WARNING:**
ALWAYS WEAR SAFETY GLASSES AND PROTECTIVE GLOVES WHEN REMOVING AND INSTALLING THE LOW BEAM HEADLAMP BULB. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.

 **CAUTION:**
Do not touch the glass surface of the low beam headlamp bulb. Failure to follow these instructions may result in damage to the vehicle.


1. Remove the bulb access panel. <<501-12>>

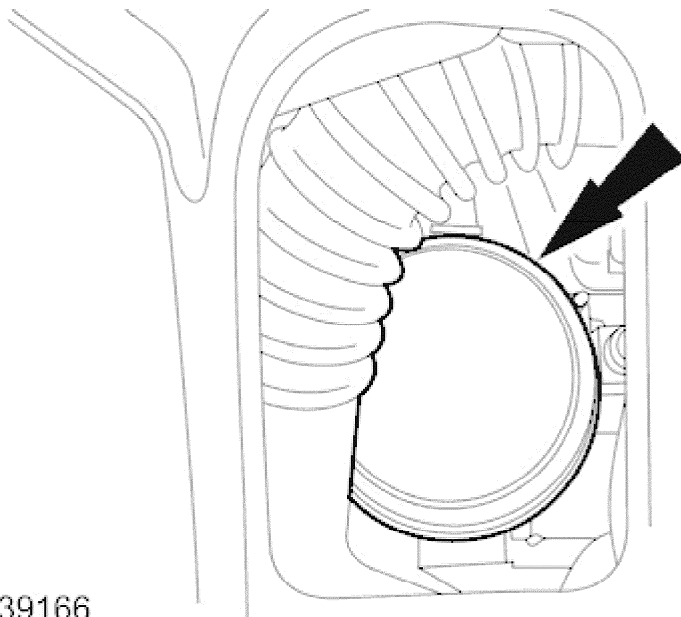

E39166


2. Remove the low beam headlamp bulb cover.

2004 XK RANGE - Exterior Lighting - 417-01

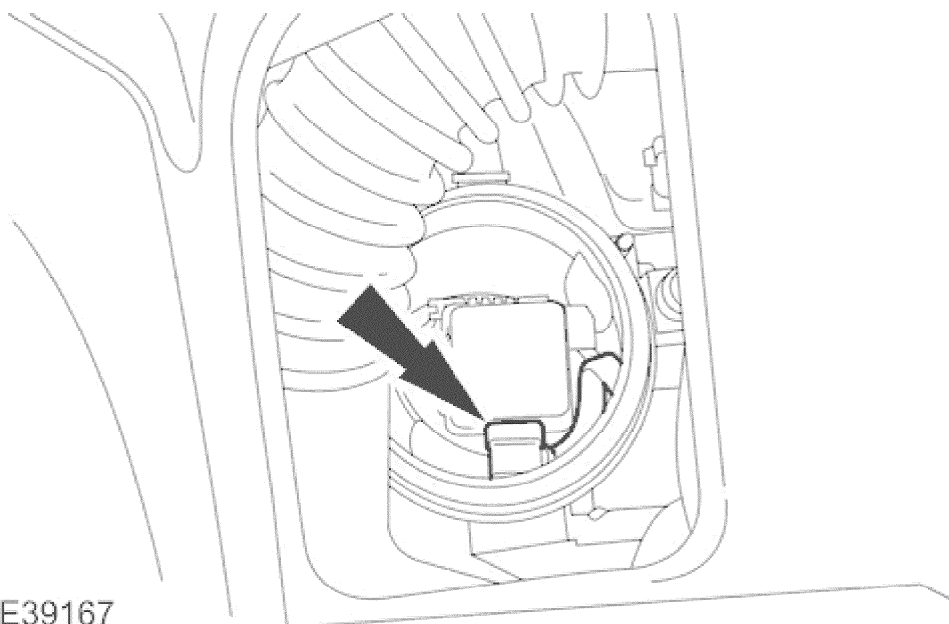

E39167

3. Disconnect the low beam headlamp bulb electrical connector.

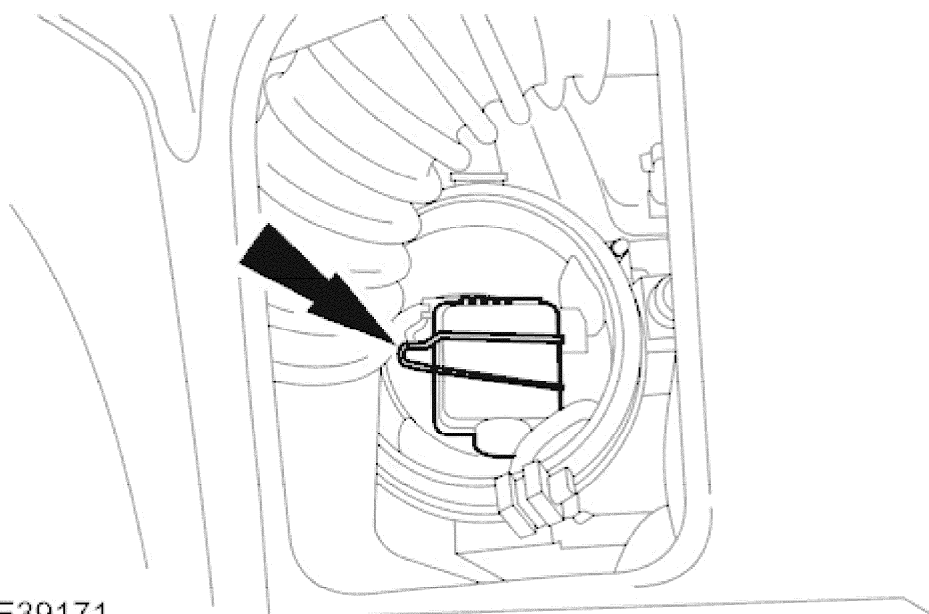

E39171

4. Remove the low beam headlamp bulb.
• Release the retaining clip.

Installation

1. To install, reverse the removal procedure.