

Self-diagnosis

(DAIMLER) JAGUAR

code ^	Flash code	Fault location	Probable cause	code	Flash code	Fault location	Probable cause
B2291	17	Passenger movement sensor - CAN data bus malfunction	Wiring	B2477	54	SRS control module - programming error/SRS control module incorrectly programmed	SRS control module
82292	33	Pyrotechnic pretensioner(s), driver's side - circuit malfunction	Wiring, pyrotechnic pretensioner	B2691	51	Front seat belt buckle switch, driver's side	Wiring short circuit to positive/open circuit, seat belt buckle switch
B2292	34	Pyrotechnic pretensioner(s), passenger's side - circuit malfunction	Wiring, pyrotechnic pretensioner	B2692	52	Front seat belt buckle switch, passenger's side	Wiring short circuit to positive/open circuit, seat belt buckle switch
B2292	35	Pyrotechnic pretensioner(s), rear, driver's side - circuit malfunction	Wiring, pyrotechnic pretensioner	B2909	16	Front passenger's airbag seat pressure sensor/pyrotechnic pretensioner(s) - CAN data bus malfunction	Wiring, seat pressure sensor, seat pressure sensor control module, pyrotechnic pretensioner(s), SRS control module
B2292	37	Pyrotechnic pretensioner(s), rear, passenger's side - circuit malfunction	Wiring, pyrotechnic pretensioner	C1414	15	Incorrect SRS control module filled - S-Type	SRS control module
B2293	19	Driver's airbag - circuit malfunction	Wiring, driver's airbag/passenger's airbag, SRS control module	C1947	49	Seat position sensor, driver's side	Wiring, seat position sensor
B2293	21	Passenger's airbag - circuit malfunction	Wiring, driver's airbag/passenger's airbag, SRS control module	C1948	49	Seat position sensor, driver's side	Wiring, seat position sensor
B2294	24	Inflatable curtain, driver's side - circuit malfunction	Wiring, inflatable curtain	C1981	49	Seat position sensor, driver's side	Wiring, seat position sensor
B2294	25	Inflatable curtain, passenger's side - circuit malfunction	Wiring, inflatable curtain	U2017	-	Side crash sensor, driver's side - communication error	Wiring, side crash sensor
B2294	36	Pyrotechnic pretensioner(s), centre rear - circuit malfunction	Wiring, pyrotechnic pretensioner	U2018	-	Side crash sensor, passenger's side - communication error	Wiring, side crash sensor
B2295	22	Side airbag, driver's side - circuit malfunction	Wiring, side airbags	SRS warning lamp OFF	-	SRS warning lamp	Wiring, ignition auxiliary circuit, instrument panel, SRS control module
B2295	23	Side airbag, passenger's side - circuit malfunction	Wiring, side airbags	SRS warning lamp ON	-	SRS warning lamp ON - with ignition ON	Wiring, instrument panel, SRS control module
82296	42	Front crash sensor - circuit malfunction	Wiring, crash sensor, SRS control module	Continuous flashes	-	SRS warning lamp - flashes continuously	Other trouble codes stored, front crash sensors disconnected, main wiring harness disconnected
B2296	43	Side crash sensor, front, driver's side - circuit malfunction	Wiring, crash sensor, SRS control module				
B2296	44	Side crash sensor, front passenger's side - circuit malfunction	Wiring, crash sensor, SRS control module				
B2296	45	Side crash sensor, rear, driver's side - S-Type - circuit malfunction	Wiring, crash sensor, SRS control module				
B2296	46	Side crash sensor, rear, passenger's side - S-Type - circuit malfunction	Wiring, crash sensor, SRS control module				
B2434	51	Front seat belt buckle switch, driver's side	Wiring short circuit to earth, seat belt buckle switch				
B2435	51	Front seat belt buckle switch, driver's side - high resistance	Wiring, seat belt buckle switch				
B2438	52	Front seat belt buckle switch, passenger's side	Wiring short circuit to earth, seat belt buckle switch				
B2439	52	Front seat belt buckle switch, passenger's side - high resistance	Wiring, seat belt buckle switch				
B2444	^	Side crash sensor, driver's side - malfunction	Wiring, side crash sensor				
B2445		Side crash sensor, passenger's side - malfunction	Wiring, side crash sensor				

←