

## **Operating Instructions**

**To drop the top, with the doors locked, simply press the headlight (lower left) button on the remote key fob once. Then immediately press the door UNLOCK button on the key fob.**

**To raise the top, with the doors unlocked, simply press the headlight (lower left) button on the remote key fob once. Then immediately press the door LOCK button on the key fob.**

### **Notes:**

1. The remote will only drop the top if the doors are locked. If the doors are unlocked, lock them with the remote first before dropping the top
2. The remote will only raise the top if the doors are unlocked. If the doors are locked, unlock them with the remote first before raising the top.
3. The remote will only operate the top if the ignition is off.
4. To reverse or stop the top drop process, depress the door lock button.
5. To reverse or stop the top raise process, depress the door unlock button.
6. For 4. and 5. above reversing occurs if the headlights are on, stopping occurs if the headlights are off.
7. To restart the cycle after it was interrupted, if the headlights are still on, depress the unlock button to drop or the lock button to raise the top.
8. To restart the cycle after it was interrupted if the headlights are off, depress the headlight button on the remote key fob once. Then immediately depress the unlock button to drop or the lock button to raise the top.
9. On some cars the headlight button (lower left button) may show a picture of a headlight. On other cars it may show a picture of a horn.
10. To use your headlights remotely without operating the top, lock or unlock the car first as desired, then press the remote headlight button.
11. Do not turn on the ignition until the top cycle is complete...this may generate a top not latched warning.
12. Do not use the remote fob to operate the top while inside of the vehicle...this may inadvertently set off the theft alarm.