



ENGINE COMPARTMENT FUSE BOX RELAYS

- Engine compartment fuse box
- R7 - Ignition positive relay
- R6 - Horn relay
- R5 - Main beam relay (non-HID); Dip beam relay (HID)
- R4 - Powerwash relay
- R3 - Dip beam relay (non-HID); Main beam relay (HID)
- R2 - Front fog relay
- R1 - Heater pump relay

CONTROL MODULE ENCLOSURE RELAYS (RHD)

- Bank 1 O2S heater relay
- Bank 2 O2S heater relay
- Engine management fuse box
- * Ignition coil relay
- Throttle motor relay
- EMS control relay

* Early production vehicles only.

LH ENCLOSURE RELAYS

- A/C compressor clutch relay
- Wiper RUN/STOP relay
- Wiper FAST/SLOW relay

LH FASCIA RELAYS

- Ignition positive relay (LHD)
- Auxiliary positive relay (RHD)
- Door mirror heater relay
- Driver side fuse box (LHD)
- Passenger side fuse box (RHD)

